



# Owner's Manual

## Original Instructions

Commercial Air Conditioners

Multi Variable Air Conditioners  
Wall Mounted Type Indoor Unit


Models:

GMV-ND15G/B6B-T	GMV-ND22G/C2B-T	GMV-ND15G/B4B-T
GMV-ND18G/B6B-T	GMV-ND28G/C2B-T	GMV-ND18G/B4B-T
GMV-ND22G/B6B-T	GMV-ND36G/C2B-T	GMV-ND22G/B4B-T
GMV-ND28G/B6B-T	GMV-ND45G/C2B-T	GMV-ND28G/B4B-T
GMV-ND36G/B6B-T	GMV-ND50G/C2B-T	GMV-ND36G/B4B-T
GMV-ND45G/B6B-T	GMV-ND56G/C2B-T	GMV-ND45G/B4B-T
GMV-ND50G/B6B-T	GMV-ND63G/C2B-T	GMV-ND50G/B4B-T
GMV-ND56G/B6B-T	GMV-ND71G/C2B-T	GMV-ND56G/B4B-T
GMV-ND63G/B6B-T	GMV-ND22G/D2B-T	GMV-ND63G/B4B-T
GMV-ND71G/B6B-T	GMV-ND28G/D2B-T	GMV-ND71G/B4B-T
GMV-ND22G/C4B-T	GMV-ND36G/D2B-T	GMV-ND80G/B4B-T
GMV-ND28G/C4B-T	GMV-ND45G/D2B-T	GMV-ND90G/B4B-T
GMV-ND36G/C4B-T	GMV-ND50G/D2B-T	GMV-ND100G/B4B-T
GMV-ND45G/C4B-T	GMV-ND56G/D2B-T	
GMV-ND50G/C4B-T	GMV-ND63G/D2B-T	
GMV-ND56G/C4B-T	GMV-ND71G/D2B-T	
GMV-ND63G/C4B-T		
GMV-ND71G/C4B-T		

Thank you for choosing air conditioners. Please read this Owner's Manual carefully before operation and retain it for future reference.

If you have lost the Owner's Manual, please contact the local agent or visit [www.gree.com](http://www.gree.com) or send an email to [global@cn.gree.com](mailto:global@cn.gree.com) for the electronic version.

GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI

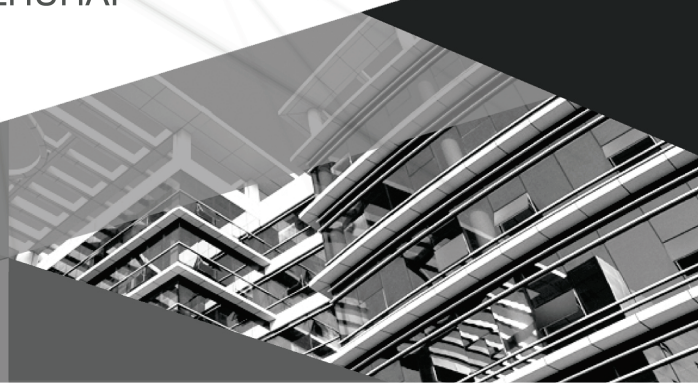

## To Users

Thank you for selecting Gree product. Please read this instruction manual carefully before installing and using the product, so as to master and correctly use the product. In order to guide you to correctly install and use our product and achieve expected operating effect, we hereby instruct as below:

- (1) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- (2) In order to ensure reliability of product, the product may consume some power under stand-by status for maintaining normal communication of system and preheating refrigerant and lubricant. If the product is not to be used for long, cut off the power supply; please energize and preheat the unit in advance before reusing it.
- (3) Please properly select the model according to actual using environment; otherwise it may impact the using convenience.
- (4) This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function.
- (5) If the product needs to be installed, moved or maintained, please contact our designated dealer or local service center for professional support. Users should not disassemble or maintain the unit by themselves, otherwise it may cause relative damage, and our company will bear no responsibilities.
- (6) All the illustrations and information in the instruction manual are only for reference. In order to make the product better, we will continuously conduct improvement and innovation. If there is adjustment in the product, please subject to actual product.

## Exception Clauses

Manufacturer will bear no responsibilities when personal injury or property loss is caused by the following reasons:

- (1) Damage the product due to improper use or misuse of the product;
- (2) Alter, change, maintain or use the product with other equipment without abiding by the instruction manual of manufacturer;
- (3) After verification, the defect of product is directly caused by corrosive gas;
- (4) After verification, defects are due to improper operation during transportation of product;
- (5) Operate, repair, maintain the unit without abiding by instruction manual or related regulations;
- (6) After verification, the problem or dispute is caused by the quality specification or performance of parts and components that produced by other manufacturers;
- (7) The damage is caused by natural calamities, bad using environment or force majeure.

# Contents

<b>1 Safety Notices (Please be Sure to Abide)</b> .....	<b>1</b>
<b>2 Product Introduction</b> .....	<b>4</b>
2.1 Outline of the Unit and Main Parts .....	4
2.2 Rated Operating Condition .....	4
<b>3 Preparations for Installation</b> .....	<b>5</b>
3.1 Location for Installation .....	5
3.2 Schematic Diagram of Installation Space .....	5
3.3 Requirements for Communication Line.....	6
3.4 Wiring Requirements .....	7
<b>4 Installation Instructions</b> .....	<b>8</b>
4.1 Installation of Indoor Unit .....	8
4.2 The Installation of the Rear Panel.....	9
4.3 Preparation of the Piping Hole .....	9
4.4 Installation of the Drainage Pipes .....	9
4.5 Installation the Connection Pipes.....	10
<b>5 Wiring Work</b> .....	<b>11</b>
5.1 Connect Cables and Terminals of Wiring Board .....	11
5.2 Power Cord Connection.....	12
5.3 Connection of Communication Line of IDU and ODU.....	12
5.4 Connection of Communication Line of Wired Controller .....	13
5.5 Illuminate for Connection of Wired Controller and Indoor Units Network.....	13
5.6 Installation of the Indoor Unit .....	14
5.7 Connection of External Water Pump.....	14
<b>6 The Best Usage Method</b> .....	<b>16</b>
<b>7 Maintenance Method</b> .....	<b>18</b>
7.1 Cleaning Panel.....	18
7.2 Cleaning the Air Filters.....	18
7.3 Check Before the Usage Season.....	19
7.4 Check After the Usage Season.....	19
<b>8 Table of Error Codes for Indoor Unit</b> .....	<b>19</b>
<b>9 Malfunction Analyzing</b> .....	<b>20</b>
9.1 Service Center .....	20
9.2 After-Sales Service .....	21
<b>10 Adjusting Method of The Air Direction</b> .....	<b>21</b>
10.1 Adjusting Air Direction Up and Down .....	21
10.2 Adjusting Air Direction Left and Right.....	21

## 1 Safety Notices (Please be Sure to Abide)



**WARNING!** If not abide strictly, it may cause severe damage to the unit or the people.



**NOTE!** If not abide strictly, it may cause slight or medium damage to the unit or the people.



This sign indicates that the operation must be prohibited. Improper operation may cause severe damage or death to people.



This sign indicates that the items must be observed. Improper operation may cause damage to people or property.



**WARNING!**

This Multi VRF System shall only be connected to an appliance suitable for the same refrigerant.

All units in Manual Cover is a partial unit, complying with partial unit of IEC 60335-2-40:2018, and must only be connected to other units that have been confirmed as complying to corresponding partial unit requirements of this international standard.


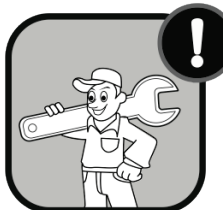

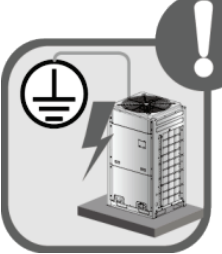



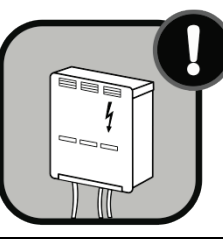




The electrical interface shall comply with electrical security requirement, voltage shall be 220-240V(50Hz) or 208-230V(60Hz), current shall be referred to the table of “Wiring Requirements” in Section 3.4, and safety class of construction is I.









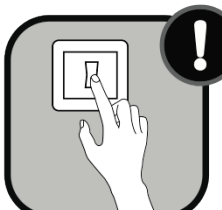





**NOTE!**



- (1) For evaporating units and condensing units, the instructions or markings shall include wording to assure that the maximum operating pressure is considered when connecting to any condenser unit or evaporator unit.
- (2) For evaporating units, condensing units and condenser units, the instructions or markings shall include refrigerant charging instructions.
- (3) A warning to assure that partial units shall only be connected to an appliance suitable for the same refrigerant.
- (4) This unit is a partial unit air conditioner, complying with partial unit requirements of this International Standard, and must only be connected to other units that have been confirmed as complying to corresponding partial unit requirements of this International Standard.
- (5) The electrical interfaces shall be specified with purpose, voltage, current, and safety class of construction.

## Multi Variable Air Conditioners Wall Mounted Type Indoor Unit

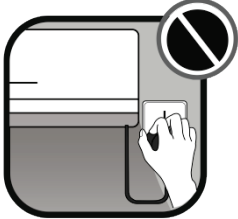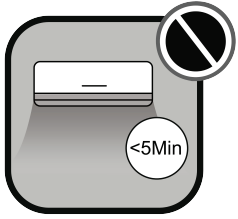	<p>Follow this manual to complete the installation work. Please read this manual carefully before turning on or repairing the unit.</p>		<p>Installation should be conducted by the dealer or qualified personnel. Please do not attempt to install the air conditioner by yourself. Improper installation may lead to water leakage, electric shock or fire hazard, etc.</p>
	<p>Before installation, please check whether the power supply is complied with that specified on the nameplate and check the safety of the power supply.</p>		<p>The air conditioner must be grounded reliably for avoiding electric shock. Please do not connect the earthing wire to gas pipe, water pipe, lightning rod or telephone line.</p>
	<p>Be sure to use special accessories and parts for installation to prevent water leakage, electric shock and fire hazard, etc.</p>		<p>If refrigerant leakage happens, please ventilate the room immediately.</p>
	<p>Diameter of power cord should be large enough. The damaged power cord and connection wire must be replaced with special cables.</p>		<p>When the power cord is connected, please fix the electric box cover properly to avoid safety accidents.</p>
	<p>Never fail to comply with the nitrogen-charging welding process. Do charge nitrogen when welding the pipes.</p>		<p>Never short circuit or cancel the pressure switch to prevent unit damage.</p>
	<p>As for the unit controlled by the wired controller, connect the wired controller well firstly and then energize the unit; otherwise, the unit can't operate normally.</p>		<p>When installation is finished, please check whether the drainage pipes, pipelines and electric wires are connected correctly to avoid water leakage, refrigerant leakage, electric shock or fire, etc.</p>
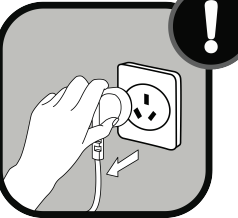
## Multi Variable Air Conditioners Wall Mounted Type Indoor Unit

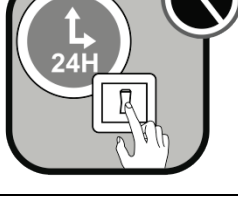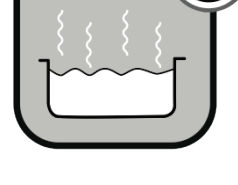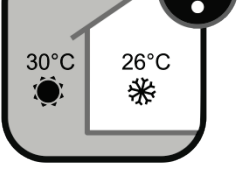	<p>Do not insert fingers or objects into air outlet or air return grille.</p>		<p>Open the door and window frequently to keep good ventilation for avoiding oxygen deficit when gas heater or oil heater is used in the room.</p>
	<p>Never plug in or unplug the power plug directly to turn on or turn off the air conditioner.</p>		<p>Once the air conditioner is turned on, it can be turned off only after it has operated for 5min at least; otherwise, it will affect the oil return of compressor.</p>
	<p>Do not allow children to operate this air conditioner.</p>		<p>Do not operate this air conditioner with wet hands.</p>
	<p>The air conditioner can be cleaned only when it has been turned off and the power has been cut off; otherwise, it may cause electric shock or injury.</p>		<p>Never spray or flush water towards the air conditioner; otherwise, malfunction or electric shock may happen.</p>
	<p>Do not expose the air conditioner to the moist or corrosive environment.</p>		<p>Put through the power 8 hours in advance before operation. Do not cut off the power when the air conditioner stops operation for only about one night (protect the compressor).</p>
	<p>Volatile liquid, such as diluent or gasoline, will damage the appearance of air conditioner. Only soft dry cloth and wet cloth dipped with neutral detergent can be used to clean the outer case of air conditioner.</p>		<p>Under cooling mode, please don't set the room temperature too low; keep the temperature difference between indoor and outdoor within 5°C (41°F).</p>

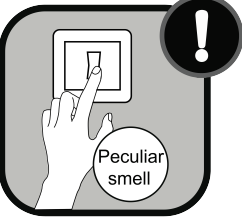	<p>If there are any abnormal circumstances (such as burning smell, etc.), please turn off the unit and cut off the main power supply immediately, and then contact Gree appointed service center. If those abnormal circumstances still exit, the unit may be damaged and it may lead to electric shock or fire hazard.</p>		<p>Do not repair the unit by yourself. Wrong maintenance may cause electric shock or fire hazard. Please contact Gree appointed service center for help.</p>
---	---	--	--

Any personal injury or property loss caused by improper installation, improper debug, unnecessary repair or not following the instructions of this manual should not be the responsibility of Gree Electric Appliances, Inc. of Zhuhai.

## 2 Product Introduction

### 2.1 Outline of the Unit and Main Parts

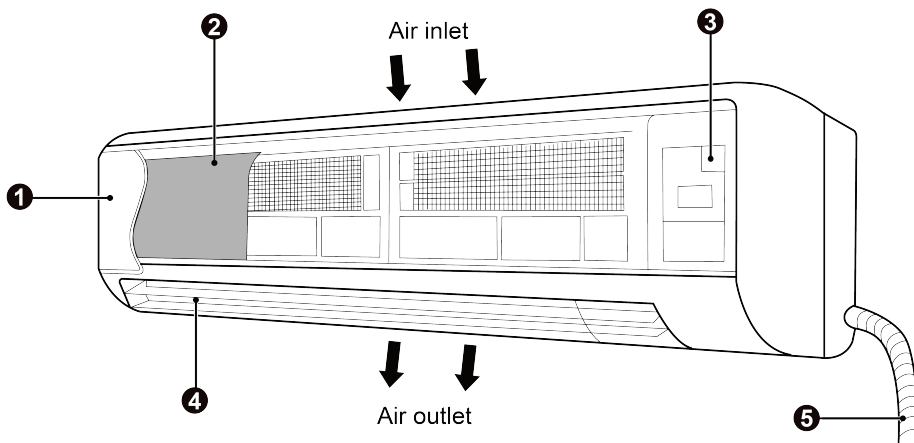


Fig 2.1

#### NOTE!

The appearances will be different by the different models of air conditioners.

No.	Part Name	No.	Part Name
①	Surface panel	④	Guide louver
②	Filter	⑤	Drain pipe
③	Wiring cover	—	—

### 2.2 Rated Operating Condition

Item	Indoor Condition		Outdoor Condition	
	DBTemperature°C	WBTemperature°C	DBTemperature°C	WBTemperature°C
Rated Cooling	27	19	35	24
Rated Heating	20	15	7	6



### 3 Preparations for Installation

#### 3.1 Location for Installation

- (1) The appliance shall not be installed in the laundry.
- (2) The indoor unit should be installed at 2.5m or higher above the floor.
- (3) The top holder must be strong enough to support unit's weight.
- (4) Drain pipe can drain water out easily.
- (5) There is no obstacle at inlet or outlet. Please ensure good air circulation.
- (6) Keep the unit away from heating source, inflammable gas or smoke.

#### 3.2 Schematic Diagram of Installation Space

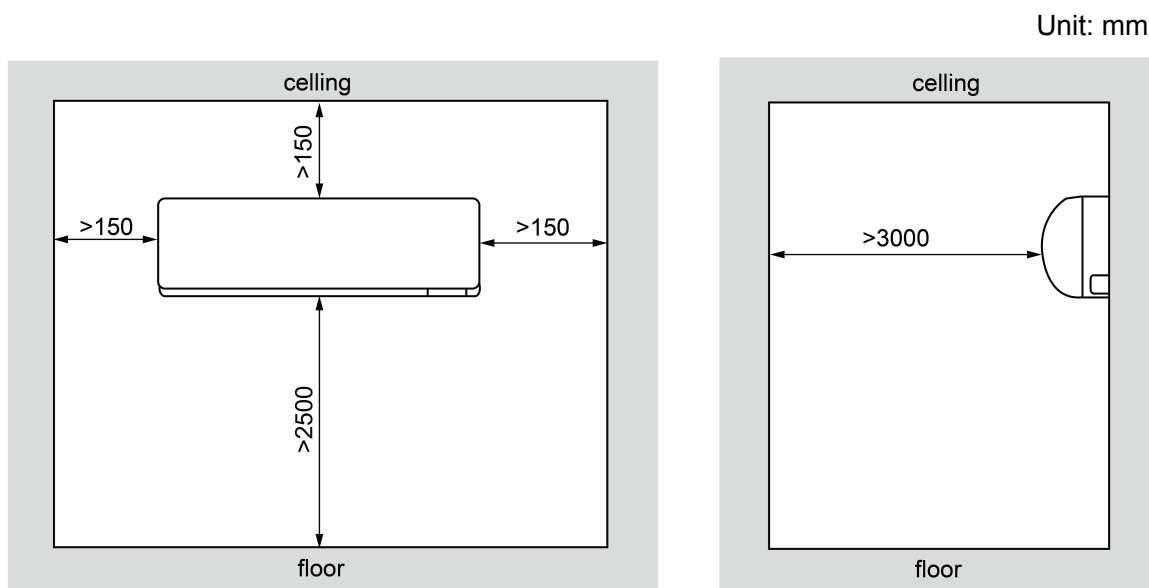


Fig 3.1

#### ! NOTES!

- ① The unit shall be installed by the professional personnel according to this installation instruction to ensure proper use.
- ② Please contact the local Gree appointed service center before installation. Any malfunction caused by the unit that is not installed by the Gree appointed service center would probably not be dealt with on time because of the inconvenience of the business contact.
- ③ It should be guided under the professional personnel when the air conditioner unit is moved to other place.
- ④ Maintenance/service to be done by specialized personnel, mandated by the manufacturer or authorized representative.
- ⑤ This appliance is intended to be used by expert or trained users in shops, in light industry and on farms or for commercial use by lay persons.
- ⑥ This unit is a partial unit air conditioner, complying with partial unit requirements of this International standard and must only be connected to other units that have been confirmed as complying to corresponding partial unit requirements of this International

Standard.

- ⑦ This unit shall only be connected to an appliance suitable for the same refrigerant.

### 3.3 Requirements for Communication Line



If the unit is installed in the place with strong electromagnetic interference, shielded wire must be applied on the communication wire between indoor unit and wired controller. Twisted pair line with shielding function must be applied on the communication wire between indoor unit and indoor unit (outdoor unit).

#### 3.3.1 Select communication line for indoor unit and wired controller

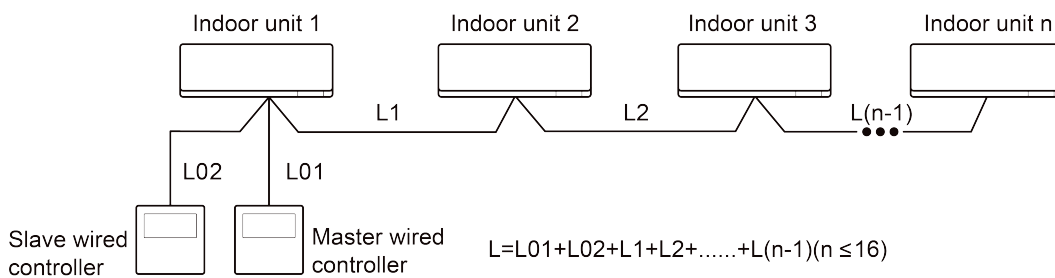


Fig 3.2

Material type	Total length of communication line between indoor unit and wired controller L (m/feet)	Wire size (mm <sup>2</sup> /AWG)	Material Standard	Remarks
Light/Ordinary polyvinyl chloride sheathed cord. (60227 IEC 52 /60227 IEC 53)	$L \leq 250m$ ( $L \leq 820-1/5feet$ )	2×0.75~ 2×1.25 (2×AWG18~ 2×AWG16)	IEC 60227-5-2007	1.Total length of communication line can't exceed 250m (820-1/5feet). 2.The cord shall be Circular cord (the cores shall be twisted together). 3.If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire.

#### 3.3.2 Select communication line for indoor unit and indoor unit (outdoor unit)

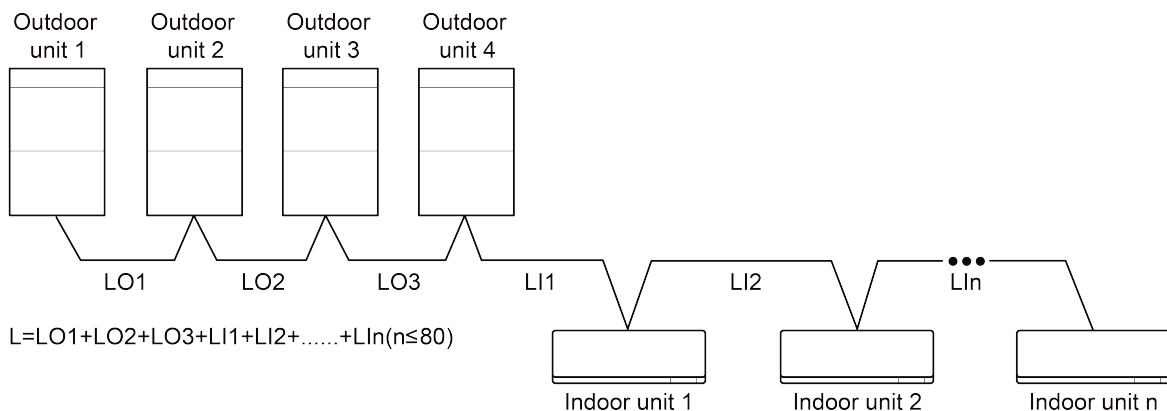


Fig 3.3

## Multi Variable Air Conditioners Wall Mounted Type Indoor Unit

Material Type	Total Length L (m/feet) of Communication Cable between Indoor Unit and Indoor (Outdoor) Unit	Wire size (mm <sup>2</sup> /AWG)	Material Standard	Remarks
Light/Ordinary polyvinyl chloride sheathed cord. (60227 IEC 52 /60227 IEC 53)	L≤1000m (L≤3280-5/6feet)	≥2×0.75 (≥2×AWG18)	IEC 60227-5-2007	1. If the wire diameter is enlarged to 2×1 mm <sup>2</sup> (2×AWG16), the total communication line length can reach 1500 m (4921-1/4feet). 2. The cord shall be Circular cord (the cores shall be twisted together). 3. If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire.

### 3.4 Wiring Requirements

Model	Power Cord Size	Air Switch Capacity (A)	Minimum Sectional Area of Ground Wire(mm <sup>2</sup> )	Minimum Sectional Area of Power Cord(mm <sup>2</sup> )
GMV-ND15G/B6B-T,GMV-ND18G/B6B-T GMV-ND22G/B6B-T,GMV-ND28G/B6B-T GMV-ND36G/B6B-T,GMV-ND45G/B6B-T GMV-ND50G/B6B-T,GMV-ND56G/B6B-T GMV-ND63G/B6B-T,GMV-ND71G/B6B-T	220-240V ~ 50Hz 208-230V ~ 60Hz	6	1	1
GMV-ND15G/B4B-T,GMV-ND18G/B4B-T GMV-ND22G/B4B-T,GMV-ND28G/B4B-T GMV-ND36G/B4B-T,GMV-ND45G/B4B-T GMV-ND50G/B4B-T,GMV-ND56G/B4B-T GMV-ND63G/B4B-T,GMV-ND71G/B4B-T GMV-ND80G/B4B-T,GMV-ND90G/B4B-T GMV-ND100G/B4B-T	220-240V ~ 50Hz 208-230V ~ 60Hz	6	1	1
GMV-ND22G/C4B-T,GMV-ND28G/C4B-T GMV-ND36G/C4B-T,GMV-ND45G/C4B-T GMV-ND50G/C4B-T,GMV-ND56G/C4B-T GMV-ND63G/C4B-T,GMV-ND71G/C4B-T	220-240V ~ 50Hz 208-230V ~ 60Hz	6	1	1
GMV-ND22G/C2B-T,GMV-ND28G/C2B-T GMV-ND36G/C2B-T,GMV-ND45G/C2B-T GMV-ND50G/C2B-T,GMV-ND56G/C2B-T GMV-ND63G/C2B-T,GMV-ND71G/C2B-T	220-240V ~ 50Hz 208-230V ~ 60Hz	6	1	1
GMV-ND22G/D2B-T,GMV-ND28G/D2B-T GMV-ND36G/D2B-T,GMV-ND45G/D2B-T GMV-ND50G/D2B-T,GMV-ND56G/D2B-T GMV-ND63G/D2B-T,GMV-ND71G/D2B-T	220-240V ~ 50Hz 208-230V ~ 60Hz	6	1	1



#### NOTES!

- ① Use copper wire only as unit's power cord. Operating temperature should be within its rated value.
- ② If the power cord is more than 15m, please increase properly the sectional area of power cord to avoid overload, which may cause accident.
- ③ Above selection requirements: Power cord size is based on BV single-core wire (2~4pc) at 40°C ambient temperature when laying across plastic pipe. Air switch is D type and used at 40°C.If actual installation condition varies, please lower the capacity appropriately according to the specifications of power cord and air switch provided by

manufacturer.

- ④ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ⑤ Install cut-off device near the unit. The minimum distance between each stage of cut-off device should be 3mm (The same for both indoor unit and outdoor unit).

## 4 Installation Instructions

### 4.1 Installation of Indoor Unit

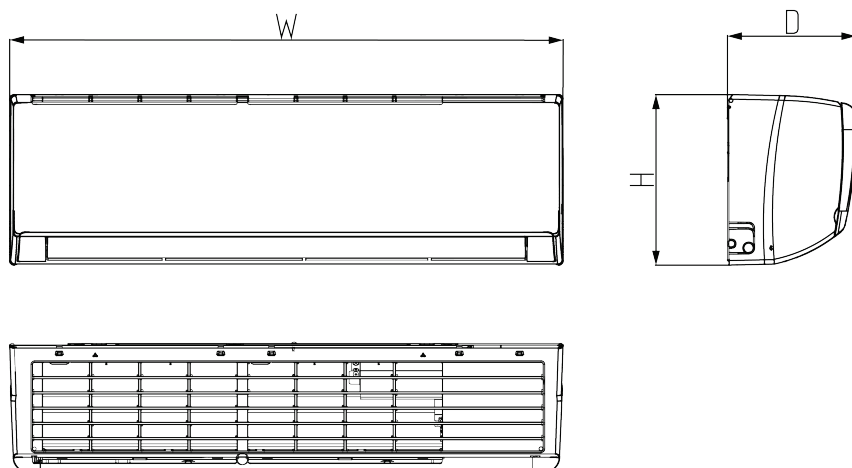


Fig 4.1

Below are dimensions of W, H, D for different models:

		Unit: mm		
Model	Item	W	H	D
GMV-ND15G/B6B-T, GMV-ND18G/B6B-T GMV-ND22G/B6B-T, GMV-ND28G/B6B-T, GMV-ND36G/B6B-T GMV-ND15G/B4B-T, GMV-ND18G/B4B-T GMV-ND22G/B4B-T, GMV-ND28G/B4B-T, GMV-ND36G/B4B-T GMV-ND22G/C4B-T, GMV-ND28G/C4B-T, GMV-ND36G/C4B-T GMV-ND22G/C2B-T, GMV-ND28G/C2B-T, GMV-ND36G/C2B-T GMV-ND22G/D2B-T, GMV-ND28G/D2B-T, GMV-ND36G/D2B-T		845	289	209
GMV-ND45G/B6B-T, GMV-ND50G/B6B-T GMV-ND45G/B4B-T, GMV-ND50G/B4B-T GMV-ND45G/C4B-T, GMV-ND50G/C4B-T GMV-ND45G/C2B-T, GMV-ND50G/C2B-T GMV-ND45G/D2B-T, GMV-ND50G/D2B-T		970	300	224
GMV-ND56G/B6B-T, GMV-ND63G/B6B-T, GMV-ND71G/B6B-T GMV-ND56G/B4B-T, GMV-ND63G/B4B-T, GMV-ND71G/B4B-T GMV-ND56G/C4B-T, GMV-ND63G/C4B-T, GMV-ND71G/C4B-T GMV-ND56G/C2B-T, GMV-ND63G/C2B-T, GMV-ND71G/C2B-T GMV-ND56G/D2B-T, GMV-ND63G/D2B-T, GMV-ND71G/D2B-T		1078	325	246
GMV-ND80G/B4B-T, GMV-ND90G/B4B-T, GMV-ND100G/B4B-T		1350	326	258

## 4.2 The Installation of the Rear Panel

Unit: mm

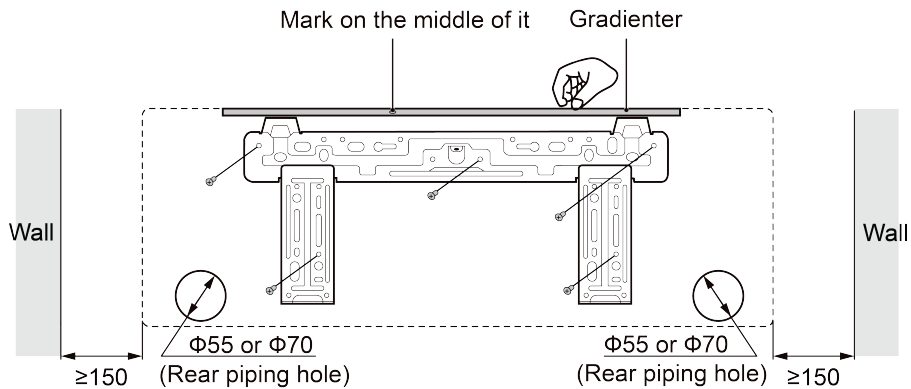


Fig 4.2

- ① Find the horizontal position by the seton method; since the drainage pipe is on the left side, it is necessary to adjust the rear panel to make its left side a little bit lower.
- ② Fix the rear panel on the wall by bolts.
- ③ After installing the rear panel, pull it by hands to check if it is secured enough. The hang panel should support the weight of an adult (60kg), and the weight shared by every bolt should be fairly even.
- ④ The diameter showed in Fig 4.2 is 55mm or 70mm.

## 4.3 Preparation of the Piping Hole

- (1) Make the piping hole ( $\Phi$  55mm or 70mm) in the wall at a slight downward slant to the outdoor side. The center of the hole should be determined referring to Fig 4.2.
- (2) Insert the piping-hole sleeve into the hole to prevent the connected piping and wiring from being damaged when passing through the hole.

## 4.4 Installation of the Drainage Pipes

- (1) For proper draining, the drain hose should be placed at a downward sloping.
- (2) Do not wrench or bend the drain hose or flood its end by water. (Fig.4.3)
- (3) Wrap the drain hose with heat resistant material.
- (4) It is not allowed to connect the condensate drain pipe into waste pipe or other pipelines which are likely to produce corrosive or peculiar smell to prevent the smell from entering indoors or corrupt the unit.
- (5) It is not allowed to connect the condensate drain pipe into rain pipe to prevent rain water from pouring in and cause property loss or personal injury.
- (6) Condensate drain pipe should be connected into special drain system for air conditioner.

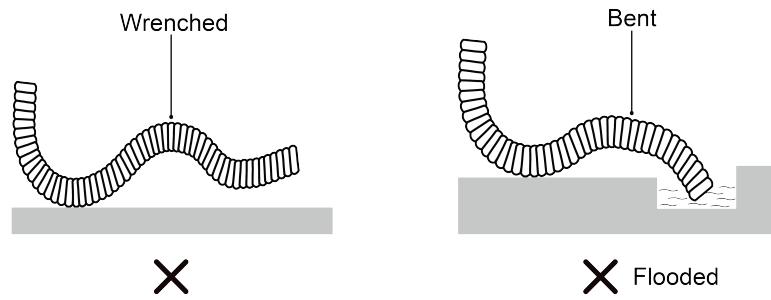


Fig 4.3

## 4.5 Installation the Connection Pipes

Connect the ends of the connection pipe with two leading pipes, and then tighten the joint nuts tightly.

Connect the connect pipe with the two relative leading pipe, tie the nut on tie –in of the connect pipe tightly.

### !NOTES!

- ① Be careful in bending the connection pipes, or you would damage the pipes.
- ② If the tightening torque for the flare nut is too great, leakage would happen.

## 5 Wiring Work



### WARNING!

Before obtaining access to terminals, all supply circuits must be disconnected.




### NOTES!

- ① Units must be earthed securely, or it may cause electric shock.
- ② Please carefully read the wiring diagram before carry out the wiring work, incorrect wiring could cause malfunction or even damage the unit.
- ③ The unit should be powered by independent circuit and specific socket.
- ④ The wiring should be in accordance with related regulations in order to ensure the units reliable running.
- ⑤ Install circuit breaker for branch circuit according to related regulations and electrical standards.
- ⑥ Keep cable away from refrigerant pipings, compressor and fan motor.
- ⑦ The communication wires should be separated from power cord and connection wire between indoor unit and outdoor unit.
- ⑧ Adjust the static pressure via wired controller according to site circumstance.

### 5.1 Connect Cables and Terminals of Wiring Board

#### Connection of Wire and Patch Board Terminal

- (1) The connection of wire (as shown in fig 5.1)
  - 1) Strip about 25mm insulation of the wire end by stripping and cutting tool.
  - 2) Remove the wiring screws on the terminal board.
  - 3) Shape the tail of wire into ring by needle nose plier, and keep the gauge of ring in accordance with screw.
  - 4) Use the screwdriver for tightening the terminal.
- (2) The connection of stranded wire (as shown in fig 5.2)
  - 1) Strip about 10mm insulation of the end of stranded wire by stripping and cutting tool.
  - 2) Loosen the wiring screws on terminal board.
  - 3) Insert the wire into the ring tongue terminal and tighten by crimping tool.
  - 4) Use the screwdriver for tightening the terminal.

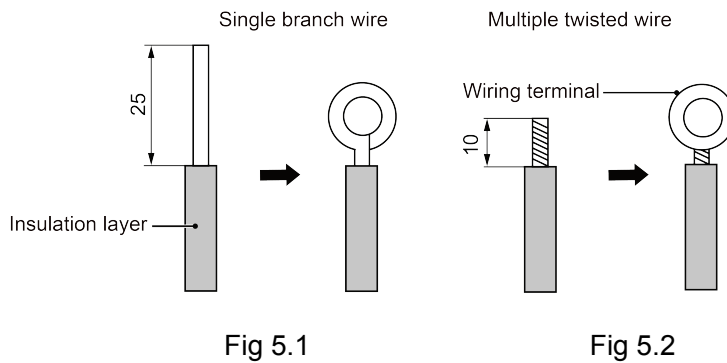

## 5.2 Power Cord Connection




All indoor units must be unified of power supply so that they can be powered ON/OFF at the same time.

If it's with a plug, the power socket must be installed the place where is within your reach. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

That the appliance shall be installed in accordance with national wiring regulations.

This appliance incorporates an earth connection for functional purposes only.

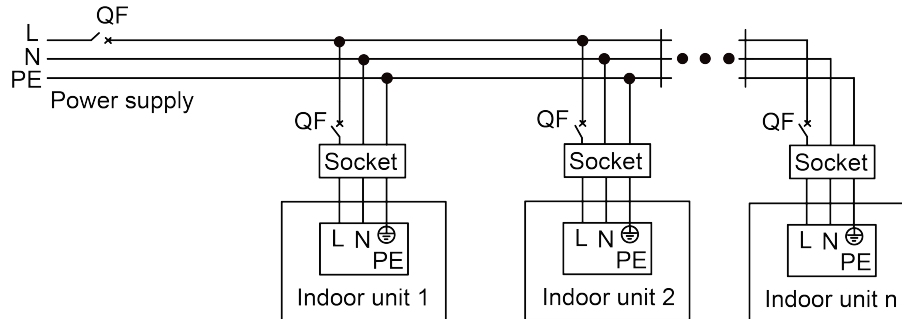

Note: Indoor unit quantity n is according to the outdoor unit capacity.

Fig 5.3

For units with single-phase power supply.

- (1) Detach the electric box lid.
- (2) Let the power cord pass through the wiring through-holes.
- (3) Connect the power cord to terminal "L, N, PE".
- (4) Fix the power card with wiring clamp.

## 5.3 Connection of Communication Line of IDU and ODU

- (1) Open the cover of electric box of indoor unit.
- (2) Lead the communication line across the rubber ring.



## Multi Variable Air Conditioners Wall Mounted Type Indoor Unit

- (3) Connect the communication line to terminal D1 and D2 on the 4-digit wiring board of indoor unit, as shown in Fig 5.4(D1D2 Rated Voltage/Current 5V/100mA,Class II).


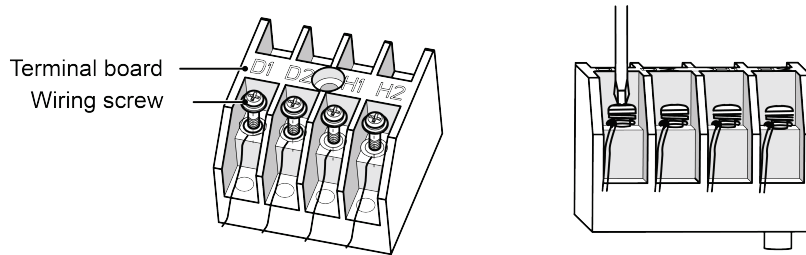


Fig 5.4

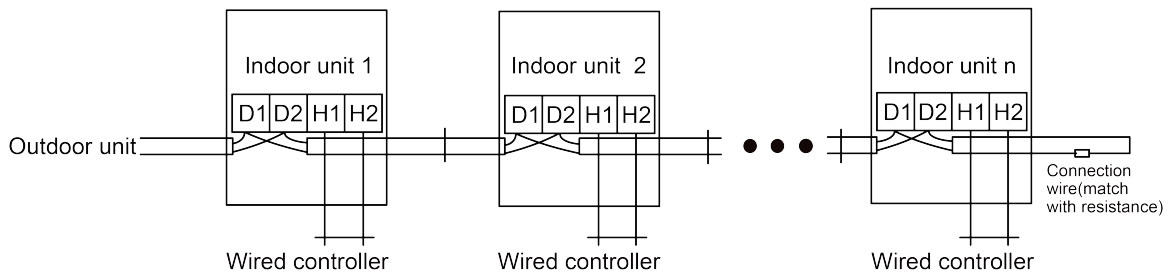

Note: Indoor unit quantity n is according to the outdoor unit capacity.

Fig 5.5

- (4) Secure the communication line with the wire clamp on the electric box.
- (5) In order to ensure the reliability of communication between IDU and ODU and the communication among each IDU, add a matched resistance (supplied in a package before ex-factory) on the wiring board of the last indoor unit in a series connection. The matched resistance should be connected in parallel between terminal screw D1 and D2, as shown in Fig 5.5.

### 5.4 Connection of Communication Line of Wired Controller

- (1) Open the cover of electric box of indoor unit.
- (2) Lead the communication line of wired controller across the rubber ring.
- (3) Connect the communication wire to terminal H1 and H2 of indoor 4-bit wiring board.
- (4) Fix the communication wire with wire clip on the electric box.

### 5.5 Illustrate for Connection of Wired Controller and Indoor Units Network

- (1) Communication wire of indoor unit and outdoor unit (or indoor unit) is connected to D1,D2.
- (2) Wired controller is connected to H1,H2.
- (3) One indoor unit can connect two wired controllers that must be set as master one and slave one.
- (4) One wired controller can control 16 indoor units in maximum at the same time.

**NOTES!**

- ① The type of indoor units must be the same if they are controlled by the same wired controller.
- ② When the indoor unit is controlled by two wired controllers, the addresses of the two wired controllers should be different through address setting. Address 1 is for main controller; Address 2 is for slave controller. Detailed setting please refer to the instruction manual of wired controller.

### 5.6 Installation of the Indoor Unit

- (1) When routing the piping and wiring from the left or right side of the indoor unit, it is necessary to cut off the tailings of the pipe left on the holder of the unit. (Shown in Fig.5.6)
  - 1) Cut down tailings 1 when only the power cord is led.
  - 2) Cut down tailings 1,2 (or 1,2,3) when the connection cord and wire are led.
  - 3) The piping types ①,②,③ are recommended.
- (2) Let the tubing and cord pass through the piping hole after tied up (refer to Fig .5.6 (d)).
- (3) Hang the claw behind the indoor unit on the pothook on the wall panel, and move the unit left and right to check if the body is firm.
- (4) Guarantee that the installation height of the indoor unit should be 2.5m above the floor.

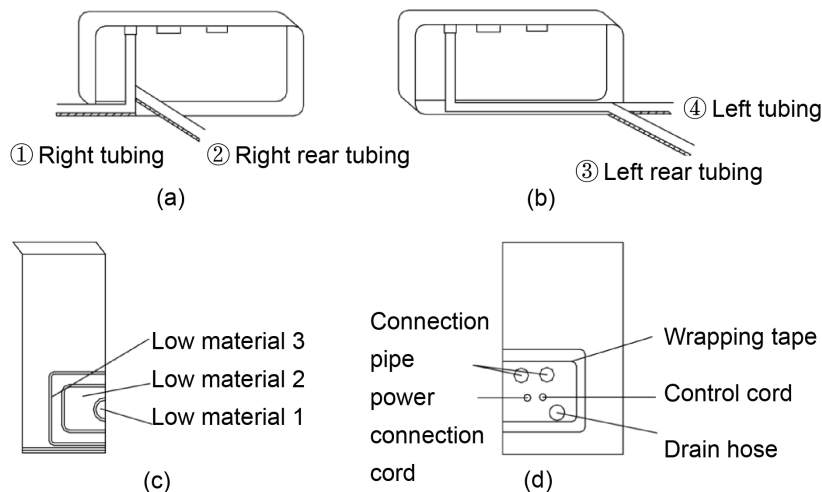


Fig 5.6

### 5.7 Connection of External Water Pump

The external water pump applicable model:

GMV-ND15G/B6B-T, GMV-ND15G/B4B-T, GMV-ND18G/B6B-T, GMV-ND18G/B4B-T,  
 GMV-ND22G/B6B-T, GMV-ND22G/B4B-T, GMV-ND22G/C4B-T, GMV-ND22G/C2B-T,  
 GMV-ND22G/D2B-T, GMV-ND28G/B6B-T, GMV-ND28G/B4B-T, GMV-ND28G/C4B-T,  
 GMV-ND28G/C2B-T, GMV-ND28G/D2B-T, GMV-ND36G/B6B-T, GMV-ND36G/B4B-T,

GMV-ND36G/C4B-T,GMV-ND36G/C2B-T,GMV-ND36G/D2B-T,GMV-ND45G/B6B-T,  
GMV-ND45G/B4B-T,GMV-ND45G/C4B-T,GMV-ND45G/C2B-T,GMV-ND45G/D2B-T,  
GMV-ND50G/B6B-T,GMV-ND50G/B4B-T,GMV-ND50G/C4B-T,GMV-ND50G/C2B-T,  
GMV-ND50G/D2B-T,GMV-ND56G/B6B-T,GMV-ND56G/B4B-T,GMV-ND56G/C4B-T,  
GMV-ND56G/C2B-T,GMV-ND56G/D2B-T,GMV-ND63G/B6B-T,GMV-ND63G/B4B-T,  
GMV-ND63G/C4B-T,GMV-ND63G/C2B-T,GMV-ND63G/D2B-T,GMV-ND71G/B6B-T,  
GMV-ND71G/B4B-T,GMV-ND71G/C4B-T,GMV-ND71G/C2B-T,GMV-ND71G/D2B-T.

The external water pump is purchased by the user, and the water pump is selected according to the requirements. The installation must be carried out by a professional according to the local laws and regulations and the pump manual.

Main board terminal CN8: Provide power for the external water pump; power specification: 220-240V~50Hz,208-230V~60Hz; Power of water pump  $\leq 30W$ ; when there may be condensed water according to the operating status of the indoor unit, the power will be turned on, and when there is no condensed water, the power will be turned off.

Main board terminal CN35: It's used to detect the water overflow error signal. When the terminal CN35 is continuously disconnected for a certain period of time, the error code L3 of water overflow error will be displayed on the indoor unit and the unit stops operation; when the terminal CN35 is continuously connected for a period of time, the water overflow error will be eliminated. When the user doesn't need to use this function, the terminal CN35 shall be connected according to the short circuit connection at the time of ex-factory.

Connection of external water pump and indoor unit

- (1) Remove the panel.
- (2) Remove the electric box cover.
- (3) Connect the power cord of external water pump to the positions L and N of terminal CN8 of the main board; connect the alarm wire to the positions 1 and 2 of terminal CN35 (refer to Fig .5.7).
- (4) Take out the wiring clip from the package of accessories. Remove the original wiring clip from the electric box and secure the power cord and alerter wire with the new clip.

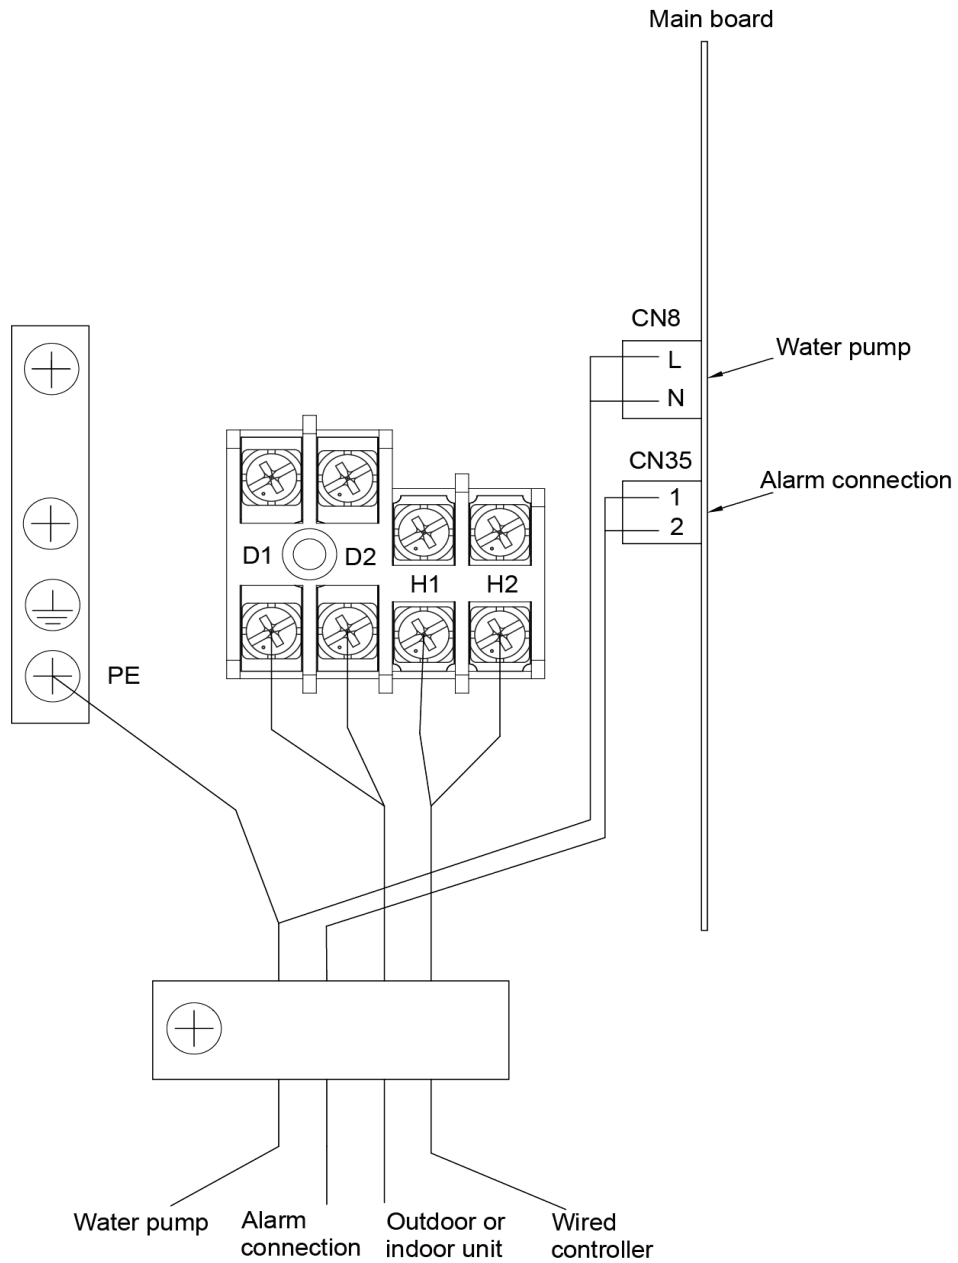


Fig 5.7

## 6 The Best Usage Method

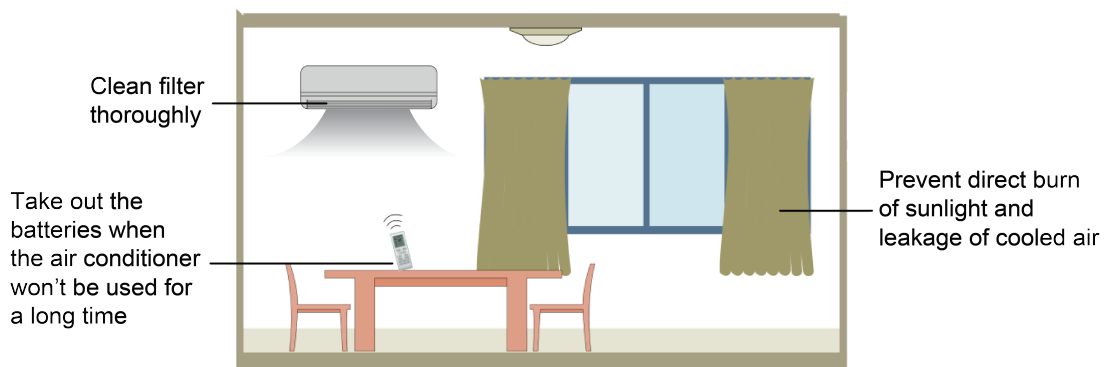


Fig 6.1

- (1) Adjust to proper indoor temperature, too cool of indoor temperature is not good for health.

## Multi Variable Air Conditioners Wall Mounted Type Indoor Unit

---

- (2) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- (3) Adjust the set temperature properly in proper to prevent electricity wasting. It is better to control the difference of the indoor and outdoor temperatures within 5°C.
- (4) The better effect will be maintained by adjusting the guide louver downward for heating and horizontal for cooling.
- (5) When the air conditioner is running, don't open windows or doors for long time, otherwise the efficiency of unit will be lowered.
- (6) Prevent the cooled air blowing to body directly for long time and making indoor temperature too low, for it is bad for health.
- (7) Do not pour water to unit or clean it by water, otherwise a malfunction or electric shock may happen.
- (8) Do not mangle the power cord and the communication cord. The damaged power cord and communication cord can only be replaced by the specified ones.
- (9) This air conditioner allows voltage fluctuation within 220 V±10%.
- (10) This air conditioner cannot be used for drying clothes and refrigerating food, etc.

## 7 Maintenance Method

### **WARNING!**

- (1) Do not turn off the unit and cut off the power when cleaning the air conditioner, otherwise electric shock may happen.
- (2) Do not make the air conditioner wet or electric shock may be incurred; ensure that the air conditioner will not be cleaned by water rinsing under any circumstance.
- (3) Volatile liquid like thinner or gasoline would damage the appearance of the air conditioner. (Only soft dry cloth and wet cloth moistened with neutral detergent could be used to clean the surface panel of the air conditioner.)

### 7.1 Cleaning Panel

#### **NOTE!**

Do not take it down before cleaning.

- ① Pull along the direction of arrows to take down the panel.
- ② Clean the panel.

Clean it with a soft-hair brush, water and neutral cleaning fluid, and then dry it.

#### **CAUTION!**

Do not use water above 45°C to wash the panel to prevent decoloration or deformation.

Install the panel.

As shown in Fig 7.1, install the stands of both ends of the panel into the slot and put the middle rotating shaft into the groove, then place the panel and clasp back along the arrow direction.

 


Fig 7.1

### 7.2 Cleaning the Air Filters

Clean it once every 3 months; when the usage environment has lots of dust, it should be cleaned more frequently.

- (1) Take down the air filter.

As shown in Fig 7.2, open the surface panel by holding the both ends of groove along the arrow direction, and then take the air filter out downward.

- (2) Clean the filter.

Use cleaner or water to wash the filter; if the filter is too dirty (like oil stain on it), warm water (lower than 45°C) with neutral detergent can be used, then dry it in the shade.



**NOTES!**

- ① Do not clean the filter by hot water higher than 45°C for preventing fade or deformation.
- ② Do not burn it on fire or the filter would catches fire or deformation.
- (3) Install air filter

Install the air filter properly along the arrow direction, making the side marked “Front” facing yourself and then place the panel back.

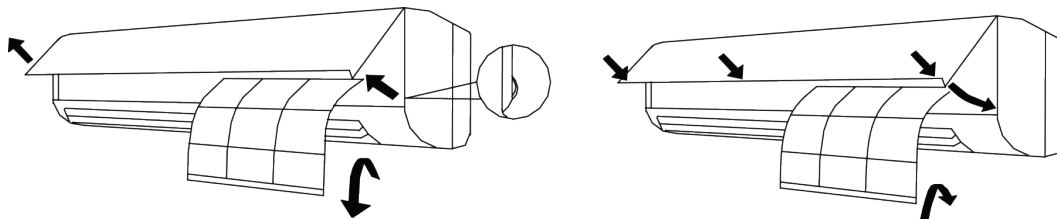


Fig 7.2

### 7.3 Check Before the Usage Season

- (1) Check if there is blockage in the inlet or outlet vent of the air conditioner.
- (2) Check if the earth wire is earthed reliably.
- (3) Check if the batteries in the wireless remote controller have been replaced.
- (4) Check if the air filter has been installed properly In order to start up the air conditioner smoothly after it has been turned off for a long time period, energize the unit 8 hours before turning it on.

### 7.4 Check After the Usage Season

- (1) Clean filter and body of air conditioner.
- (2) Cut off the main power supply of air conditioner.

## 8 Table of Error Codes for Indoor Unit

Error Code	Content	Error Code	Content	Error Code	Content
L0	Indoor Unit Error	L9	Quantity Of Group Control Indoor Units Setting Error	d8	Water Temperature Sensor Error
L1	Indoor Fan Protection	LA	Indoor Units Incompatibility Error	d9	Jumper Cap Error
L2	E-heater Protection	LH	Low Air Quality Warning	dA	Indoor Unit Network Address Error
L3	Water Full Protection	LC	Outdoor-Indoor Incompatibility Error	dH	Wired Controller Circuit Board Error
L4	Wired Controller Power Supply Error	d1	Indoor Unit Circuit Board Error	dC	Capacity DIP Switch Setting Error
L5	Anti-freezing Protection	d3	Ambient Temperature Sensor Error	dE	Indoor Unit CO <sub>2</sub> Sensor Error
L7	No Master Indoor Unit Error	d4	Inlet Pipe Temperature Sensor Error	C0	Communication Error
L8	Power Insufficiency Protection	d6	Outlet Pipe Temperature Sensor Error	AJ	Filter Cleaning Reminding
db	Special Code: Project Debugging Code	dL	Outlet Air Temperature Sensor Error	—	—

## 9 Malfunction Analyzing



### WARNING:

Do not repair the air conditioner by yourself for the incorrect repair would lead to electric shock or fire. Please contact the service center and have the unit repaired by the specialized personnel. Check the following items before contacting the service center, as it could save your time and cost.

Malfunction Phenomena	Malfunction Analyzing
The air conditioner could not start up just after turned off.	The over load protection switch of the unit makes it run after 3 minutes delay.
Odor gave out when the unit just was turned on.	Odors or cigarette smoke which has been absorbed in is discharged out.
Slight bicker was heard when the unit was running.	This is the sound of the running refrigerant.
Mist came from the air outlet vent when cooling.	Indoor air is cooled rapidly.
Creak sound was heard when the unit was running or after it was turned off.	It is the sound emitted by the expansion of the panel and other parts because of the temperature change.
The air conditioner failed to run.	Is the power supply cut off? Is the power supply connected? Is the circuit protector started aside? Is the voltage too high or too low? If TIMER had been set on the wireless remote controller?
The cooling (heating) effect of the air conditioner was not good.	Is the temperature set properly? Is the inlet, outlet vent of the outdoor unit blocked? Is the air filter too dirty to cause blockage? Are windows and doors closed? Is the air speed too low? Is there other heat source in the room?
The wireless remote controller cannot work.	In the event that the battery is replaced but the wireless remote control still malfunctions, then open the back cover and press. "ACL" button to make it normal. When the air conditioner is under abnormal interference or its functions are changed too frequently, then the wireless remote controller would work improperly. At this time, it is available to resume the normal operation through de-energizing and then energizing the wireless controller again. Is the controller within the receiving area? or is there blockage? Check if the voltages of batteries in the wireless remote controller are sufficient; Otherwise change the batteries.

### 9.1 Service Center

When the following phenomena appeared, please stop operating immediately, cut off the main power supply of the unit and then contact the service center of the air conditioner.

- (1) Harsh sound heard when running;
- (2) The fuse or protector opened frequently;
- (3) Substance or water pulled in the unit involuntarily;
- (4) Water leakage in room;
- (5) Power cord overheated;
- (6) Abnormal odor is given out when running.



## 9.2 After-Sales Service

When quality or other problems arise upon the purchased air conditioner, please contact the local service center.


## 10 Adjusting Method of The Air Direction

### 10.1 Adjusting Air Direction Up and Down

- (1) Controlling the guide louver motor by the wireless remote controller can make the guide louver swing up and down, or makes the guide louver stop at a certain angle to have air supplied.
- (2) Press the SWING button on the wireless remote controller to make the guide louver swing up and down; Repress again to stop the operation.

### 10.2 Adjusting Air Direction Left and Right

Moving the vertical louver left and right can adjust the left and right direction of air outlet, or adjust the air outlet to reach every corner of the room by 3 different outlet directions to make the indoor temperature more even.

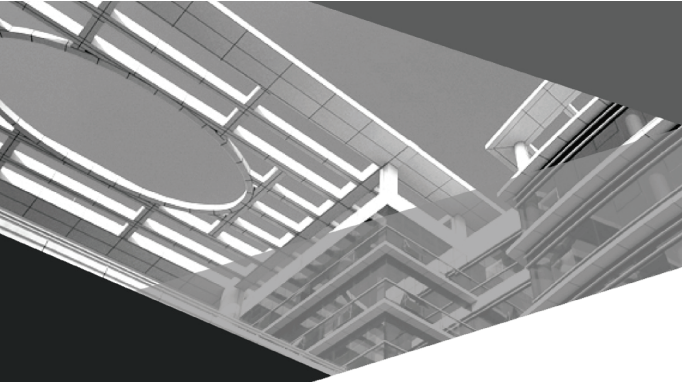

**GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI**

Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China, 519070

Tel: (+86-756) 8522218

Fax: (+86-756) 8669426

E-mail: [global@cn.gree.com](mailto:global@cn.gree.com) [www.gree.com](http://www.gree.com)



600005060459