

# Service Manual

---

Models: GWC09QB-K3DNA1B  
GWH09QB-K3DNA1B  
GWC12QC-K3DNA1B  
GWH12QC-K3DNA1B  
GWC18QD-K3DNA1B  
GWH18QD-K3DNA1B  
(Refrigerant R410A)

## Table of Contents

<b>Part I : Technical Information</b>	1
<b>1. Summary</b>	1
<b>2. Specifications</b>	2
2.1 Specification Sheet	2
2.2 Operation Characteristic Curve	8
2.3 Capacity Variation Ratio According to Temperature	8
2.4 Cooling and Heating Data Sheet in Rated Frequency	9
2.5 Noise Curve	9
<b>3. Outline Dimension Diagram</b>	10
3.1 Indoor Unit	10
3.2 Outdoor Unit	11
<b>4. Refrigerant System Diagram</b>	12
<b>5. Electrical Part</b>	13
5.1 Wiring Diagram	13
5.2 PCB Printed Diagram	17
<b>6. Function and Control</b>	20
6.1 Remote Controller Introduction	20
6.2 Brief Description of Modes and Functions	24
<b>Part II : Installation and Maintenance</b>	26
<b>7. Notes for Installation and Maintenance</b>	26
<b>8. Installation</b>	28
8.1 Installation Dimension Diagram	28
8.2 Installation Parts-checking	30
8.3 Selection of Installation Location	30
8.4 Electric Connection Requirement	30
8.5 Installation of Indoor Unit	30
8.6 Installation of Outdoor Unit	33
8.7 Vacuum Pumping and Leak	34


- 8.8 Check after Installation and Test Operation .....34
- 9. Maintenance .....36**
  - 9.1 Error Code List .....36
  - 9.2 Troubleshooting for Main Malfunction .....44
  - 9.3 Troubleshooting for Normal Malfunction.....53
- 10. Exploded View and Parts List .....55**
  - 10.1 Indoor Unit.....55
  - 10.2 Outdoor Unit.....61
- 11. Removal Procedure .....69**
  - 11.1 Removal Procedure of Indoor Unit .....69
  - 11.2 Removal Procedure of Outdoor Unit .....74
- Appendix: .....86**
  - Appendix 1: Reference Sheet of Celsius and Fahrenheit .....86
  - Appendix 2: Configuration of Connection Pipe.....86
  - Appendix 3: Pipe Expanding Method .....87
  - Appendix 4: List of Resistance for Ambient Temperature Sensor .....88

# Part I : Technical Information

## 1. Summary


### Indoor Unit

GWC09QB-K3DNA1B/I  
GWH09QB-K3DNA1B/I  
GWC12QC-K3DNA1B/I  
GWH12QC-K3DNA1B/I  
GWC18QD-K3DNA1B/I  
GWH18QD-K3DNA1B/I

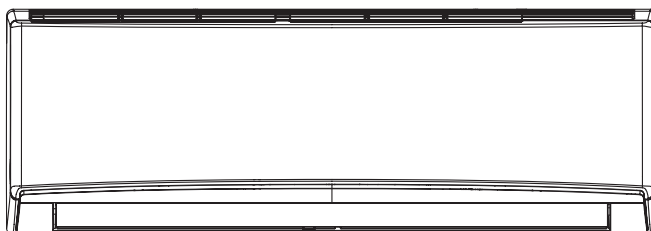


### Outdoor Unit

GWC09QB-K3DNA1B/O  
GWH09QB-K3DNA1B/O  
GWC12QC-K3DNA1B/O  
GWH12QC-K3DNA1B/O

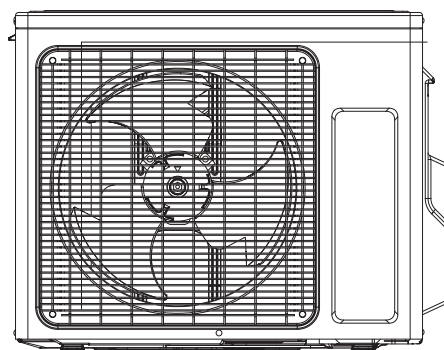

GWC18QD-K3DNA1B/O  
GWH18QD-K3DNA1B/O

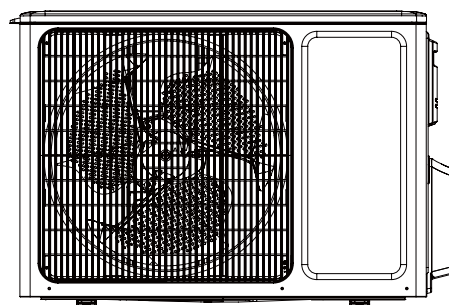

### Remote Controller

YAN1F1





## 2. Specifications

### 2.1 Specification Sheet

Parameter		Unit	Value	Value
Model			GWC09QB-K3DNA1B	GWH09QB-K3DNA1B
Product Code			CB419001600	CB419001700
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity		W	2650	2650
Heating Capacity		W	/	2800
Cooling Power Input		W	825	825
Heating Power Input		W	/	775
Cooling Current Input		A	3.66	3.66
Heating Current Input		A	/	3.44
Rated Input		W	1420	1550
Rated Current		A	6.3	6.3
Air Flow Volume(SH/H/M//L/SL)		m <sup>3</sup> /h	560/490/430/330/-	560/490/430/330/-
Dehumidifying Volume		L/h	0.8	0.8
EER		W/W	3.21	3.21
COP		W/W	/	3.61
SEER		W/W	/	/
HSPF		W/W	/	/
Application Area		m <sup>2</sup>	12-18	12-18
Indoor Unit	Indoor Unit Model		GWC09QB-K3DNA1B/I	GWH09QB-K3DNA1B/I
	Indoor Unit Product Code		CB419N01600	CB419N01700
	Fan Type		Cross-flow	Cross-flow
	Fan Diameter Length(DXL)	mm	Φ98X580	Φ98X580
	Cooling Speed(SH/H/M//L/SL)	r/min	1300/1200/1050/800/-	1300/1200/1050/800/-
	Heating Speed(SH/H/M//L/SL)	r/min	/	1300/1200/1050/900/-
	Fan Motor Power Output	W	20	20
	Fan Motor RLA	A	0.22	0.22
	Fan Motor Capacitor	μF	1	1
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Evaporator Pipe Diameter	mm	Φ7	Φ7
	Evaporator Row-fin Gap	mm	2-1.5	2-1.5
	Evaporator Coil Length (LXDXW)	mm	584X22.8X266.7	584X22.8X266.7
	Swing Motor Model		MP24AA	MP24AA
	Swing Motor Power Output	W	1.5	1.5
	Fuse Current	A	3.15	3.15
	Sound Pressure Level(SH/H/M//L/SL)	dB (A)	39/35/32/28/-	39/35/32/28/-
	Sound Power Level(SH/H/M//L/SL)	dB (A)	49/35/42/38/-	49/45/32/28/-
	Dimension (WXHXD)	mm	790X275X200	790X275X200
	Dimension of Carton Box (LXWXH)	mm	863X268X352	863X268X352
	Dimension of Package(LXWXH)	mm	866X271X367	866X271X367
	Net Weight	kg	9	9
	Gross Weight	kg	11	11

Outdoor Unit	Outdoor Unit Model		GWC09QB-K3DNA1B/O	GWH09QB-K3DNA1B/O
	Outdoor Unit Product Code		CB419W01600	CB419W01700
	Compressor Manufacturer		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-A091zE190A	QXA-A091zE190A
	Compressor Oil		68EP	68EP
	Compressor Type		Rotary	Rotary
	Compressor LRA	A	20	20
	Compressor RLA	A	4.5	4.5
	Compressor Power Input	W	942	942
	Compressor Overload Protector		1NT11L-6233	1NT11L-6233
	Throttling Method		Capillary	Capillary
	Set Temperature Range	°C	16~30	16~30
	Cooling Operation Ambient Temperature Range	°C	18~43	18~43
	Heating Operation Ambient Temperature Range	°C	/	-7~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Condenser Pipe Diameter	mm	Φ7	Φ7
	Condenser Rows-fin Gap	mm	1-1.4	1-1.4
	Condenser Coil Length (LXDXW)	mm	670X19.05X528	670X19.05X528
	Fan Motor Speed	rpm	930	930
	Fan Motor Power Output	W	30	30
	Fan Motor RLA	A	0.25	0.25
	Fan Motor Capacitor	μF	2.5	2.5
	Outdoor Unit Air Flow Volume	m <sup>3</sup> /h	1600	1600
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ370	Φ370
	Defrosting Method		/	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	49/-/-	49/-/-
	Sound Power Level (H/M/L)	dB (A)	59/-/-	59/-/-
	Dimension(WXHXD)	mm	710X550X318	710X550X318
	Dimension of Carton Box (LXWXH)	mm	771X348X592	771X348X592
	Dimension of Package(LXWXH)	mm	774X351X607	774X351X607
	Net Weight	kg	27.5	28
	Gross Weight	kg	29.5	30
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	0.74	0.74
Connection Pipe	Connection Pipe Length	m	5	5
	Connection Pipe Gas Additional Charge	g/m	15	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ9.52	Φ9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20
Note: The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Parameter		Unit	Value	Value
Model			GWC12QC-K3DNA1B	GWH12QC-K3DNA1B
Product Code			CB419001800	CB419001900
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity		W	3500	3500
Heating Capacity		W	/	3800
Cooling Power Input		W	1090	1090
Heating Power Input		W	/	1050
Cooling Current Input		A	4.84	4.84
Heating Current Input		A	/	4.66
Rated Input		W	1550	1650
Rated Current		A	6.9	6.9
Air Flow Volume(SH/H/M/L/SL)		m <sup>3</sup> /h	600/540/460/330/-	600/540/460/330/-
Dehumidifying Volume		L/h	1.4	1.4
EER		W/W	3.21	3.21
COP		W/W	/	3.62
SEER		W/W	/	/
HSPF		W/W	/	/
Application Area		m <sup>2</sup>	16-24	16-24
Indoor Unit	Indoor Unit Model		GWC12QC-K3DNA1B/I	GWH12QC-K3DNA1B/I
	Indoor Unit Product Code		CB419N01800	CB419N01900
	Fan Type		Cross-flow	Cross-flow
	Fan Diameter Length(DXL)	mm	Φ98X633.5	Φ98X633.5
	Cooling Speed(SH/H/M/L/SL)	r/min	1350/1200/1050/850	1350/1200/1050/850
	Heating Speed(SH/H/M/L/SL)	r/min	/	1300/1150/1000/900
	Fan Motor Power Output	W	20	20
	Fan Motor RLA	A	0.31	0.31
	Fan Motor Capacitor	μF	1.5	1.5
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Evaporator Pipe Diameter	mm	Φ7	Φ7
	Evaporator Row-fin Gap	mm	2-1.4	2-1.4
	Evaporator Coil Length (LXDXW)	mm	635X22.8X306.3	635X22.8X306.3
	Swing Motor Model		MP24BA	MP24BA
	Swing Motor Power Output	W	1.5	1.5
	Fuse Current	A	3.15	3.15
	Sound Pressure Level(SH/H/M/L/SL)	dB (A)	41/37/33/29/-	41/37/33/29/-
	Sound Power Level(SH/H/M/L/SL)	dB (A)	51/47/43/39/-	51/47/43/39/-
	Dimension (WXHDXD)	mm	845X289X209	845X289X209
	Dimension of Carton Box (LXWXH)	mm	918X278X364	918X278X364
	Dimension of Package(LXWXH)	mm	921X281X379	921X281X379
	Net Weight	kg	11	11
	Gross Weight	kg	13	13

Outdoor Unit	Outdoor Unit Model		GWC12QC-K3DNA1B/O	GWH12QC-K3DNA1B/O
	Outdoor Unit Product Code		CB419W01800	CB419W01900
	Compressor Manufacturer		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-A091zE190A	QXA-A091zE190A
	Compressor Oil		RB 68EP	RB 68EP
	Compressor Type		Rotary	Rotary
	Compressor LRA	A	20	20
	Compressor RLA	A	4.5	4.5
	Compressor Power Input	W	942	942
	Compressor Overload Protector		1NT11L-6233	1NT11L-6233
	Throttling Method		Capillary	Capillary
	Set Temperature Range	°C	16~30	16~30
	Cooling Operation Ambient Temperature Range	°C	18~43	18~43
	Heating Operation Ambient Temperature Range	°C	/	-7~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Condenser Pipe Diameter	mm	Φ7	Φ7
	Condenser Rows-fin Gap	mm	2-1.4	2-1.4
	Condenser Coil Length (LXDXW)	mm	670X19.05X528	670X19.05X528
	Fan Motor Speed	rpm	930	930
	Fan Motor Power Output	W	30	30
	Fan Motor RLA	A	0.25	0.25
	Fan Motor Capacitor	μF	2.5	2.5
	Outdoor Unit Air Flow Volume	m <sup>3</sup> /h	1600	1600
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ370	Φ370
	Defrosting Method		/	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	51/-/-	51/-/-
	Sound Power Level (H/M/L)	dB (A)	61/-/-	61/-/-
	Dimension(WXHXD)	mm	710X550X318	710X550X318
	Dimension of Carton Box (LXWXH)	mm	771X348X592	771X348X592
	Dimension of Package(LXWXH)	mm	774X351X607	774X351X607
	Net Weight	kg	29.5	30
	Gross Weight	kg	31.5	32
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	1.0	1.0
Connection Pipe	Connection Pipe Length	m	5	5
	Connection Pipe Gas Additional Charge	g/m	15	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ9.52	Φ9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	20	20
Note: The connection pipe applies metric diameter.				

The above data is subject to change without notice. Please refer to the nameplate of the unit.



Parameter		Unit	Value	Value
Model			GWC18QD-K3DNA1B	GWH18QD-K3DNA1B
Product Code			CB419002000	CB419002100
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity		W	5270	5270
Heating Capacity		W	/	5570
Cooling Power Input		W	1640	1640
Heating Power Input		W	/	1540
Cooling Current Input		A	7.28	7.28
Heating Current Input		A	/	6.83
Rated Input		W	2450	2500
Rated Current		A	10.86	10.86
Air Flow Volume(SH/H/M//L/SL)		m <sup>3</sup> /h	850/800/700/570/-	850/800/700/570/-
Dehumidifying Volume		L/h	1.8	1.8
EER		W/W	3.21	3.21
COP		W/W	/	3.62
SEER		W/W	/	/
HSPF		W/W	/	/
Application Area		m <sup>2</sup>	23-34	23-34
Indoor Unit	Indoor Unit Model		GWC18QD-K3DNA1B/I	GWH18QD-K3DNA1B/I
	Indoor Unit Product Code		CB419N02000	CB419N02100
	Fan Type		Cross-flow	Cross-flow
	Fan Diameter Length(DXL)	mm	Φ106X706	Φ106X706
	Cooling Speed(SH/H/M//L/SL)	r/min	1300/1200/1050/900/-	1300/1200/1050/900/-
	Heating Speed(SH/H/M//L/SL)	r/min	/	1250/1100/1000/900/-
	Fan Motor Power Output	W	35	35
	Fan Motor RLA	A	0.35	0.35
	Fan Motor Capacitor	μF	2.5	2.5
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Evaporator Pipe Diameter	mm	Φ7	Φ7
	Evaporator Row-fin Gap	mm	2-1.4	2-1.4
	Evaporator Coil Length (LXDXW)	mm	715X25.4X304.8	715X25.4X304.8
	Swing Motor Model		MP35CJ	MP35CJ
	Swing Motor Power Output	W	2.5	2.5
	Fuse Current	A	3.15	3.15
	Sound Pressure Level(SH/H/M//L/SL)	dB (A)	47/43/39/35/-	47/43/39/35/-
	Sound Power Level(SH/H/M//L/SL)	dB (A)	57/53/49/45/-	57/53/49/45/-
	Dimension (WXHXD)	mm	970X300X224	970X300X224
	Dimension of Carton Box (LXWXH)	mm	1038X380X305	1038X380X305
	Dimension of Package(LXWXH)	mm	1041X383X320	1041X383X320
	Net Weight	kg	13.5	13.5
	Gross Weight	kg	16.5	16.5

Outdoor Unit	Outdoor Unit Model		GWC18QD-K3DNA1B/O	GWH18QD-K3DNA1B/O
	Outdoor Unit Product Code		CB419W02000	CB419W02100
	Compressor Manufacturer		ZHUHAI LANDA COMPRESSOR CO.,LTD	ZHUHAI LANDA COMPRESSOR CO.,LTD
	Compressor Model		QXA-B141zF030A	QXA-B141zF030A
	Compressor Oil		68EP	68EP
	Compressor Type		Rotary	Rotary
	Compressor LRA	A	25	25
	Compressor RLA	A	7.2	7.2
	Compressor Power Input	W	1440	1440
	Compressor Overload Protector		1NT11L-6233	1NT11L-6233
	Throttling Method		Capillary	Capillary
	Set Temperature Range	°C	16~30	16~30
	Cooling Operation Ambient Temperature Range	°C	18~43	18~43
	Heating Operation Ambient Temperature Range	°C	/	-7~24
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Condenser Pipe Diameter	mm	Φ7	Φ7
	Condenser Rows-fin Gap	mm	2-1.4	2-1.4
	Condenser Coil Length (LXDXW)	mm	812X38.1X550	812X38.1X550
	Fan Motor Speed	rpm	880	880
	Fan Motor Power Output	W	60	60
	Fan Motor RLA	A	0.5	0.5
	Fan Motor Capacitor	μF	3.5	3.5
	Outdoor Unit Air Flow Volume	m <sup>3</sup> /h	2000	2000
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ444.8	Φ444.8
	Defrosting Method		/	Automatic Defrosting
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	4.3	4.3
	Permissible Excessive Operating Pressure for the Suction Side	MPa	2.5	2.5
	Sound Pressure Level (H/M/L)	dB (A)	54/-/-	55/-/-
	Sound Power Level (H/M/L)	dB (A)	64/-/-	65/-/-
	Dimension(WXHXD)	mm	899X596X378	899X596X378
	Dimension of Carton Box (LXWXH)	mm	945X417X630	945X417X630
	Dimension of Package(LXWXH)	mm	948X420X645	948X420X645
	Net Weight	kg	40	41
	Gross Weight	kg	43.5	44.5
	Refrigerant		R410A	R410A
	Refrigerant Charge	kg	1.2	1.2
Connection Pipe	Connection Pipe Length	m	5	5
	Connection Pipe Gas Additional Charge	g/m	15	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ12	Φ12
	Max Distance Height	m	10	10
	Max Distance Length	m	25	25
Note: The connection pipe applies metric diameter.				



The above data is subject to change without notice. Please refer to the nameplate of the unit.

## 2.2 Operation Characteristic Curve



09K 12K

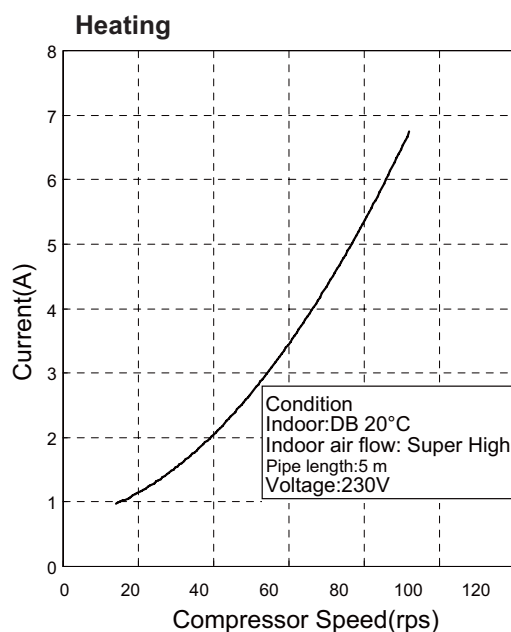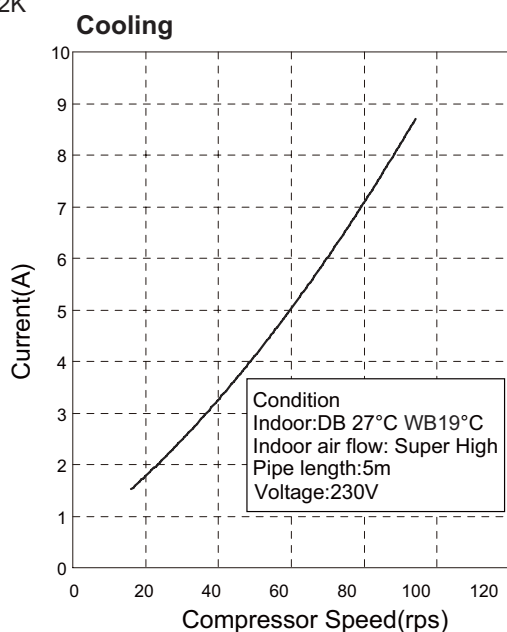

18K

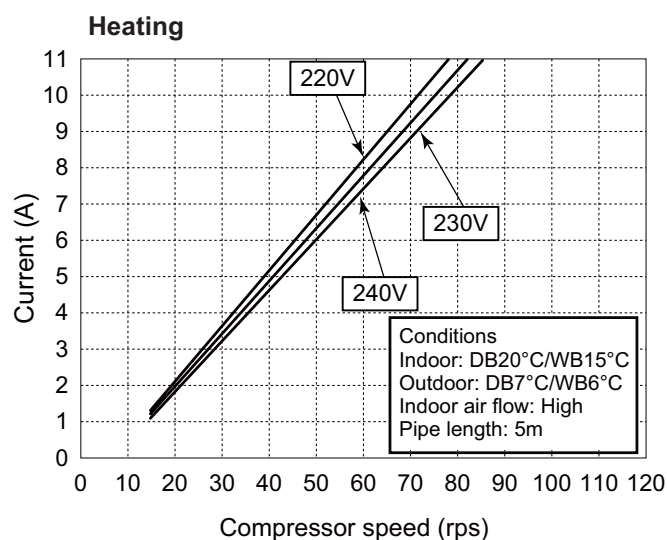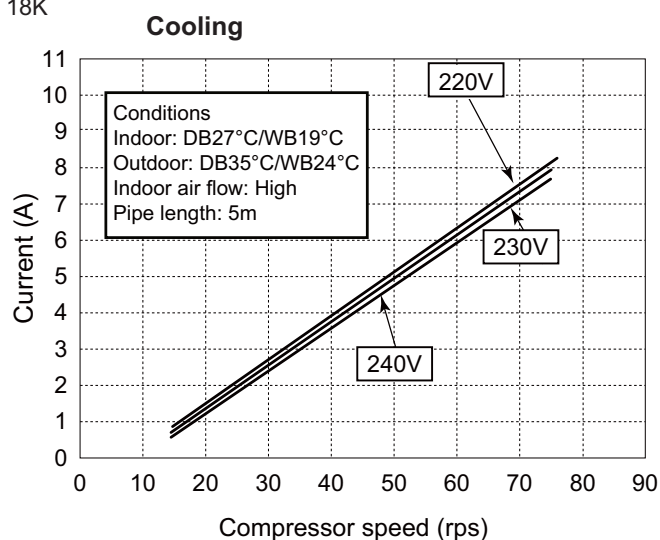

## 2.3 Capacity Variation Ratio According to Temperature

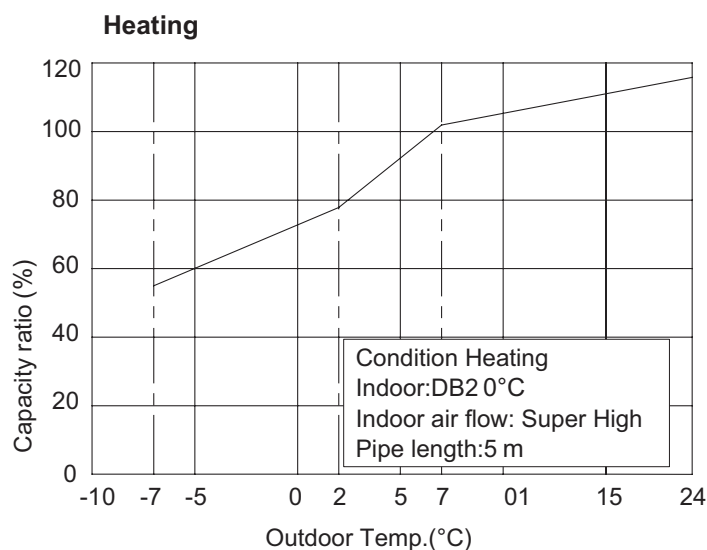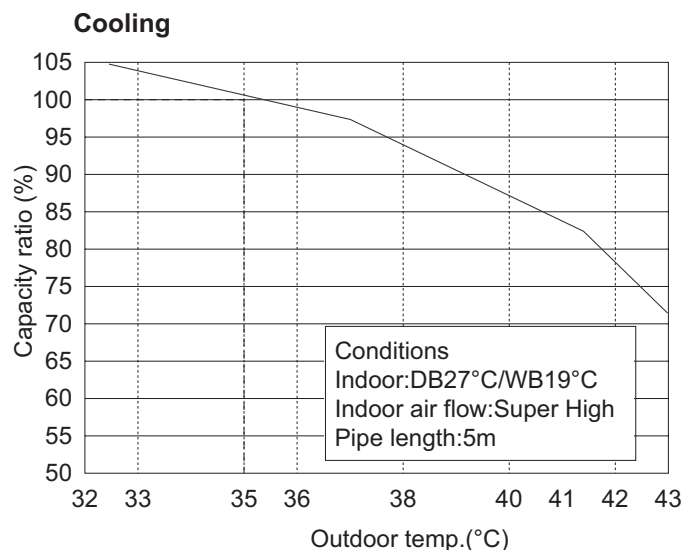

Cooling:

Rated cooling condition(℃ ) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor frequency (Hz)
Indoor	Outdoor			P (MPa)	T1 (℃ )			
27/19	35/24	09K	0.9 to 1.1	12 to 14	75 to 37	Super High	High	52
		12K						72
		18K						

Rated heating condition(℃ ) (DB/WB)		Model	Pressure of gas pipe connecting indoor and outdoor unit	Inlet and outlet pipe temperature of heat exchanger		Fan speed of indoor unit	Fan speed of outdoor unit	Compressor frequency (Hz)
Indoor	Outdoor		P (MPa)	T1 (℃)	T2 (℃)			
20/-	7/6	09K	2.2 to 2.4	70 to 35	2 to 4	Super High	High	65
		12K						77
		18K						

Connection pipe length: 5 m.

### Indoor side noise


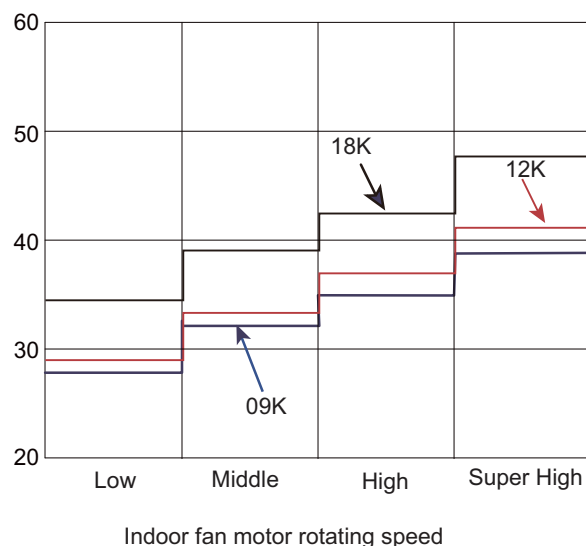


Figure 1 is a line graph showing Noise power spectral density (dB(A)) on the Y-axis versus Compressor frequency (Hz) on the X-axis. The Y-axis ranges from 30 to 70 dB(A) in increments of 5. The X-axis ranges from 20 to 90 Hz in increments of 10. Three curves are plotted, representing different compressor speeds: 9K (blue), 12K (red), and 18K (black). All curves show an increasing trend of noise with increasing frequency. The 18K curve is the highest, followed by the 12K curve, and then the 9K curve.

Compressor frequency (Hz)	9K Noise (dB(A))	12K Noise (dB(A))	18K Noise (dB(A))
25	49	53	54
30	50	54	55
35	51	55	56
40	52	56	57
45	53	57	58
50	54	58	59
55	55	59	60
60	56	60	61
65	57	61	62
70	58	62	63
75	59	63	64
80	60	64	65
85	61	65	66
90	62	66	67




### 3.1 Indoor Unit

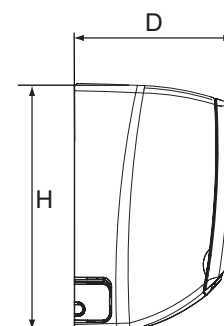


Model	W	H	D
09K	790	275	200
12K	845	289	209
18K	970	300	224

GWC09QB-K3DNA1B/O  
GWH09QB-K3DNA1B/O  
GWC12QC-K3DNA1B/O  
GWH12QC-K3DNA1B/O

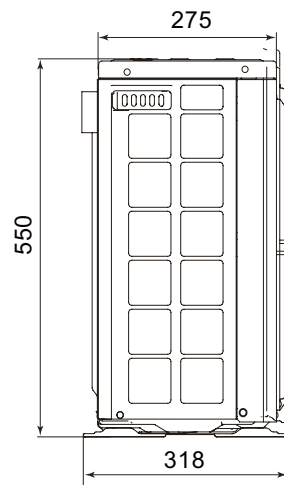


**GWC18QD-K3DNA1B/O**  
**GWH18QD-K3DNA1B/O**

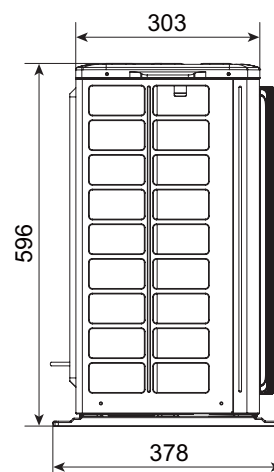


Unit:mm

## 4. Refrigerant System Diagram

### Cooling model

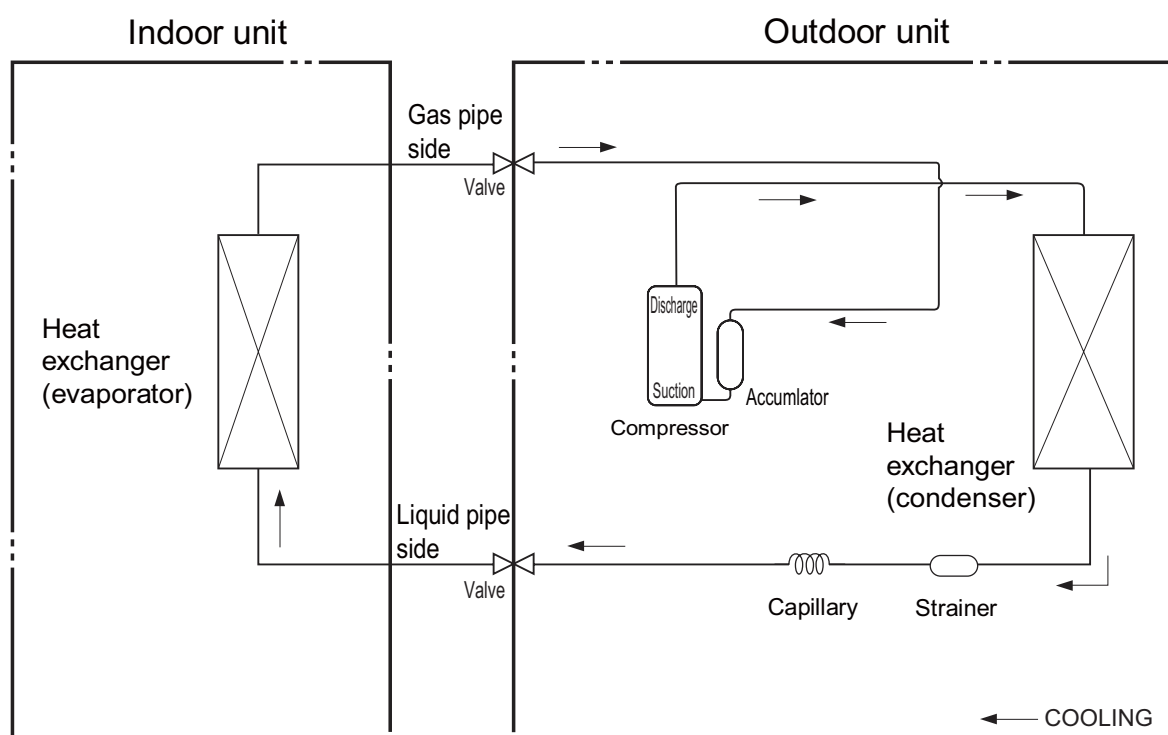

### Cooling and heating model

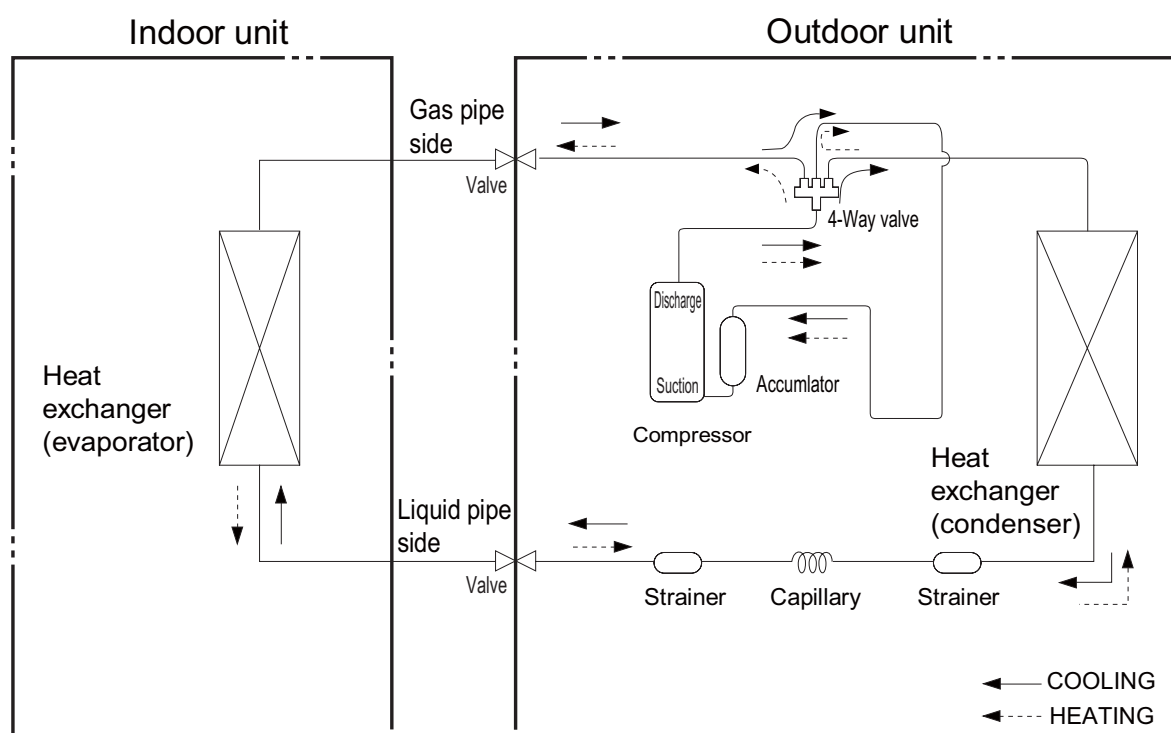

Connection pipe specification:

Liquid pipe: 1/4" (6mm)

Gas pipe: 3/8" (9.52mm)(09/12K)

Gas pipe: 1/2" (12mm)(18K)

## 5. Electrical Part

### 5.1 Wiring Diagram

#### • Instruction

Symbol	Symbol Color	Symbol	Symbol Color	Symbol	Name
WH	White	GN	Green	CAP	Jumper cap
YE	Yellow	BN	Brown	COMP	Compressor
RD	Red	BU	Blue		Grounding wire
YEGN	Yellow/Green	BK	Black	/	/
VT	Violet	OG	Orange	/	/

Note: Jumper cap is used to determine fan speed and the swing angle of horizontal lover for this model.


#### • Indoor Unit

GWC09QB-K3DNA1B/I


GWH09QB-K3DNA1B/I

GWC12QC-K3DNA1B/I

GWH12QC-K3DNA1B/I

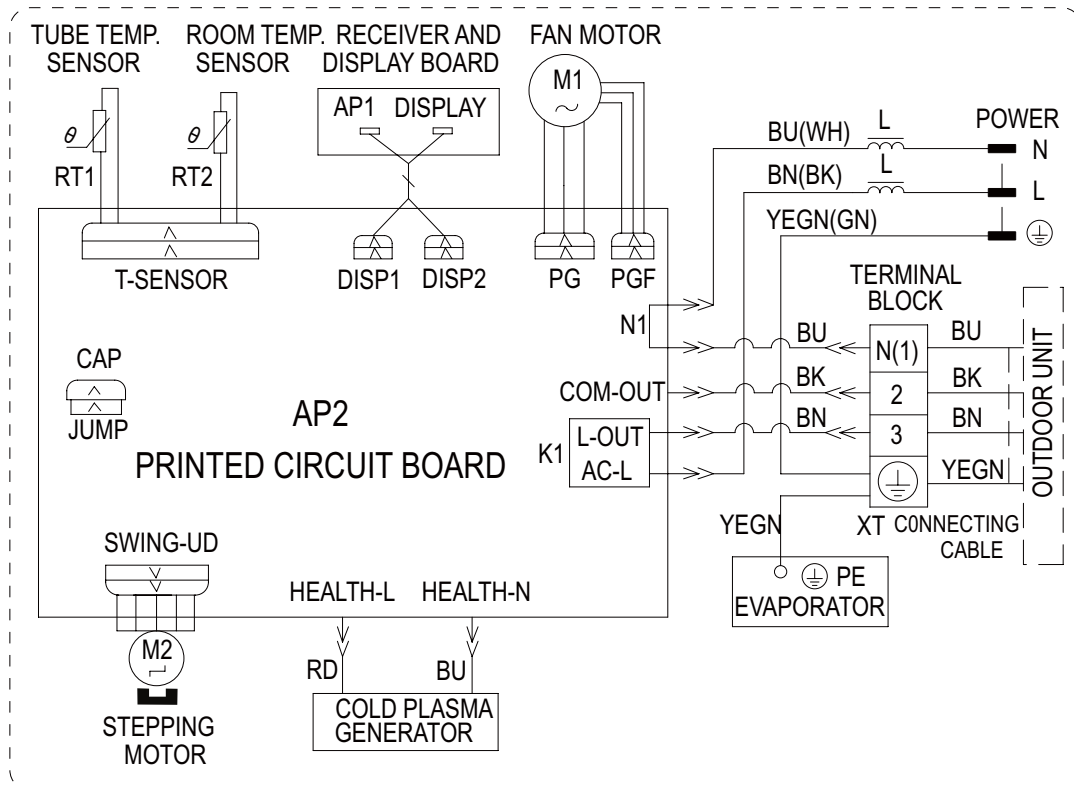


GWC18QD-K3DNA1B/I  
GWH18QD-K3DNA1B/I

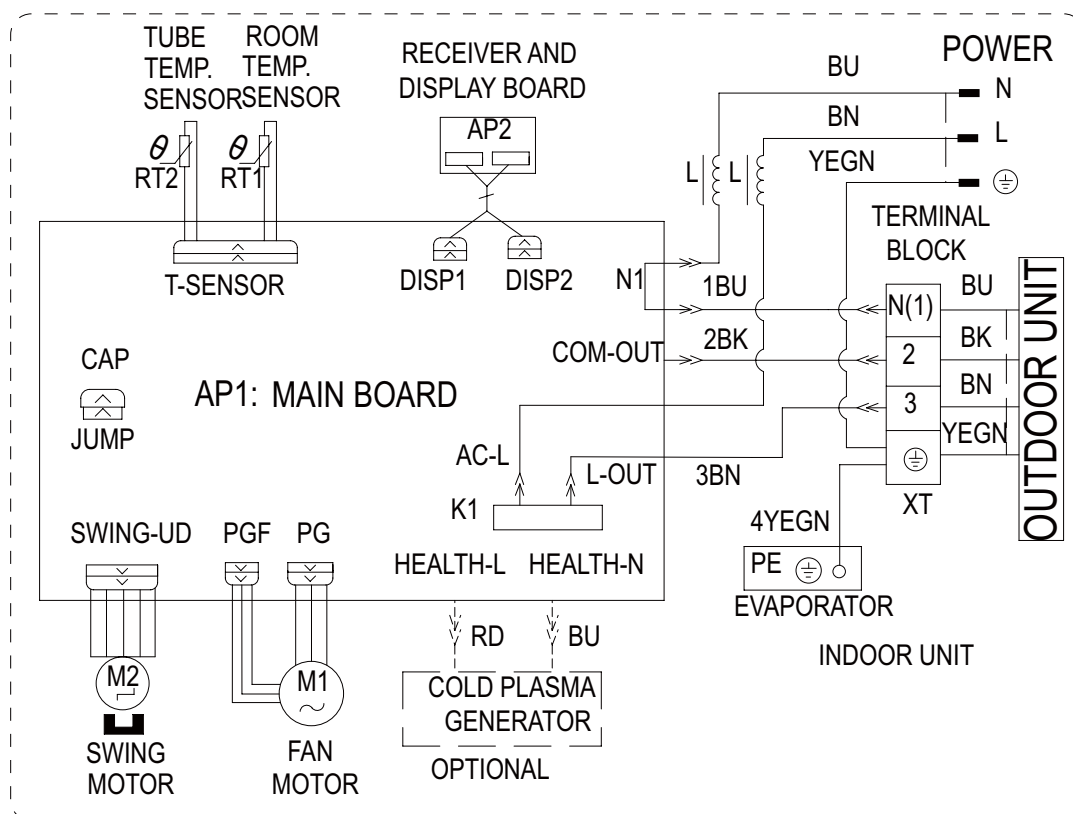


## • Outdoor Unit


GWC09QB-K3DNA1B/O  
GWC12QC-K3DNA1B/O

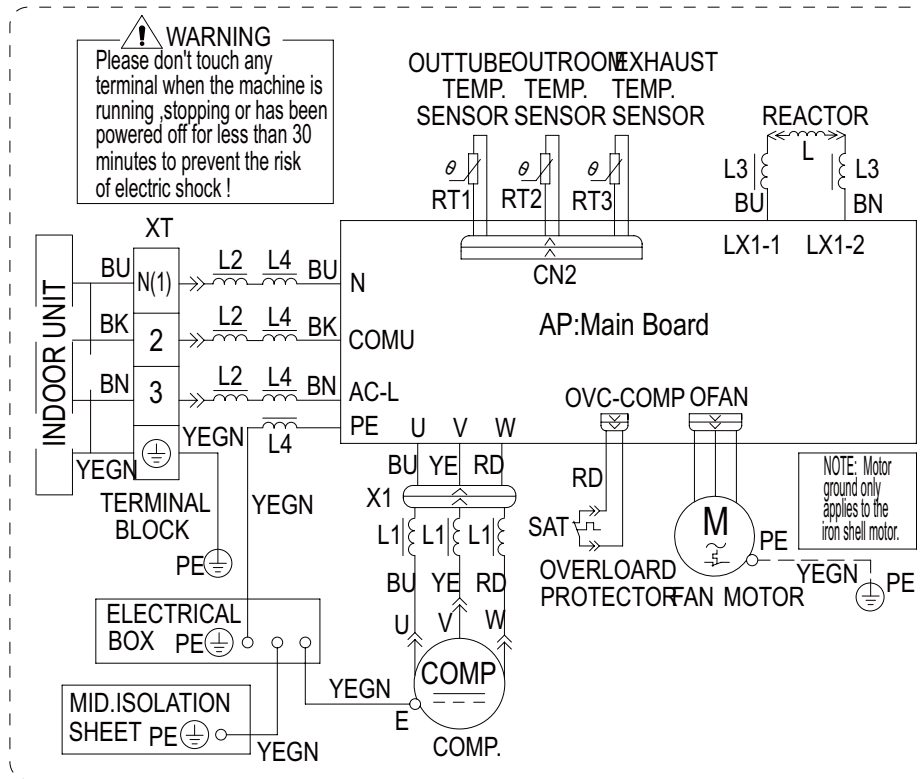


GWH09QB-K3DNA1B/O  
GWH12QC-K3DNA1B/O

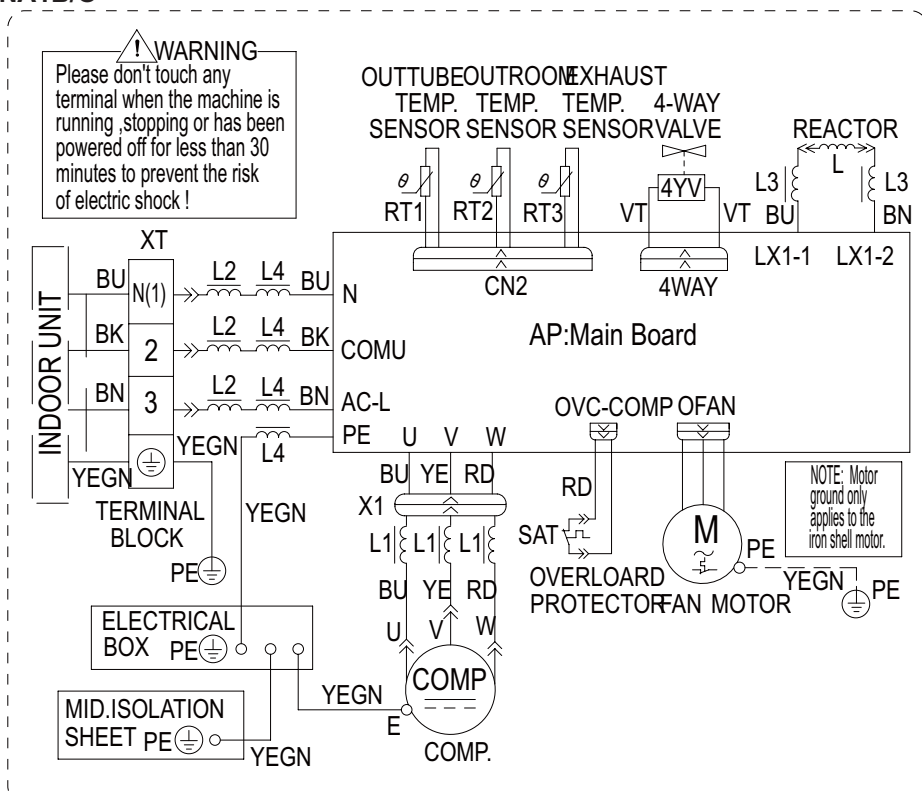

## GWC18QD-K3DNA1B/O

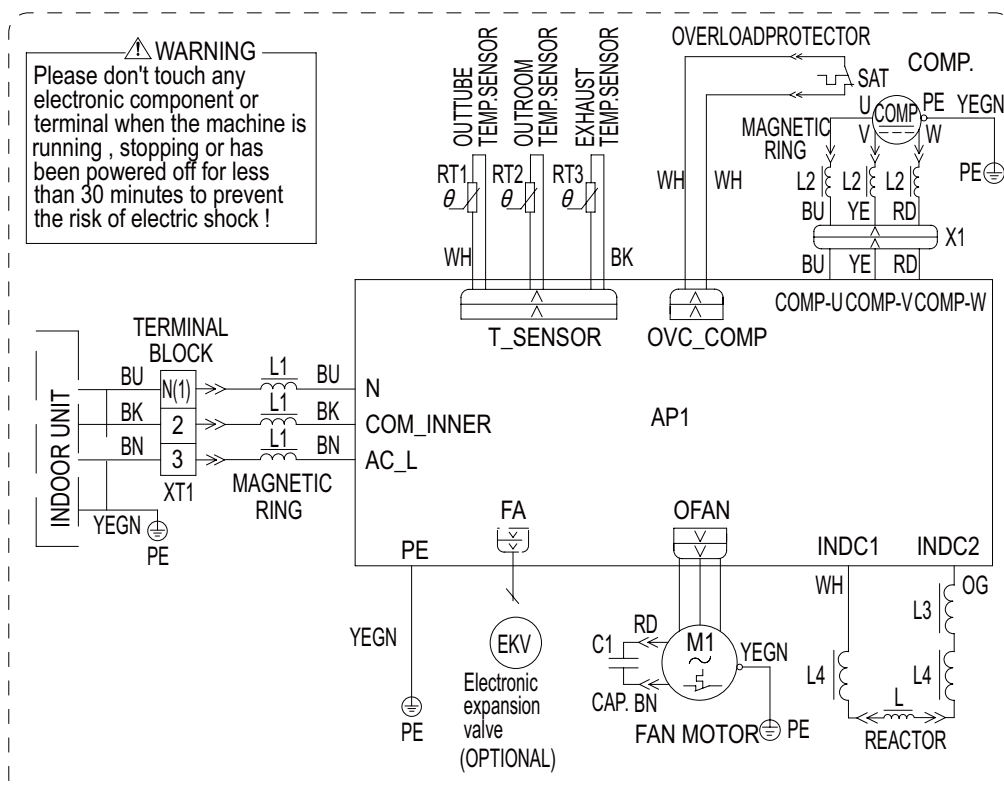


## GWH18QD-K3DNA1B/O

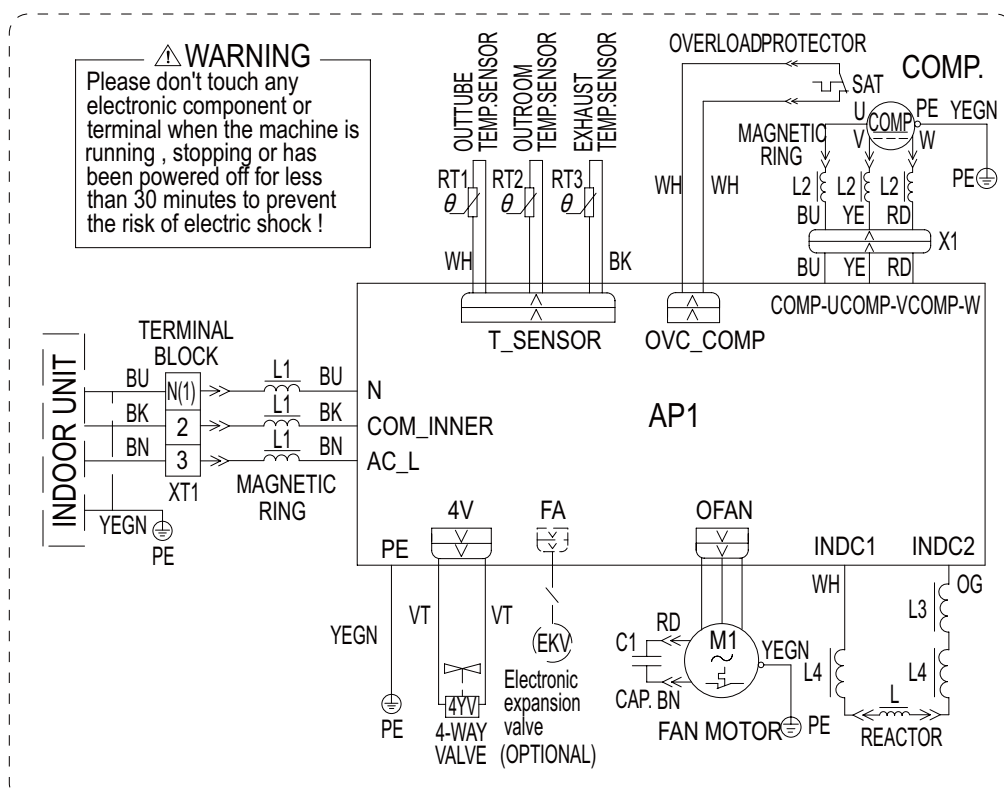


These circuit diagrams are subject to change without notice, please refer to the one supplied with the unit.

- **Top view**

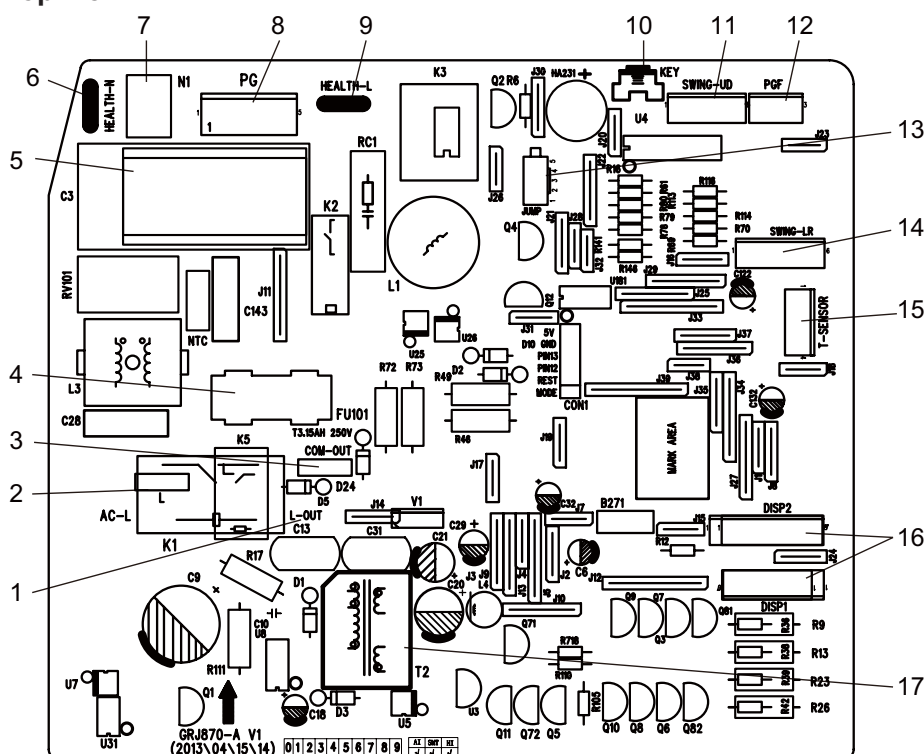

No.	Name
1	Interface of compressor control
2	Live wire interface of power supply
3	Communication wire interface of neutral and live wire
4	Interface of fuse
5	Indoor fan driven capacitor
6	Neutral wire interface of cold plasma
7	Neutral wire interface of power supply
8	Interface of indoor fan control
9	Live wire interface of cold plasma
10	Auto button
11	Interface of up&down swing motor
12	Interface of indoor fan feedback
13	Jumper cap
14	Interface of left&right motor
15	Interface of temperature sensor
16	Interface of display
17	High-frequency transformer

- **Bottom view**

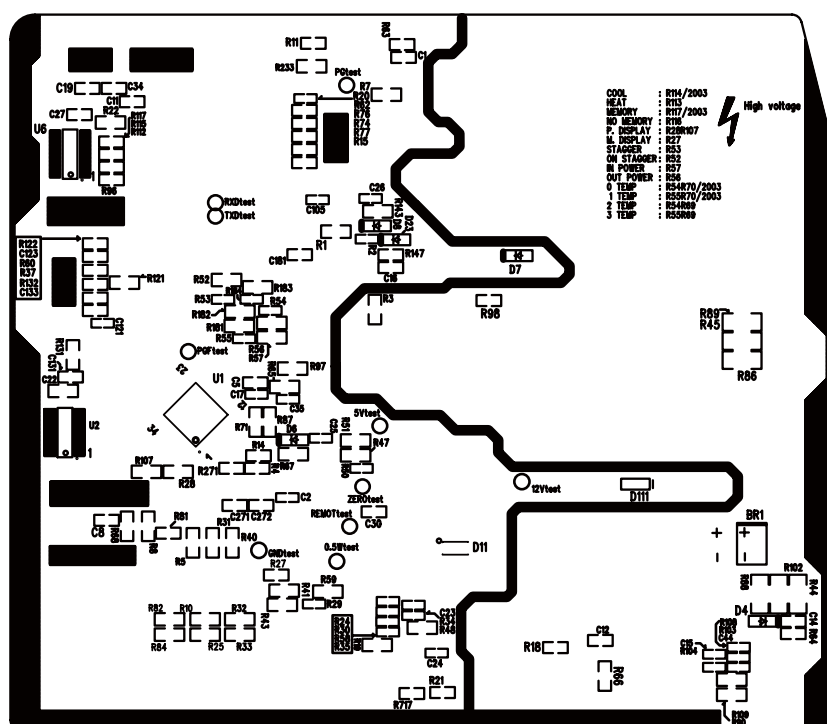




## Outdoor Unit


- **Top view**

9K/12K

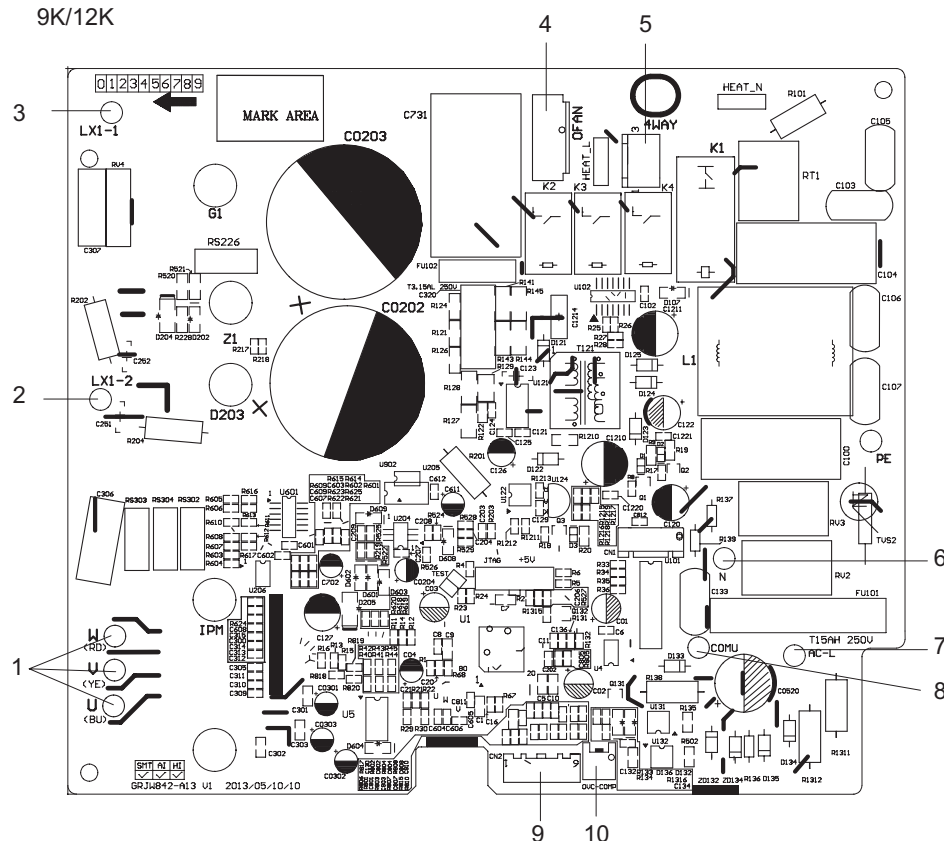


No.	Name
1	Terminal of compressor wire
2	Reactor interface 1
3	Reactor interface 2
4	Fan interface
5	4-way valve sub-assy
6	Neutral wire of power supply
7	Live wire of power supply
8	Communication wire
9	Overload input
10	Temperature sensor interface

- **Bottom view**

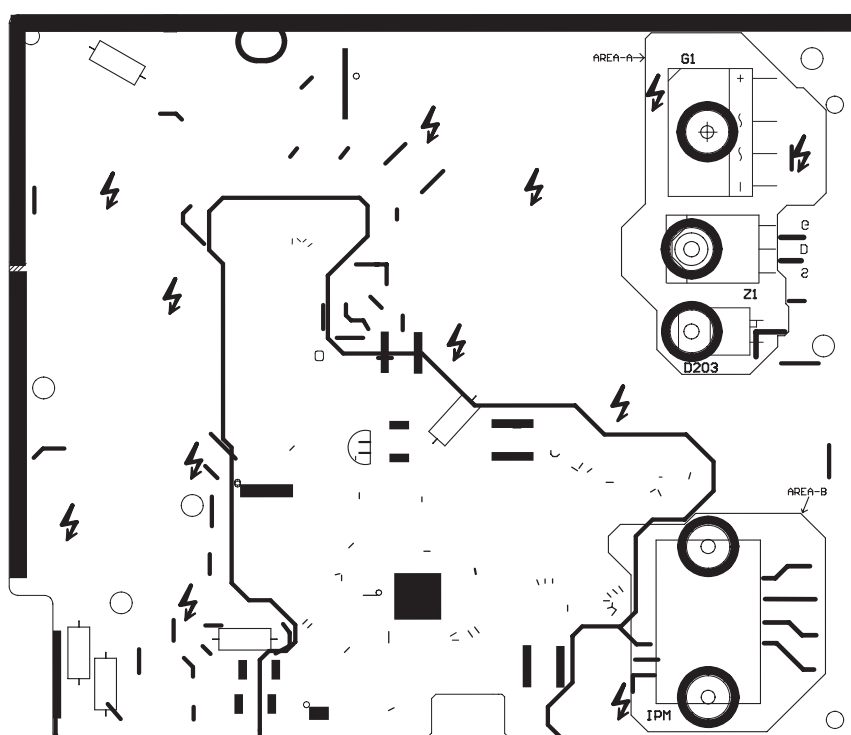


18K

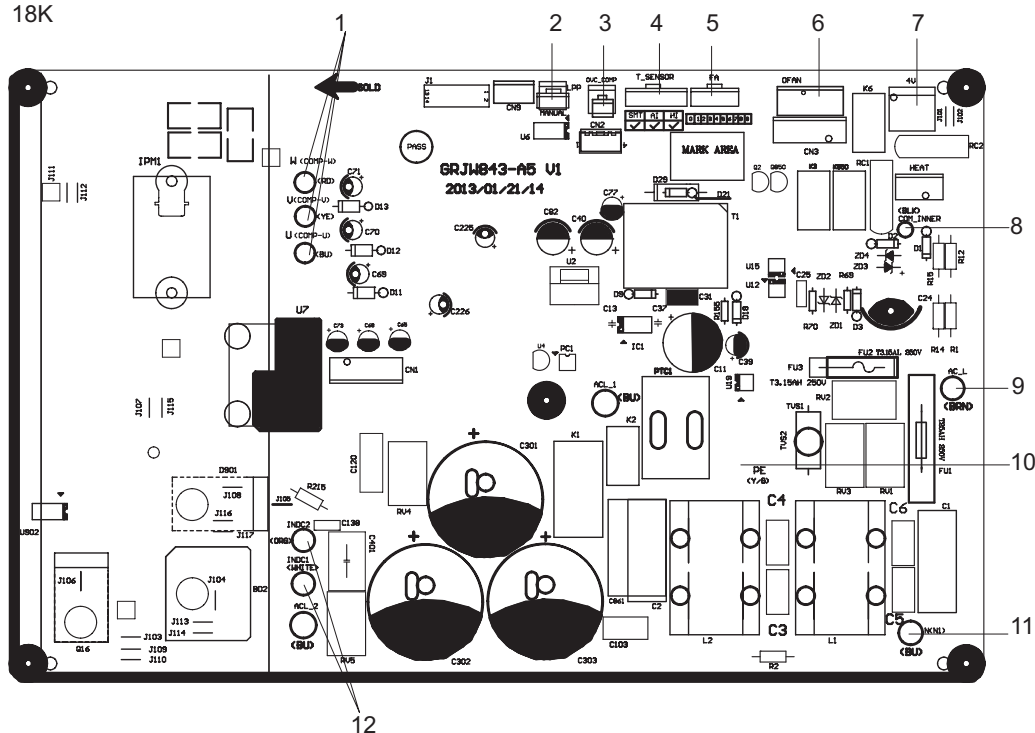

No.	Name
1	Terminal of compressor wire
2	Terminal of low pressure protection
3	Terminal of compressor overload protection
4	Terminal of outdoor temperature sensor
5	Terminal of electronic expansion valve
6	Terminal of outdoor fan
7	Terminal of 4-way valve
8	Wiring terminal of chassis electric heating
9	Power supply live wire
10	Earthing wire
11	Power supply neutral wire
12	PFC induction wire

- **Bottom view**

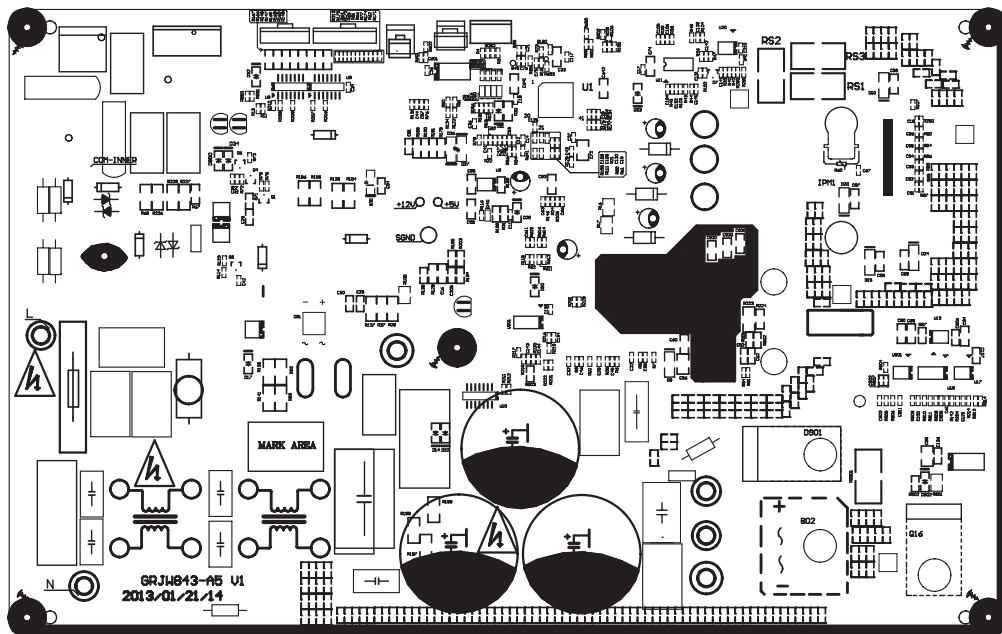


## 6. Function and Control

### 6.1 Remote Controller Introduction



#### Introduction for icons on display screen

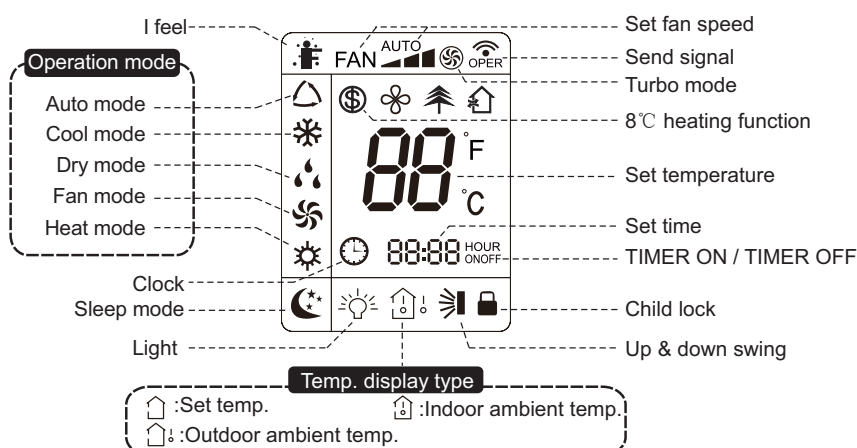


#### Introduction for buttons on remote controller

##### Note:

 
- After putting through the power, the air conditioner will give out a sound. Operation indicator "⏻" is ON (red indicator). After that, you can operate the air conditioner by using remote controller.
- Under on status, pressing the button on the remote controller, the signal icon "📶" on the display of remote controller will blink once and the air conditioner will give out a "de" sound, which means the signal has been sent to the air conditioner.
- Under off status, set temperature and clock icon will be displayed on the display of remote controller (If timer on, timer off and light functions are set, the corresponding icons will be displayed on the display of remote controller at the same time); Under on status, the display will show the corresponding set function icons.




### 1. ON/OFF button

Press this button can turn on or turn off the air conditioner. After turning on the air conditioner, operation indicator "  "on indoor unit's display is ON (green indicator. The colour is different for different models), and indoor unit will give out a sound.

### 2. MODE button

 Press this button to select your required operation mode.






 
- When selecting auto mode, air conditioner will operate automatically according to ex-factory setting. Set temperature can't be adjusted and will not be displayed as well. Press "FAN" button can adjust fan speed. Press "SWING" button can adjust fan blowing angle.
- After selecting cool mode, air conditioner will operate under cool mode. Cool indicator "  "on indoor unit is ON. Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting dry mode, the air conditioner operates at low speed under dry mode. Dry indicator "  " on indoor unit is ON. Under dry mode, fan speed can't be adjusted. Press "SWING" button to adjust fan blowing angle.
- When selecting fan mode, the air conditioner will only blow fan, no cooling and no heating. All indicators are OFF. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle.
- When selecting heating mode, the air conditioner operates under heat mode. Heat indicator "  " on indoor unit is ON. Press "▲" or "▼" button to adjust set temperature. Press "FAN" button to adjust fan speed. Press "SWING" button to adjust fan blowing angle. (Cooling only unit won't receive heating mode signal. If setting heat mode with remote controller, press ON/OFF button can't start up the unit).

#### Note:

- For preventing cold air, after starting up heating mode, indoor unit will delay 1~5 minutes to blow air (actual delay time is depend on indoor ambient temperature).
- Set temperature range from remote controller: 16~30℃ ; Fan speed: auto, low speed, medium speed, high speed.

### 3. FAN button

Pressing this button can set fan speed circularly as: auto (AUTO), low(  ), medium(  ), high(  ).

 



 
 
 
 
 

 
#### Caution:

- Under AUTO speed, air conditioner will select proper fan speed automatically according to ex-factory setting.
- Fan speed under dry mode is low speed.

### 4. SWING button

Press this button can select up&down swing angle. Fan blow angle can be selected circularly as below:





- When selecting "  ", air conditioner is blowing fan automatically. Horizontal louver will automatically swing up & down at maximum angle.
- When selecting "  ", "  ", "  ", air conditioner is blowing fan at fixed position. Horizontal louver will stop at the fixed position.
- When selecting "  ", "  ", "  ", air conditioner is blowing fan at fixed angle. Horizontal louver will send air at the fixed angle.
- Hold "  " button above 2s to set your required swing angle. When reaching your required angle, release the button.

#### Note:

- "  ", "  ", "  " may not be available. When air conditioner receives this signal, the air conditioner will blow fan automatically.

### 5. TURBO button

Under COOL or HEAT mode, press this button to turn to quick COOL or quick HEAT mode. "  " icon is displayed on remote controller. Press this button again to exit turbo function and "  " icon will disappear.

### 6. ▲/▼ button


- Press "▲" or "▼" button once increase or decrease set temperature 1℃ . Holding "▲" or "▼" button, 2s later, set temperature on remote controller will change quickly. On releasing button after setting is finished, temperature indicator on indoor unit will change accordingly. (Temperature can't be adjusted under auto mode)
- When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons) When setting TIMER ON, TIMER OFF or CLOCK, press "▲" or "▼" button to adjust time. (Refer to CLOCK, TIMER ON, TIMER OFF buttons)

## 7. SLEEP button

Under COOL, HEAT or DRY mode, press this button to start up sleep function. "☾" icon is displayed on remote controller. Press this button again to cancel sleep function and "☾" icon will disappear.

## 8. TEMP button

By pressing this button, you can see indoor set temperature, indoor ambient temperature or outdoor ambient temperature on indoor unit's display. The setting on remote controller is selected circularly as below:

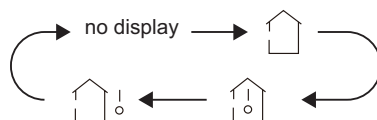

- When selecting "house icon" or no display with remote controller, temperature indicator on indoor unit displays set temperature.
- When selecting "house icon with thermometer" with remote controller, temperature indicator on indoor unit displays indoor ambient temperature.
- When selecting "house icon with thermometer and dot" with remote controller, temperature indicator on indoor unit displays outdoor ambient temperature.

### Note:

- Outdoor temperature display is not available for some models. At that time, indoor unit receives "house icon with thermometer" signal, while it displays indoor set temperature.
- It's defaulted to display set temperature when turning on the unit. There is no display in the remote controller.
- Only for the models whose indoor unit has dual-8 display.
- When selecting displaying of indoor or outdoor ambient temperature, indoor temperature indicator displays corresponding temperature and automatically turn to display set temperature after three or five seconds.

## 9. I FEEL button

Press this button to start I FEEL function and "I FEEL" icon will be displayed on the remote controller. After this function is set, the remote controller will send the detected ambient temperature to the controller and the unit will automatically adjust the indoor temperature according to the detected temperature. Press this button again to close I FEEL function and "I FEEL" icon will disappear.

- Please put the remote controller near user when this function is set. Do not put the remote controller near the object of high temperature or low temperature in order to avoid detecting inaccurate ambient temperature.

## 10. LIGHT button

Press this button to turn off display light on indoor unit. "light off" icon on remote controller disappears. Press this button again to turn on display light. "light on" icon is displayed.

## 11. CLOCK button

Press this button to set clock time. "clock" icon on remote controller will blink. Press "▲" or "▼" button within 5s to set clock time. Each pressing of "▲" or "▼" button, clock time will increase or decrease 1 minute. If hold "▲" or "▼" button, 2s later, time will change quickly. Release this button when reaching your required time. Press "CLOCK" button to confirm the time. "clock" icon stops blinking.

### Note:

- Clock time adopts 24-hour mode.
- The interval between two operation can't exceeds 5s. Otherwise, remote controller will quit setting status. Operation for TIMER ON/TIMER OFF is the same.

## 12. TIMER ON / TIMER OFF button

### • TIMER ON button

"TIMER ON" button can set the time for timer on. After pressing this button, "clock" icon disappears and the word "ON" on remote controller blinks. Press "▲" or "▼" button to adjust TIMER ON setting. After each pressing "▲" or "▼" button, TIMER ON setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER ON" to confirm it. The word "ON" will stop blinking. "clock" icon resumes displaying. Cancel TIMER ON: Under the condition that TIMER ON is started up, press "TIMER ON" button to cancel it.

### • TIMER OFF button

"TIMER OFF" button can set the time for timer off. After pressing this button, "clock" icon disappears and the word "OFF" on remote controller blinks. Press "▲" or "▼" button to adjust TIMER OFF setting. After each pressing "▲" or "▼" button, TIMER OFF setting will increase or decrease 1min. Hold "▲" or "▼" button, 2s later, the time will change quickly until reaching your required time. Press "TIMER OFF" word "OFF" will stop blinking. "clock" icon resumes displaying. Cancel TIMER OFF. Under the condition that TIMER OFF is started up, press "TIMER OFF" button to cancel it.

### Note:

- Under on and off status, you can set TIMER OFF or TIMER ON simultaneously.
- Before setting TIMER ON or TIMER OFF, please adjust the clock time.
- After starting up TIMER ON or TIMER OFF, set the constant circulating valid. After that, air conditioner will be turned on or turned off according to setting time. ON/OFF button has no effect on setting. If you don't need this function, please use remote controller to cancel it.

## Function introduction for combination buttons

### 1. Energy-saving function

Under cooling mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off energy-saving function. When energy-saving function is started up, "SE" will be shown on remote controller, and air conditioner will adjust the set temperature automatically according to ex-factory setting to reach to the best energy-saving effect. Press "TEMP" and "CLOCK" buttons simultaneously again to exit energy-saving function.

#### Note:

- Under energy-saving function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under energy-saving function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and energy-saving function can't operate at the same time. If energy-saving function has been set under cooling mode, press sleep button will cancel energy-saving function. If sleep function has been set under cooling mode, start up the energy-saving function will cancel sleep function.

### 2. 8℃ heating function

Under heating mode, press "TEMP" and "CLOCK" buttons simultaneously to start up or turn off 8℃ heating function. When this function is started up, "⊞" and "8℃" will be shown on remote controller, and the air conditioner keep the heating status at 8℃. Press "TEMP" and "CLOCK" buttons simultaneously again to exit 8℃ heating function.

#### Note:

- Under 8℃ heating function, fan speed is defaulted at auto speed and it can't be adjusted.
- Under 8℃ heating function, set temperature can't be adjusted. Press "TURBO" button and the remote controller won't send signal.
- Sleep function and 8℃ heating function can't operate at the same time. If 8℃ heating function has been set under cooling mode, press sleep button will cancel 8℃ heating function. If sleep function has been set under cooling mode, start up the 8℃ heating function will cancel sleep function.
- Under °F temperature display, the remote controller will display 46 °F heating.

### 3. Child lock function

Press "▲" and "▼" simultaneously to turn on or turn off child lock function. When child lock function is on, "🔒" icon is displayed on remote controller. If you operate the remote controller, the "🔒" icon will blink three times without sending signal to the unit.

### 4. Temperature display switchover function

Under OFF status, press "▼" and "MODE" buttons simultaneously to switch temperature display between °C and °F.

## Operation guide


1. After putting through the power, press "ON/OFF" button on remote controller to turn on the air conditioner.
2. Press "MODE" button to select your required mode: AUTO, COOL, DRY, FAN, HEAT.
3. Press "▲" or "▼" button to set your required temperature. (Temperature can't be adjusted under auto mode).
4. Press "FAN" button to set your required fan speed: auto, low, medium and high speed.
5. Press "SWING" button to select fan blowing angle.

## Replacement of batteries in remote controller

1. Press the back side of remote controller marked with "🔓", as shown in the fig, and then push out the cover of battery box along the arrow direction.
2. Replace two 7# (AAA 1.5V) dry batteries, and make sure the position of "+" polar and "-" polar are correct.
3. Reinstall the cover of battery box.

#### Note:

- During operation, point the remote control signal sender at the receiving window on indoor unit.
- The distance between signal sender and receiving window should be no more than 8m, and there should be no obstacles between them.
- Signal may be interfered easily in the room where there is fluorescent lamp or wireless telephone; remote controller should be close to indoor unit during operation.
- Replace new batteries of the same model when replacement is required.
- When you don't use remote controller for a long time, please take out the batteries.
- If the display on remote controller is fuzzy or there's no display, please replace batteries.

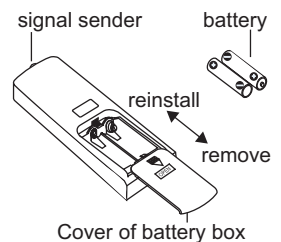

## 6.2 Brief Description of Modes and Functions

### 1. Basic function of system

#### (1) Cooling mode

- (1) Under this mode, fan and swing operates at setting status. Temperature setting range is 16~30°C.
- (2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.

#### (2) Drying mode

- (1) Under this mode, fan operates at low speed and swing operates at setting status. Temperature setting range is 16~30°C.
- (2) During malfunction of outdoor unit or the unit is stopped because of protection, indoor unit keeps original operation status.
- (3) Protection status is same as that under cooling mode.
- (4) Sleep function is not available for drying mode.

#### (3) Heating mode

- (1) Under this mode, Temperature setting range is 16~30°C.
- (2) Working condition and process for heating mode:

When turn on the unit under heating mode, indoor unit enters into cold air prevention status. When the unit is stopped or at OFF status, and indoor unit has been started up just now, the unit enters into residual heat-blowing status.

#### (4) Working method for AUTO mode:

- 1. Working condition and process for AUTO mode:
  - a. Under AUTO mode, standard heating  $T_{\text{preset}}=20^{\circ}\text{C}$  and standard cooling  $T_{\text{preset}}=25^{\circ}\text{C}$ . The unit will switch mode automatically according to ambient temperature.
- 2. Protection function
  - a. During cooling operation, protection function is same as that under cooling mode.
  - b. During heating operation, protection function is same as that under heating mode.
- 3. Display: Set temperature is the set value under each condition. Ambient temperature is ( $T_{\text{amb.}}-T_{\text{compensation}}$ ) for heat pump unit and  $T_{\text{amb.}}$  for cooling only unit.
- 4. If there's I feel function,  $T_{\text{compensation}}$  is 0. Others are same as above.

#### (5) Fan mode

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 16~30°C.

### 2. Other control

#### (1) Buzzer

Upon energization or availably operating the unit or remote controller, the buzzer will give out a beep.

#### (2) Auto button

If press this auto button when turning off the unit, the complete unit will operate at auto mode. Indoor fan operates at auto fan speed and swing function is turned on. Press this auto button at ON status to turn off the unit.

#### (3) Auto fan

Heating mode: During auto heating mode or normal heating mode, auto fan speed will adjust the fan speed automatically according to ambient temperature and set temperature.

#### (4) Sleep

After setting sleep function for a period of time, system will adjust set temperature automatically.

#### (5) Timer function:

General timer and clock timer functions are compatible by equipping remote controller with different functions.

#### (6) Memory function

memorize compensation temperature, off-peak energization value.

Memory content: mode, up&down swing, light, set temperature, set fan speed, general timer (clock timer can't be memorized).

After power recovery, the unit will be turned on automatically according to memory content.

#### (7) Health function

During operation of indoor fan, set health function by remote controller. Turn off the unit will also turn off health function.

Turn on the unit by pressing auto button, and the health is defaulted ON.



### (8) I feel control mode

After controller received I feel control signal and ambient temperature sent by remote controller, controller will work according to the ambient temperature sent by remote controller.

### (9) Compulsive Defrosting Function

(1) Start up compulsory defrosting function

Under ON status, set heating mode with remote controller and adjust the temperature to 16°C. Press "+, -, +, -, +, -" button successively within 5s and the complete unit will enter into compulsory defrosting status. Meanwhile, Indoor unit displays H1. (Note: If complete unit has malfunction or stops operation due to protection, compulsory defrosting function can be started up after malfunction or protection is resumed.

(2) Exit compulsory defrosting mode

After compulsory defrosting is started up, the complete unit will exit defrosting operation according to the actual defrosting result, and the complete unit will resume normal heating operation.

### (10) Refrigerant Recycling Function

(1) Enter refrigerant recycling function

Within 5min after energizing (unit ON or OFF status is ok), continuously press LIGHT button for 3 times within 3s to enter refrigerant recycling mode; Fo is displayed and refrigerant recycling function is started. At this moment, the maintenance people closes liquid valve. After 5min, stick the thimble of maintenance valve with a tool. If there is no refrigerant spraying out, close the gas valve immediately and then turn off the unit to remove the connection pipe.

(2) Exit refrigerant recycling function

After entering refrigerant recycling mode, when receive any remote control signal or enter refrigerant recycling mode for 25min, the unit will exit refrigerant recycling mode automatically. If the unit is in standby mode before refrigerant recycling, it will be still in standby mode after finishing refrigerant recycling; if the unit is in ON status before refrigerant recycling, it will still run in original operation mode.

### (11) Ambient temperature display control mode

1. When user set the remote controller to display set temperature (corresponding remote control code: 01), current set temperature will be displayed.

2. Only when remote control signal is switched to indoor ambient temperature display status (corresponding remote control code: 10) from other display status (corresponding remote control code: 00, 01, 11), controller will display indoor ambient temperature for 3s and then turn back to display set temperature.

Under this mode, indoor fan operates at set fan speed. Compressor, outdoor fan, 4-way valve and electric heating tube stop operation. Indoor fan can select to operate at high, medium, low or auto fan speed. Temperature setting range is 16~30°C.

### (12) Off-peak energization function

Adjust compressor's minimum stop time. The original minimum stop time is 180s and then we change to:

The time interval between two start-ups of compressor can't be less than  $180+T$  s ( $0 \leq T \leq 15$ ). T is the variable of controller. That's to say the minimum stop time of compressor is 180s~195s. Read-in T into memory chip when refurbish the memory chip each time. After power recovery, compressor can only be started up after  $180+T$  s at least.

### (13) SE control mode

The unit operates at SE status.

### (14) X-fan mode

When X-fan function is turned on, after turn off the unit, indoor fan will still operate at low speed for 2min and then the complete unit will be turned off. When x-fan function is turned off, after turn off the unit, the complete unit will be turned off directly.

### (15) 8° heating function

Under heating mode, you can set 8° heating function by remote controller. The system will operate at 8° set temperature.

### (16) Turbo function

Turbo function can be set under cooling and heating modes. Press Fan Speed button to cancel turbo setting. Turbo function is not available under auto, drying and fan modes.



# Part II : Installation and Maintenance

## 7. Notes for Installation and Maintenance

### Safety Precautions: Important!

Please read the safety precautions carefully before installation and maintenance.

The following contents are very important for installation and maintenance.

Please follow the instructions below.

- The installation or maintenance must accord with the instructions.
- Comply with all national electrical codes and local electrical codes.
- Pay attention to the warnings and cautions in this manual.
- All installation and maintenance shall be performed by distributor or qualified person.
- All electric work must be performed by a licensed technician according to local regulations and the instructions given in this manual.
- Be caution during installation and maintenance. Prohibit incorrect operation to prevent electric shock, casualty and other accidents.



### Warnings

#### Electrical Safety Precautions:

1. Cut off the power supply of air conditioner before checking and maintenance.
2. The air condition must apply specialized circuit and prohibit share the same circuit with other appliances.
3. The air conditioner should be installed in suitable location and ensure the power plug is touchable.
4. Make sure each wiring terminal is connected firmly during installation and maintenance.
5. Have the unit adequately grounded. The grounding wire can't be used for other purposes.
6. Must apply protective accessories such as protective boards, cable-cross loop and wire clip.
7. The live wire, neutral wire and grounding wire of power supply must be corresponding to the live wire, neutral wire and grounding wire of the air conditioner.
8. The power cord and power connection wires can't be pressed by hard objects.
9. If power cord or connection wire is broken, it must be replaced by a qualified person.

10. If the power cord or connection wire is not long enough, please get the specialized power cord or connection wire from the manufacture or distributor. Prohibit prolong the wire by yourself.

11. For the air conditioner without plug, an air switch must be installed in the circuit. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.

12. Make sure all wires and pipes are connected properly and the valves are opened before energizing.

13. Check if there is electric leakage on the unit body. If yes, please eliminate the electric leakage.

14. Replace the fuse with a new one of the same specification if it is burnt down; don't replace it with a cooper wire or conducting wire.

15. If the unit is to be installed in a humid place, the circuit breaker must be installed.

#### Installation Safety Precautions:

1. Select the installation location according to the requirement of this manual.(See the requirements in installation part)
2. Handle unit transportation with care; the unit should not be carried by only one person if it is more than 20kg.
3. When installing the indoor unit and outdoor unit, a sufficient fixing bolt must be installed; make sure the installation support is firm.
4. Wear safety belt if the height of working is above 2m.
5. Use equipped components or appointed components during installation.
6. Make sure no foreign objects are left in the unit after finishing installation.

#### Refrigerant Safety Precautions:


1. Avoid contact between refrigerant and fire as it generates poisonous gas; Prohibit prolong the connection pipe by welding.
2. Apply specified refrigerant only. Never have it mixed with any other refrigerant. Never have air remain in the refrigerant line as it may lead to rupture or other hazards.
3. Make sure no refrigerant gas is leaking out when installation is completed.
4. If there is refrigerant leakage, please take sufficient measure to minimize the density of refrigerant.
5. Never touch the refrigerant piping or compressor without wearing glove to avoid scald or frostbite.


Improper installation may lead to fire hazard, explosion, electric shock or injury.

<p>1. Level meter, measuring tape</p> 	<p>2. Screw driver</p> 	<p>3. Impact drill, drill head, electric drill</p> 
<p>4. Electroprobe</p> 	<p>5. Universal meter</p> 	<p>6. Torque wrench, open-end wrench, inner hexagon spanner</p> 
<p>7. Electronic leakage detector</p> 	<p>8. Vacuum pump</p> 	<p>9. Pressure meter</p> 
<p>10. Pipe pliers, pipe cutter</p> 	<p>11. Pipe expander, pipe bender</p> 	<p>12. Soldering appliance, refrigerant container</p> 

## 8. Installation

### 8.1 Installation Dimension Diagram

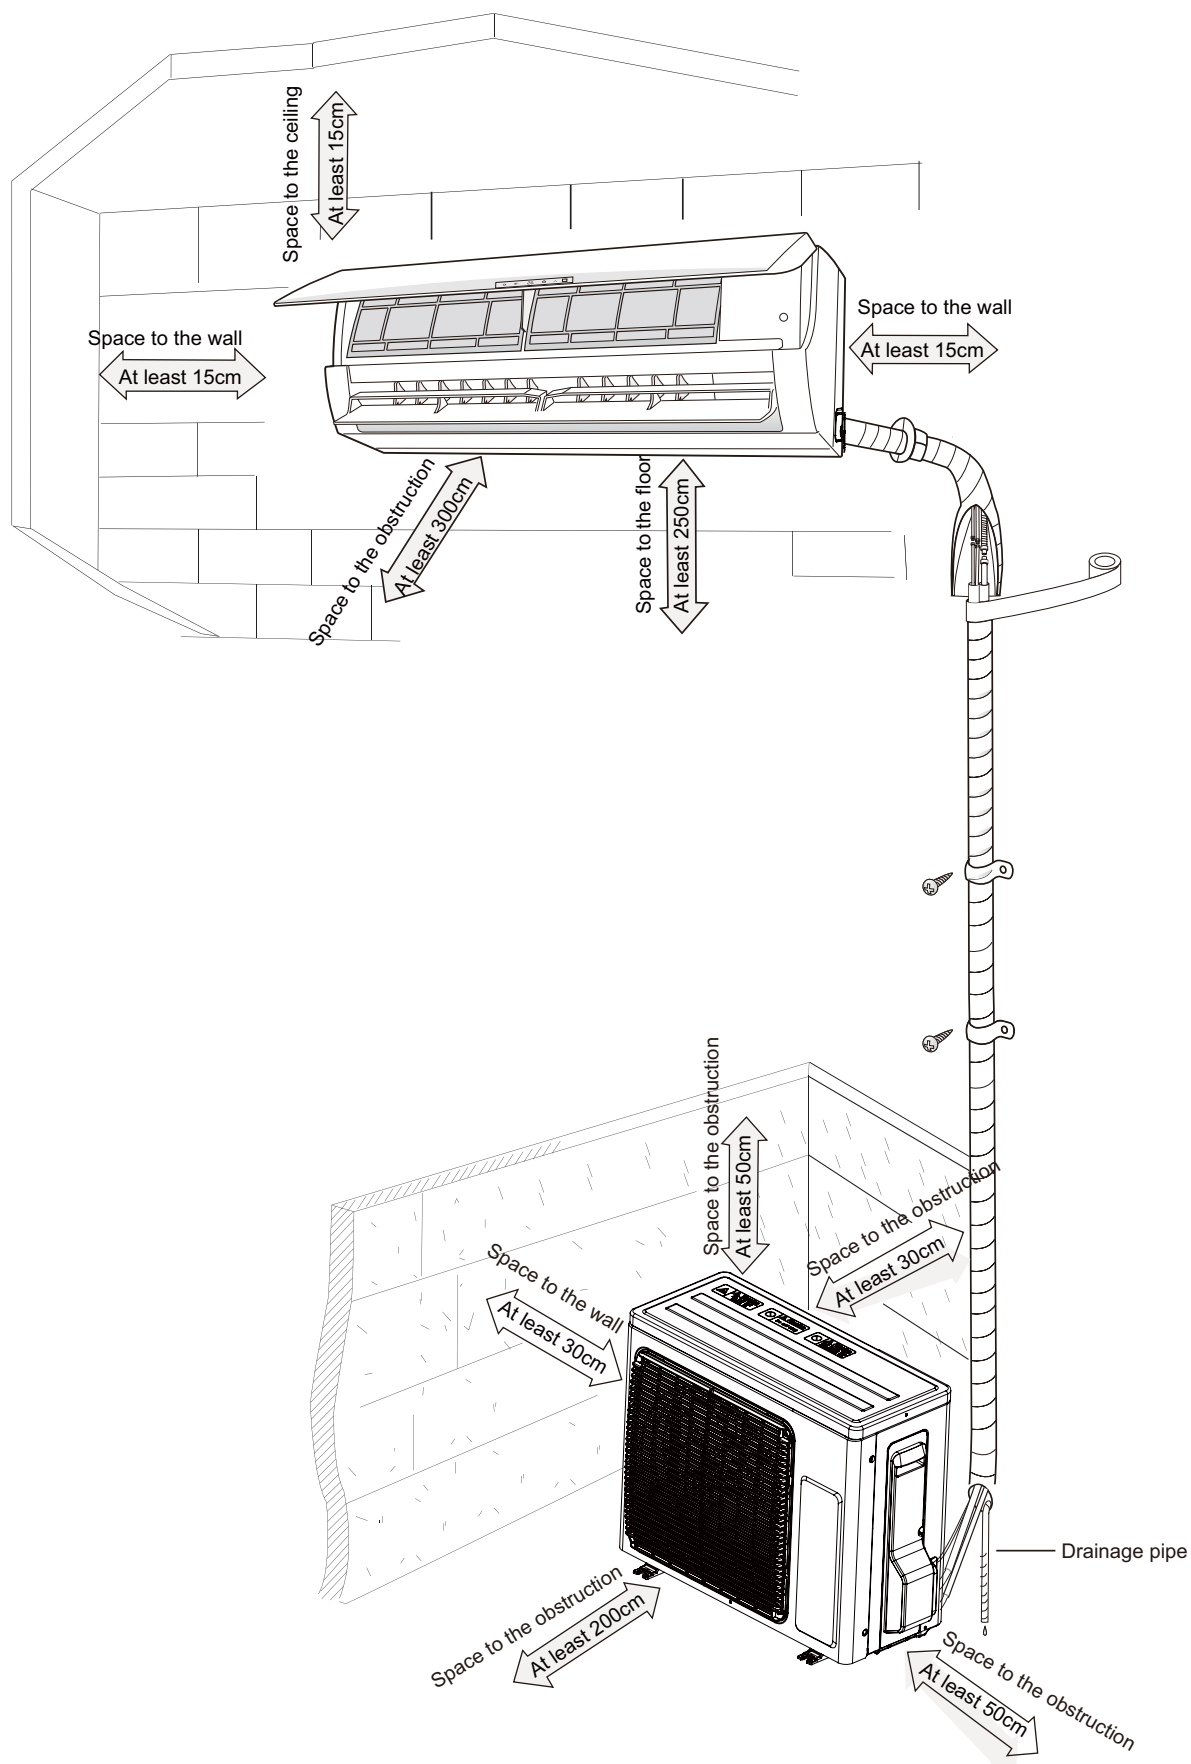

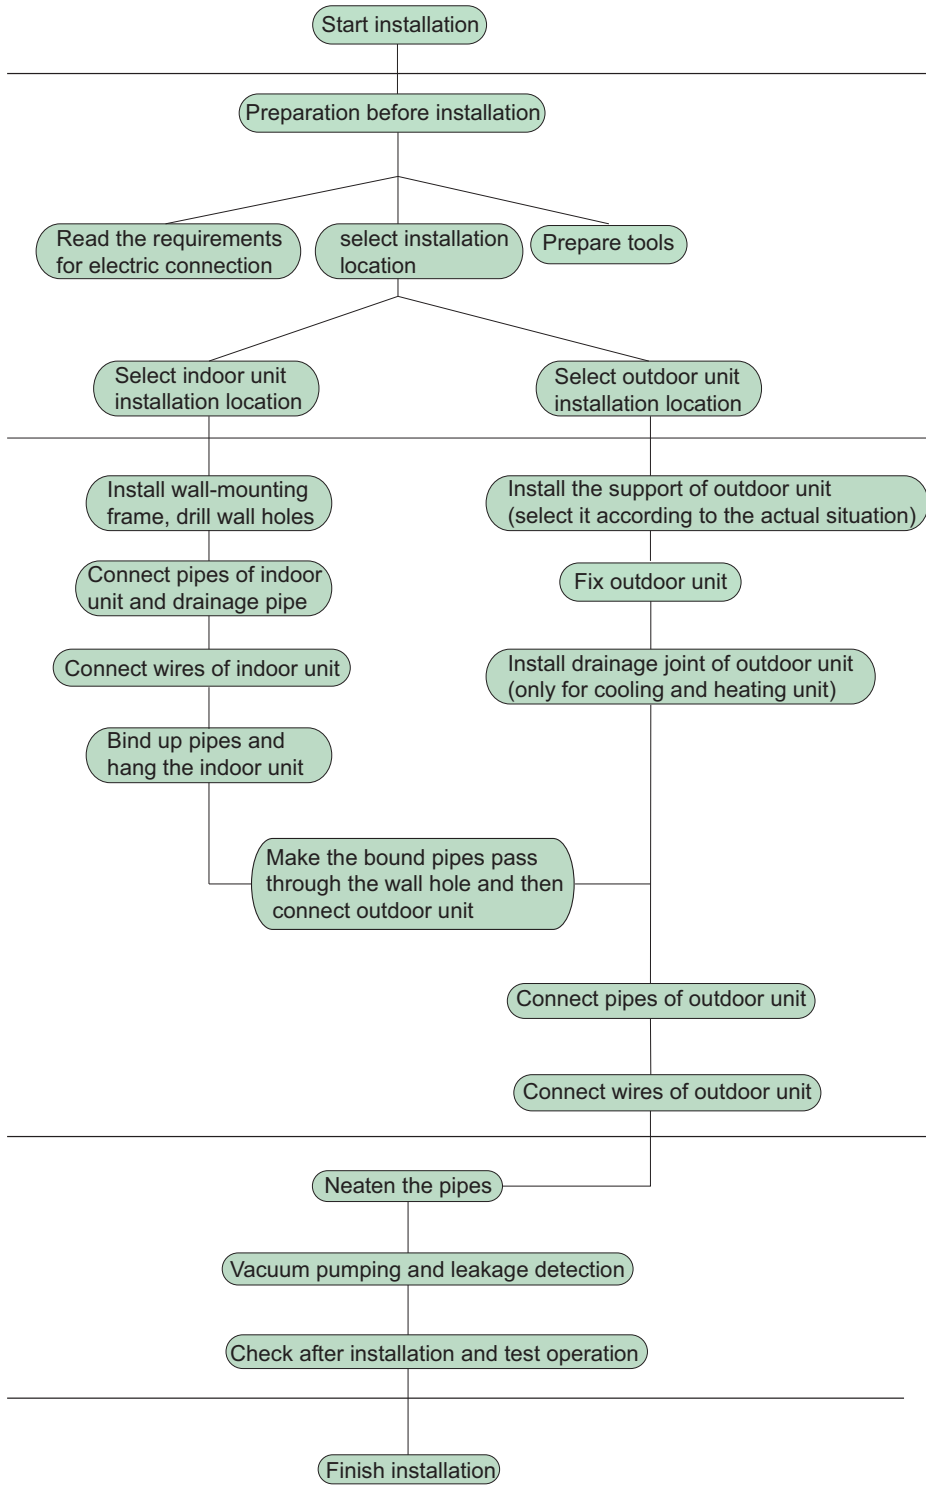

Note: this flow is only for reference; please find the more detailed installation steps in this section.

## 8.2 Installation Parts-checking

No.	Name	No.	Name
1	Indoor unit	8	Sealing gum
2	Outdoor unit	9	Wrapping tape
3	Connection pipe	10	Support of outdoor unit
4	Drainage pipe	11	Fixing screw
5	Wall-mounting frame	12	Drainage plug(cooling and heating unit)
6	Connecting cable(power cord)	13	Owner's manual, remote controller
7	Wall pipe		

### ⚠ Note:

- 1.Please contact the local agent for installation.
- 2.Don't use unqualified power cord.

## 8.3 Selection of Installation Location

### 1. Basic Requirement:

Installing the unit in the following places may cause malfunction. If it is unavoidable, please consult the local dealer:

- (1) The place with strong heat sources, vapors, flammable or explosive gas, or volatile objects spread in the air.
- (2) The place with high-frequency devices (such as welding machine, medical equipment).
- (3) The place near coast area.
- (4) The place with oil or fumes in the air. in the air.
- (5) The place with sulfured gas.
- (6) Other places with special circumstances.
- (7) The appliance shall not be installed in the laundry.

### 2. Indoor Unit:

- (1) There should be no obstruction near air inlet and air outlet.
- (2) Select a location where the condensation water can be dispersed easily and won't affect other people.
- (3) Select a location which is convenient to connect the outdoor unit and near the power socket.
- (4) Select a location which is out of reach for children.
- (5) The location should be able to withstand the weight of indoor unit and won't increase noise and vibration.
- (6) The appliance must be installed 2.5m above floor.
- (7) Don't install the indoor unit right above the electric appliance.
- (8) Please try your best to keep away from fluorescent lamp.

### 3. Outdoor unit:

- 1.Select a location where the noise and outflow air emitted by the outdoor unit will not affect neighborhood.
- 2.The location should be well ventilated and dry, in which the outdoor unit won't be exposed directly to sunlight or strong wind.
- 3.The location should be able to withstand the weight of outdoor unit.
- 4.Make sure that the installation follows the requirement of installation dimension diagram.
- 5.Select a location which is out of reach for children and far away from animals or plants.If it is unavoidable, please add fence for safety purpose.

## 8.4 Electric Connection Requirement

### 1. Safety precaution

- (1) Must follow the electric safety regulations when installing the unit.
- (2) According to the local safety regulations, use qualified power supply circuit and air switch.
- (3) Make sure the power supply matches with the requirement of air conditioner. Unstable power supply or incorrect wiring may result in electric shock, fire hazard or malfunction. Please install proper power supply cables before using the air conditioner.

Air-conditioner	Air switch capacity
09K/12K/18K	16A

- (4) Properly connect the live wire, neutral wire and grounding wire of power socket.
- (5) Be sure to cut off the power supply before proceeding any work related to electricity and safety.
- (6) Do not put through the power before finishing installation.
- (7) For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- (8) The temperature of refrigerant circuit will be high, please keep the interconnection cable away from the copper tube.
- (9) The appliance shall be installed in accordance with national wiring regulations.

### 2. Grounding requirement:

- (1) The air conditioner is first class electric appliance. It must be properly grounded with specialized grounding device by a professional. Please make sure it is always grounded effectively, otherwise it may cause electric shock.
- (2) The yellow-green wire in air conditioner is grounding wire, which can't be used for other purposes.
- (3) The grounding resistance should comply with national electric safety regulations.
- (4) The appliance must be positioned so that the plug is accessible
- (5) An all-pole disconnection switch having a contact separation of at least 3mm in all poles should be connected in fixed wiring.
- (6) Including an air switch with suitable capacity, please note the following table. Air switch should be included magnet buckle and heating buckle function, it can protect the circuit-short and overload. (Caution: please do not use the fuse only for protect the circuit)

## 8.5 Installation of Indoor Unit

### 1. Choosing Installation location

Recommend the installation location to the client and then confirm it with the client.

### 2. Install Wall-mounting Frame

- (1) Hang the wall-mounting frame on the wall; adjust it in horizontal position with the level meter and then point out the screw fixing holes on the wall.
- (2) Drill the screw fixing holes on the wall with impact drill (the specification of drill head should be the same as the plastic expansion particle) and then fill the plastic expansion particles


in the holes.

(3) Fix the wall-mounting frame on the wall with tapping screws (ST4.2X25TA) and then check if the frame is firmly installed by pulling the frame. If the plastic expansion particle is loose, please drill another fixing hole nearby.


### 3. Install Wall-mounting Frame

(1) Choose the position of piping hole according to the direction of outlet pipe. The position of piping hole should be a little lower than the wall-mounted frame.(As show in Fig.1)

09K:

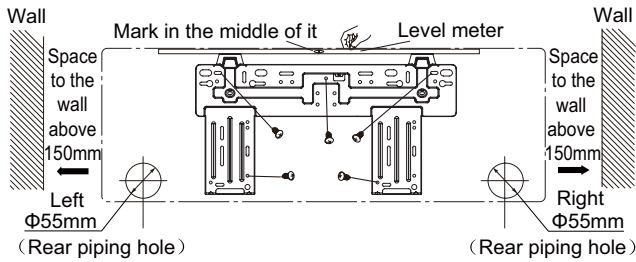

12K:

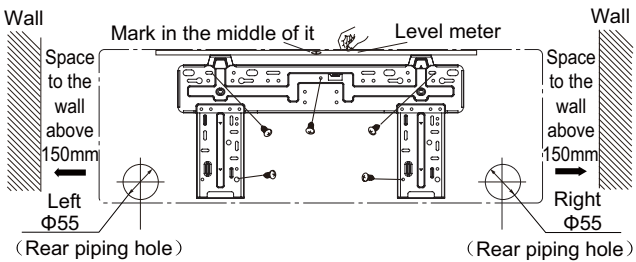

18K:

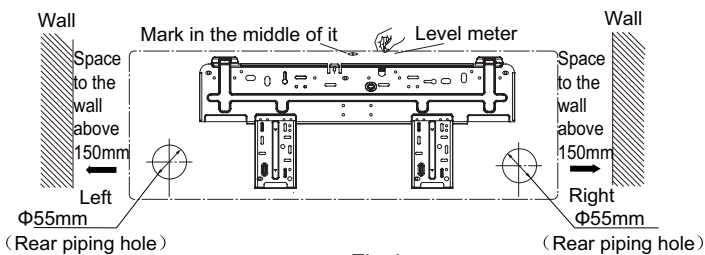


Fig.1

(2) Open a piping hole with the diameter of Φ55 on the selected outlet pipe position. In order to drain smoothly, slant the piping hole on the wall slightly downward to the outdoor side with the gradient of 5-10°. (As show in Fig.2)

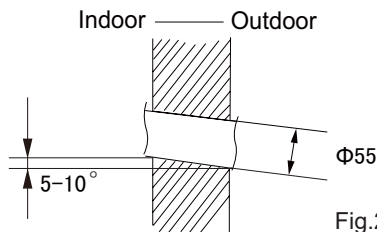


Fig.2

#### ⚠ Note:

- (1) Pay attention to dust prevention and take relevant safety measures when opening the hole.
- (2) The plastic expansion particles are not provided and should be bought locally.

### 4. Outlet pipe

(1) The pipe can be led out in the direction of right, rear right, left or rear left. (As show in Fig.3)

(2) When selecting leading out the pipe from left or right, please cut off the corresponding hole on the bottom case. (As show in Fig.4)

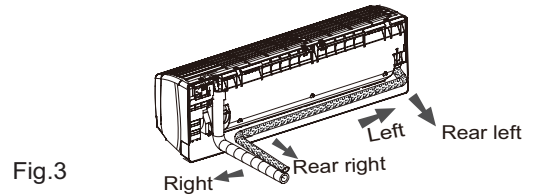


Fig.3

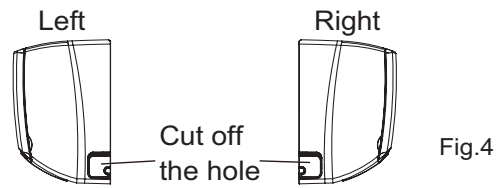


Fig.4

### 5. Connect the Pipe of Indoor Unit

(1) Aim the pipe joint at the corresponding bellmouth. (As show in Fig.5)

(2) Pretightening the union nut with hand.

(3) Adjust the torque force by referring to the following sheet. Place the open-end wrench on the pipe joint and place the torque wrench on the union nut. Tighten the union nut with torque wrench. (As show in Fig.6)

(4) Wrap the indoor pipe and joint of connection pipe with insulating pipe, and then wrap it with tape. (As show in Fig.7)

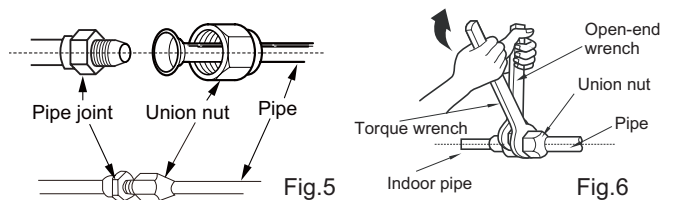


Fig.5

Fig.6

 


Fig.7

Refer to the following table for wrench moment of force:

Hex nut diameter(mm)	Tightening torque(N.m)
Φ6	15~20
Φ9.52	30~40
Φ12	45~55
Φ16	60~65
Φ19	70~75

### 6. Install Drain Hose

(1) Connect the drain hose to the outlet pipe of indoor unit. (As show in Fig.8)

(2) Bind the joint with tape. (As show in Fig.9)



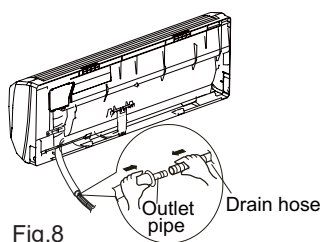


Fig.8

### Note:

- (1) Add insulating pipe in the indoor drain hose in order to prevent condensation.
- (2) The plastic expansion particles are not provided. (As show in Fig.10)

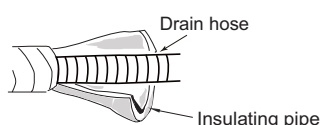


Fig.10

## 7. Connect Wire of Indoor Unit

- (1) Open the panel, remove the screw on the wiring cover and then take down the cover.(As show in Fig.11)

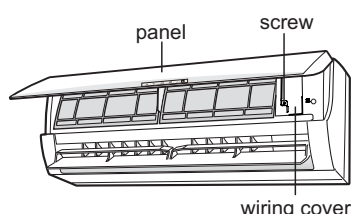


Fig.11

- (2) Make the power connection wire go through the cable-cross hole at the back of indoor unit and then pull it out from the front side.(As show in Fig.12)


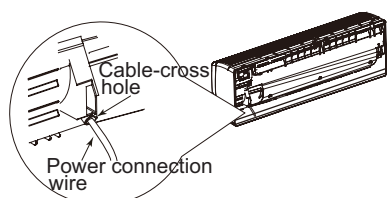


Fig.12

- (3) Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; tighten the screw and then fix the power connection wire with wire clip.(As show in Fig.13)

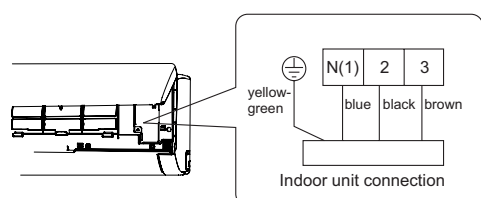

Note: the wiring board is for reference only, please refer to the actual one.

Fig.13

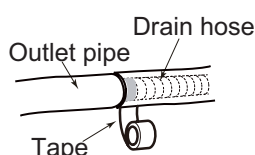


Fig.9

- (4) Put wiring cover back and then tighten the screw.
- (5) Close the panel.

### Note:

- (1) All wires of indoor unit and outdoor unit should be connected by a professional.
- (2) If the length of power connection wire is insufficient, please contact the supplier for a new one. Avoid extending the wire by yourself.
- (3) For the air conditioner with plug, the plug should be reachable after finishing installation.
- (4) For the air conditioner without plug, an air switch must be installed in the line. The air switch should be all-pole parting and the contact parting distance should be more than 3mm.

## 8. Bind up Pipe

- (1) Bind up the connection pipe, power cord and drain hose with the band.(As show in Fig.14)
- (2) Reserve a certain length of drain hose and power cord for installation when binding them. When binding to a certain degree, separate the indoor power and then separate the drain hose.(As show in Fig.15)
- (3) Bind them evenly.
- (4) The liquid pipe and gas pipe should be bound separately at the end.

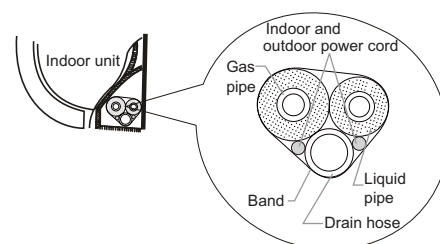


Fig.14

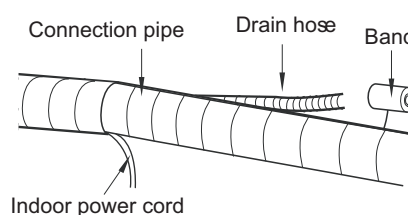


Fig.15

### Note:

- (1) The power cord and control wire can't be crossed or winding.
- (2) The drain hose should be bound at the bottom.

9. Hang the Indoor Unit

- (1) Put the bound pipes in the wall pipe and then make them pass through the wall hole.
- (2) Hang the indoor unit on the wall-mounting frame.
- (3) Stuff the gap between pipes and wall hole with sealing gum.
- (4) Fix the wall pipe.(As show in Fig.16)
- (5) Check if the indoor unit is installed firmly and closed to the wall.(As show in Fig.17)

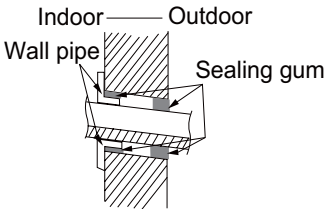


Fig.16

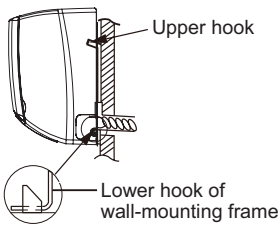


Fig.17

⚠ Note:

Do not bend the drain hose too excessively in order to prevent blocking.

8.6 Installation of Outdoor Unit

1. Fix the support of outdoor unit(select it according to the actual installation situation)

- (1) Select installation location according to the house structure.
- (2) Fix the support of outdoor unit on the selected location with expansion screws.

⚠ Note:

- (1) Take sufficient protective measures when installing the outdoor unit.
- (2) Make sure the support can withstand at least four times the unit weight.
- (3) The outdoor unit should be installed at least 3cm above the floor in order to install drain joint.(As show in Fig.18)
- (4) For the unit with cooling capacity of 2300W~5000W, 6 expansion screws are needed; for the unit with cooling capacity of 6000W~8000W, 8 expansion screws are needed; for the unit with cooling capacity of 10000W~16000W, 10 expansion screws are needed.

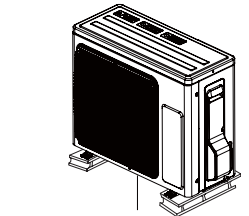


Fig.18

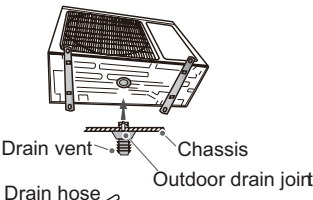


Fig.19

2. Install Drain Joint(Only for cooling and heating unit)

- (1) Connect the outdoor drain joint into the hole on the chassis.
- (2) Connect the drain hose into the drain vent.
- (As show in Fig.19)

3. Fix Outdoor Unit

- (1) Place the outdoor unit on the support.
- (2) Fix the foot holes of outdoor unit with bolts.
- (As show in Fig.20)

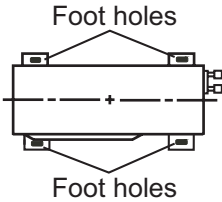


Fig.20

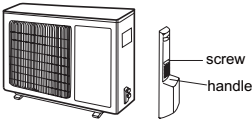


Fig.21

4. Fix Outdoor Unit

- (1) Remove the screw on the right handle of outdoor unit and then remove the handle.(As show in Fig.21)
- (2) Remove the screw cap of valve and aim the pipe joint at the bellmouth of pipe.(As show in Fig.22)

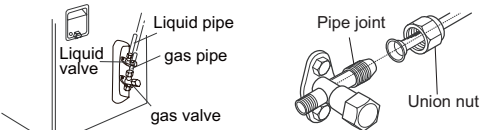


Fig.22



- (3) Pretightening the union nut with hand.
- (4) Tighten the union nut with torque wrench .

Refer to the following table for wrench moment of force:

Hex nut diameter(mm)	Tightening torque(N.m)
Φ6	15~20
Φ9.52	30~40
Φ12	45~55
Φ16	60~65
Φ19	70~75

5. Connect Outdoor Electric Wire

- (1) Remove the wire clip; connect the power connection wire to the wiring terminal according to the color; fix them with screws.
- (As show in Fig.23)

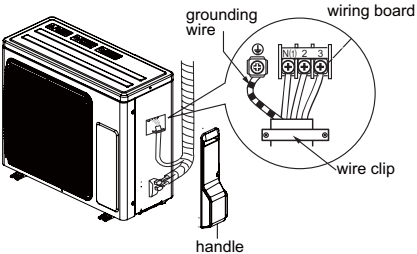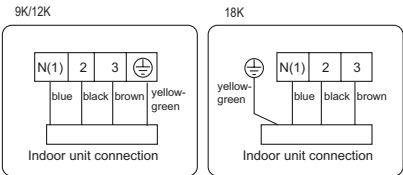

Note: the wiring board is for reference only, please refer to the actual one.

Fig.23

- (2) Fix the power connection wire clip.

⚠ Note:


- (1) After tightening the screw, pull the power cord slightly to check if it is firm.
- (2) Never cut the power connection wire to prolong or shorten the distance.



## 6. Neaten the Pipes


(1) The pipes should be placed along the wall, bent reasonably and hidden possibly. Min. semidiameter of bending the pipe is 10cm.

(2) If the outdoor unit is higher than the wall hole, you must set a U-shaped curve in the pipe before pipe goes into the room, in order to prevent rain from getting into the room.(As show in Fig.24)

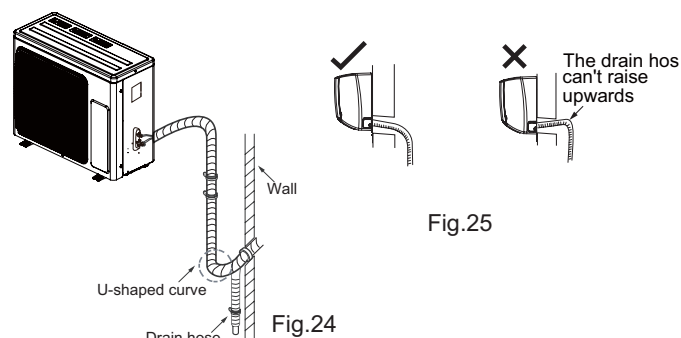

### ⚠ Note:


- (1) The through-wall height of drain hose shouldn't be higher than the outlet pipe hole of indoor unit.(As show in Fig.25)
- (2) Slant the drain hose slightly downwards. The drain hose can't be curved, raised and fluctuant, etc.(As show in Fig.26)
- (3) The water outlet can't be placed in water in order to drain smoothly.(As show in Fig.27)

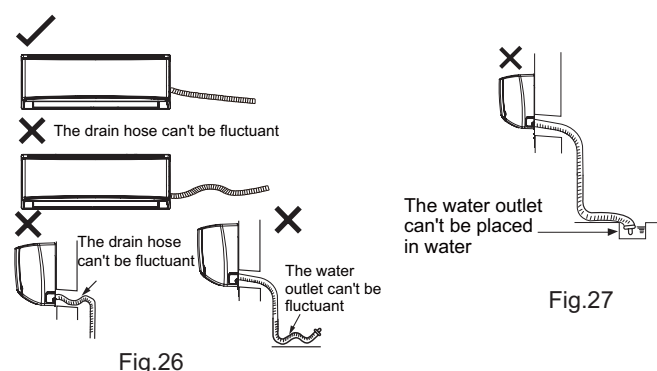

## 8.7 Vacuum Pumping and Leak Detection

### 1. Use Vacuum Pump

- (1) Remove the valve caps on the liquid valve and gas valve and the nut of refrigerant charging vent.
- (2) Connect the charging hose of piezometer to the refrigerant charging vent of gas valve and then connect the other charging hose to the vacuum pump.
- (3) Open the piezometer completely and operate for 10-15min to check if the pressure of piezometer remains in -0.1MPa.
- (4) Close the vacuum pump and maintain this status for 1-2min to check if the pressure of piezometer remains in -0.1MPa. If the pressure decreases, there may be leakage.
- (5) Remove the piezometer, open the valve core of liquid valve and gas valve completely with inner hexagon spanner.
- (6) Tighten the screw caps of valves and refrigerant charging vent.(As show in Fig.28)

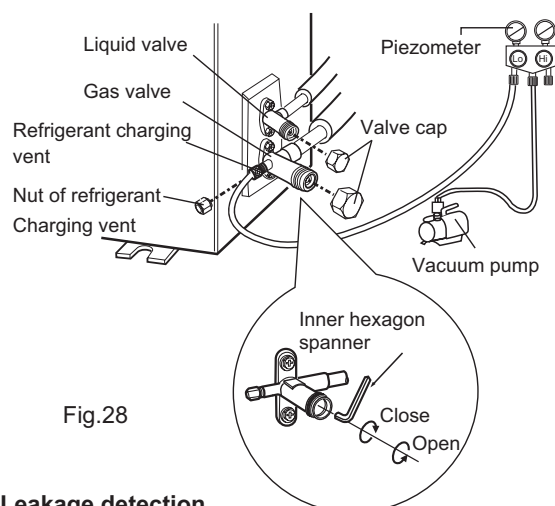

### 2. Leakage detection

- (1) With leakage detector:  
Check if there is leakage with leakage detector.
- (2) With soap water:

If leakage detector is not available, please use soap water for leakage detection. Apply soap water at the suspected position and keep the soap water for more than 3min. If there are air bubbles coming out of this position, there's a leakage.

## 8.8 Check after Installation and Test Operation

### 1. Check after Installation

Check according to the following requirement after finishing installation.

NO.	Items to be checked	Possible malfunction
1	Has the unit been installed firmly?	The unit may drop, shake or emit noise.
2	Have you done the refrigerant leakage test?	It may cause insufficient cooling (heating) capacity.
3	Is heat insulation of pipeline sufficient?	It may cause condensation and water dripping.
4	Is water drained well?	It may cause condensation and water dripping.
5	Is the voltage of power supply according to the voltage marked on the nameplate?	It may cause malfunction or damage the parts.
6	Is electric wiring and pipeline installed correctly?	It may cause malfunction or damage the parts.
7	Is the unit grounded securely?	It may cause electric leakage.
8	Does the power cord follow the specification?	It may cause malfunction or damage the parts.
9	Is there any obstruction in air inlet and air outlet?	It may cause insufficient cooling (heating).
10	The dust and sundries caused during installation are removed?	It may cause malfunction or damaging the parts.
11	The gas valve and liquid valve of connection pipe are open completely?	It may cause insufficient cooling (heating) capacity.

## **2. Test operation**

### **(1) Preparation of test operation**

- The client approves the air conditioner installation.
- Specify the important notes for air conditioner to the client.

### **(2) Method of test operation**

- Put through the power, press ON/OFF button on the remote controller to start operation.
- Press MODE button to select AUTO, COOL, DRY, FAN and HEAT to check whether the operation is normal or not.
- If the ambient temperature is lower than 16°C , the air conditioner can't start cooling.

## 9. Maintenance

### 9.1 Error Code List

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
1	High pressure protection of system	E1	OFF 3s and blink once						During cooling and drying operation, except indoor fan operates, all loads stop operation. During heating operation, the complete unit stops.	Possible reasons: 1. Refrigerant was superabundant; 2. Poor heat exchange (including filth blockage of heat exchanger and bad radiating environment ); Ambient temperature is too high.
2	Antifreezing protection	E2	OFF 3S and blink twice			OFF 3S and blink 3 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates.	1. Poor air-return in indoor unit; 2. Fan speed is abnormal; 3. Evaporator is dirty.
3	System block or refrigerant leakage	E3	OFF 3S and blink 3 times				OFF 3S and blink 9 times		The Dual-8 Code Display will show E3 until the low pressure switch stop operation.	1.Low-pressure protection 2.Low-pressure protection of system 3.Low-pressure protection of compressor
4	High discharge temperature protection of compressor	E4	OFF 3S and blink 4 times			OFF 3S and blink 7 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates. During heating operation, all loads stop.	Please refer to the malfunction analysis (discharge protection, overload).
5	Overcurrent protection	E5	OFF 3S and blink 5 times			OFF 3S and blink 5 times			During cooling and drying operation, compressor and outdoor fan stop while indoor fan operates. During heating operation, all loads stop.	1. Supply voltage is unstable; 2. Supply voltage is too low and load is too high; 3. Evaporator is dirty.
6	Communication Malfunction	E6	OFF 3S and blink 6 times					OFF	During cooling operation, compressor stops while indoor fan motor operates. During heating operation, the complete unit stops.	Refer to the corresponding malfunction analysis.
7	High temperature resistant protection	E8	OFF 3S and blink 8 times			OFF 3S and blink 6 times			During cooling operation: compressor will stop while indoor fan will operate. During heating operation, the complete unit stops.	Refer to the malfunction analysis (overload, high temperature resistant).
8	EEPROM malfunction	EE			OFF 3S and blink 15 times	OFF 3S and blink 11 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
9	Limit/ decrease frequency due to high temperature of module	EU		OFF 3S and blink 6 times	OFF 3S and blink 6 times				All loads operate normally, while operation frequency for compressor is decreased	Discharging after the complete unit is de-energized for 20mins, check whether the thermal grease on IPM Module of outdoor control panel AP1 is sufficient and whether the radiator is inserted tightly. If its no use, please replace control panel AP1.
10	Malfunction protection of jumper cap	C5	OFF 3S and blink 15 times						Wireless remote receiver and button are effective, but can not dispose the related command	1. No jumper cap insert on mainboard. 2. Incorrect insert of jumper cap. 3. Jumper cap damaged. 4. Abnormal detecting circuit of mainboard.

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
11	Gathering refrigerant	F0	OFF 3S and blink 1 times	OFF 3S and blink 1 times					When the outdoor unit receive signal of Gathering refrigerant ,the system will be forced to run under cooling mode for gathering refrigerant	Nominal cooling mode
12	Indoor ambient temperature sensor is open/short circuited	F1		OFF 3S and blink once					During cooling and drying operation, indoor unit operates while other loads will stop; during heating operation, the complete unit will stop operation.	1. Loosening or bad contact of indoor ambient temp. sensor and mainboard terminal. 2. Components in mainboard fell down leads short circuit. 3. Indoor ambient temp. sensor damaged.(check with sensor resistance value chart) 4. Mainboard damaged.
13	Indoor evaporator temperature sensor is open/short circuited	F2		OFF 3S and blink twice					AC stops operation once reaches the setting temperature. Cooling, drying: internal fan motor stops operation while other loads stop operation; heating: AC stop operation	1. Loosening or bad contact of Indoor evaporator temp. sensor and mainboard terminal. 2. Components on the mainboard fall down leads short circuit. 3. Indoor evaporator temp. sensor damaged.(check temp. sensor value chart for testing) 4. Mainboard damaged.
14	Outdoor ambient temperature sensor is open/short circuited	F3		OFF 3S and blink 3 times			OFF 3S and blink 6 times		During cooling and drying operating, compressor stops while indoor fan operates; During heating operation, the complete unit will stop operation	Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor)
15	Outdoor condenser temperature sensor is open/short circuited	F4		OFF 3S and blink 4 times			OFF 3S and blink 5 times		During cooling and drying operation, compressor stops while indoor fan will operate; During heating operation, the complete unit will stop operation.	Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor)
16	Outdoor discharge temperature sensor is open/short circuited	F5		OFF 3S and blink 5 times			OFF 3S and blink 7 times		During cooling and drying operation, compressor will sop after operating for about 3 mins, while indoor fan will operate; During heating operation, the complete unit will stop after operating for about 3 mins.	1.Outdoor temperature sensor hasnt been connected well or is damaged. Please check it by referring to the resistance table for temperature sensor) 2.The head of temperature sensor hasnt been inserted into the copper tube
17	Limit/ decrease frequency due to overload	F6		OFF 3S and blink for 6 times			OFF 3S and blink 3 times		All loads operate normally, while operation frequency for compressor is decreased	Refer to the malfunction analysis (overload, high temperature resistant)
18	Decrease frequency due to overcurrent	F8		OFF 3S and blink 8 times			OFF 3S and blink once		All loads operate normally, while operation frequency for compressor is decreased	The input supply voltage is too low; System pressure is too high and overload

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
19	Decrease frequency due to high air discharge	F9		OFF 3S and blink 9 times			OFF 3S and blink twice		All loads operate normally, while operation frequency for compressor is decreased	Overload or temperature is too high; Refrigerant is insufficient; Malfunction of electric expansion valve (EKV)
20	Limit/ decrease frequency due to antifreezing	FH		OFF 3S and blink 2 times	OFF 3S and blink 2 times		OFF 3S and blink 4 times		All loads operate normally, while operation frequency for compressor is decreased	Poor air-return in indoor unit or fan speed is too low
21	Voltage for DC bus-bar is too high	PH		OFF 3S and blink 11 times		OFF 3S and blink 13 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	1. Measure the voltage of position L and N on wiring board (XT), if the voltage is higher than 265VAC, turn on the unit after the supply voltage is increased to the normal range. 2.If the AC input is normal, measure the voltage of electrolytic capacitor C on control panel (AP1), if its normal, theres malfunction for the circuit, please replace the control panel (AP1)
22	Voltage of DC bus-bar is too low	PL			OFF 3S and blink 21 times	OFF 3S and blink 12 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	1. Measure the voltage of position L and N on wiring board (XT), if the voltage is higher than 150VAC, turn on the unit after the supply voltage is increased to the normal range. 2.If the AC input is normal, measure the voltage of electrolytic capacitor C on control panel (AP1), if its normal, theres malfunction for the circuit, please replace the control panel (AP1)
23	Compressor Min frequency in test state	P0								Showing during min. cooling or min. heating test
24	Compressor rated frequency in test state	P1								Showing during nominal cooling or nominal heating test
25	Compressor maximum frequency in test state	P2								Showing during max. cooling or max. heating test


NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
26	Compressor intermediate frequency in test state	P3								Showing during middle cooling or middle heating test
27	Overcurrent protection of phase current for compressor	P5		OFF 3S and blink 15 times					During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
28	Charging malfunction of capacitor	PU			OFF 3S and blink 17 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Refer to the part three—charging malfunction analysis of capacitor
29	Malfunction of module temperature sensor circuit	P7			OFF 3S and blink 18 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
30	Module high temperature protection	P8			OFF 3S and blink 19 times				During cooling operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	After the complete unit is de-energized for 20mins, check whether the thermal grease on IPM Module of outdoor control panel AP1 is sufficient and whether the radiator is inserted tightly. If its no use, please replace control panel AP1.
31	Overload protection for compressor	H3			OFF 3S and blink 3 times	OFF 3S and blink 8 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	1. Wiring terminal OVC-COMP is loosened. In normal state, the resistance for this terminal should be less than 1ohm. 2.Refer to the malfunction analysis (discharge protection, overload)
32	IPM protection	H5			OFF 3S and blink 5 times	OFF 3S and blink 4 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
33	Module temperature is too high	H5			OFF 3S and blink 5 times	OFF 3S and blink 10 times				

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
34	Internal motor (fan motor) do not operate	H6	OFF 3S and blink 11 times						Internal fan motor, external fan motor, compressor and electric heater stop operation,guide louver stops at present location.	1. Bad contact of DC motor feedback terminal. 2. Bad contact of DC motor control end. 3. Fan motor is stalling. 4. Motor malfunction. 5. Malfunction of mainboard rev detecting circuit.
35	Desynchronizing of compressor	H7			OFF 3S and blink 7 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis (IPM protection, loss of synchronism protection and overcurrent protection of phase current for compressor.
36	PFC protection	HC			OFF 3S and blink 6 times	OFF 3S and blink 14 times			During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis
37	Outdoor DC fan motor malfunction	L3	OFF 3S and blink 23 times				OFF 3S and blink 14 times		Outdoor DC fan motor malfunction lead to compressor stop operation,	DC fan motor malfunction or system blocked or the connector loosed
38	power protection	L9	OFF 3S and blink 20 times			OFF 3S and blink 9 times			compressor stop operation and Outdoor fan motor will stop 30s latter , 3 minutes latter fan motor and compressor will restart	To protect the electronical components when detect high power
39	Indoor unit and outdoor unit doesnt match	LP	OFF 3S and blink 19 times			OFF 3S and blink 16 times			compressor and Outdoor fan motor cant work	Indoor unit and outdoor unit doesnt match
40	Failure start-up	LC			OFF 3S and blink 11 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop operation.	Refer to the malfunction analysis
4	Normal communication							continously		
42	Defrosting				OFF 3S and blink once (during blinking, ON 10s and OFF 0.5s)	OFF 3S and blink twice			Defrosting will occur in heating mode. Compressor will operate while indoor fan will stop operation.	Its the normal state

NO.	Malfunction Name	Display Method of Indoor Unit				Display Method of Outdoor Unit			A/C status	Possible Causes
		Dual-8 Code Display	Indicator Display (during blinking, ON 0.5s and OFF 0.5s)			Indicator has 3 kinds of display status and during blinking, ON 0.5s and OFF 0.5s				
			Operation Indicator	Cool Indicator	Heating Indicator	Yellow Indicator	Red Indicator	Green Indicator		
43	Malfunction of phase current detection circuit for compressor	U1			OFF 3S and blink 13 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Replace outdoor control panel AP1
44	Malfunction of voltage dropping for DC bus-bar	U3			OFF 3S and blink 20 times				During cooling and drying operation, compressor will stop while indoor fan will operate; During heating operation, the complete unit will stop	Supply voltage is unstable
45	Malfunction of complete units current detection	U5		OFF 3S and blink 13 times					During cooling and drying operation, the compressor will stop while indoor fan will operate; During heating operating, the complete unit will stop operation.	Theres circuit malfunction on outdoor units control panel AP1, please replace the outdoor units control panel AP1.
46	The four-way valve is abnormal	U7		OFF 3S and blink 20 times					If this malfunction occurs during heating operation, the complete unit will stop operation.	1.Supply voltage is lower than AC175V; 2.Wiring terminal 4V is loosened or broken; 3.4V is damaged, please replace 4V.
47	Frequency limiting (power)						OFF 3S and blink 13 times			
48	Compressor is open-circuited					OFF 3S and blink once				
49	The temperature for turning on the unit is reached						OFF 3S and blink 8 times			
50	Frequency limiting (module temperature)						OFF 3S and blink 11 times			
51	Malfunction of zero-cross detection circuit	U8	OFF 3S and blink 17 times						The complete unit stops	1.Power supply is abnormal; 2.Detection circuit of indoor control mainboard is abnormal.



If malfunction occurs, corresponding code will display and the unit will resume normal until protection or malfunction disappears.

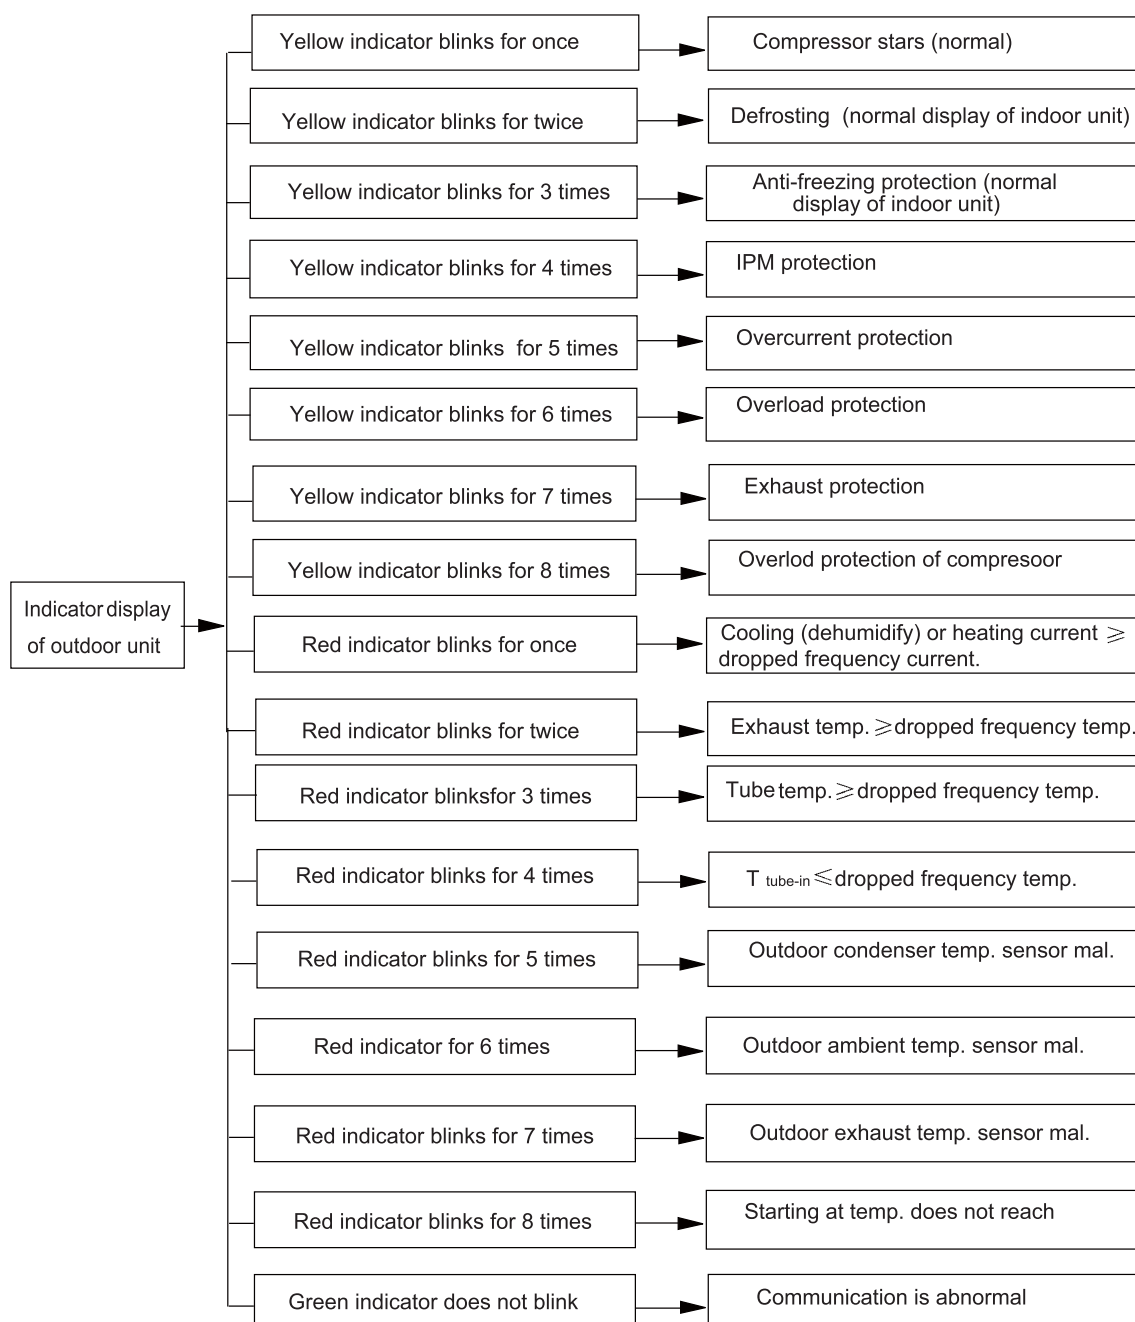

## **Analysis or processing of some of the malfunction display:**

### **1. Compressor discharge protection**

Possible causes: shortage of refrigerant; blockage of air filter; poor ventilation or air flow short pass for condenser; the system has noncondensing gas (such as air, water etc.); blockage of capillary assy (including filter); leakage inside four-way valve causes incorrect operation; malfunction of compressor; malfunction of protection relay; malfunction of discharge sensor; outdoor temperature too high.

Processing method: refer to the malfunction analysis in the above section.

### **2. Low voltage overcurrent protection**

Possible cause: Sudden drop of supply voltage.

### **3. Communication malfunction**

Processing method: Check if communication signal cable is connected reliably.

### **4. Sensor open or short circuit**

Processing method: Check whether sensor is normal, connected with the corresponding position on the controller and if damage of lead wire is found.

### **5. Compressor over load protection**

Possible causes: insufficient or too much refrigerant; blockage of capillary and increase of suction temp.; improper running of compressor, burning in or stuck of bearing, damage of discharge valve; malfunction of protector.

Processing method: adjust refrigerant amount; replace the capillary; replace the compressor; use universal meter to check if the contactor of compressor is fine when it is not overheated, if not replace the protector.

### **6. System malfunction**

i.e. overload protection. When tube temperature (Check the temperature of outdoor heat exchanger when cooling and check the temperature of indoor heat exchanger when heating) is too high, protection will be activated.

Possible causes: Outdoor temperature is too high when cooling; insufficient outdoor air circulation; refrigerant flow malfunction. please refer to the malfunction analysis in the previous section for handling method.

### **7. IPM module protection**

Processing method: Once the module malfunction happens, if it persists for a long time and can not be self-canceled, cut off the power and turn off the unit, and then re-energize the unit again after about 10 min. After repeating the procedure for several times, if the malfunction still exists, replace the module.


## 9.2 Troubleshooting for Main Malfunction

### (1) Capacitor charge fault (Fault with outdoor unit) (AP1 below refers to the outdoor control panel)

Main Check Points:

- Use AC voltmeter to check if the voltage between terminal L and N on the wiring board is within 210VAC~240VAC.
- Is the reactor (L) correctly connected? Is the connection loose or fallen? Is the reactor (L) damaged?

Fault diagnosis process:

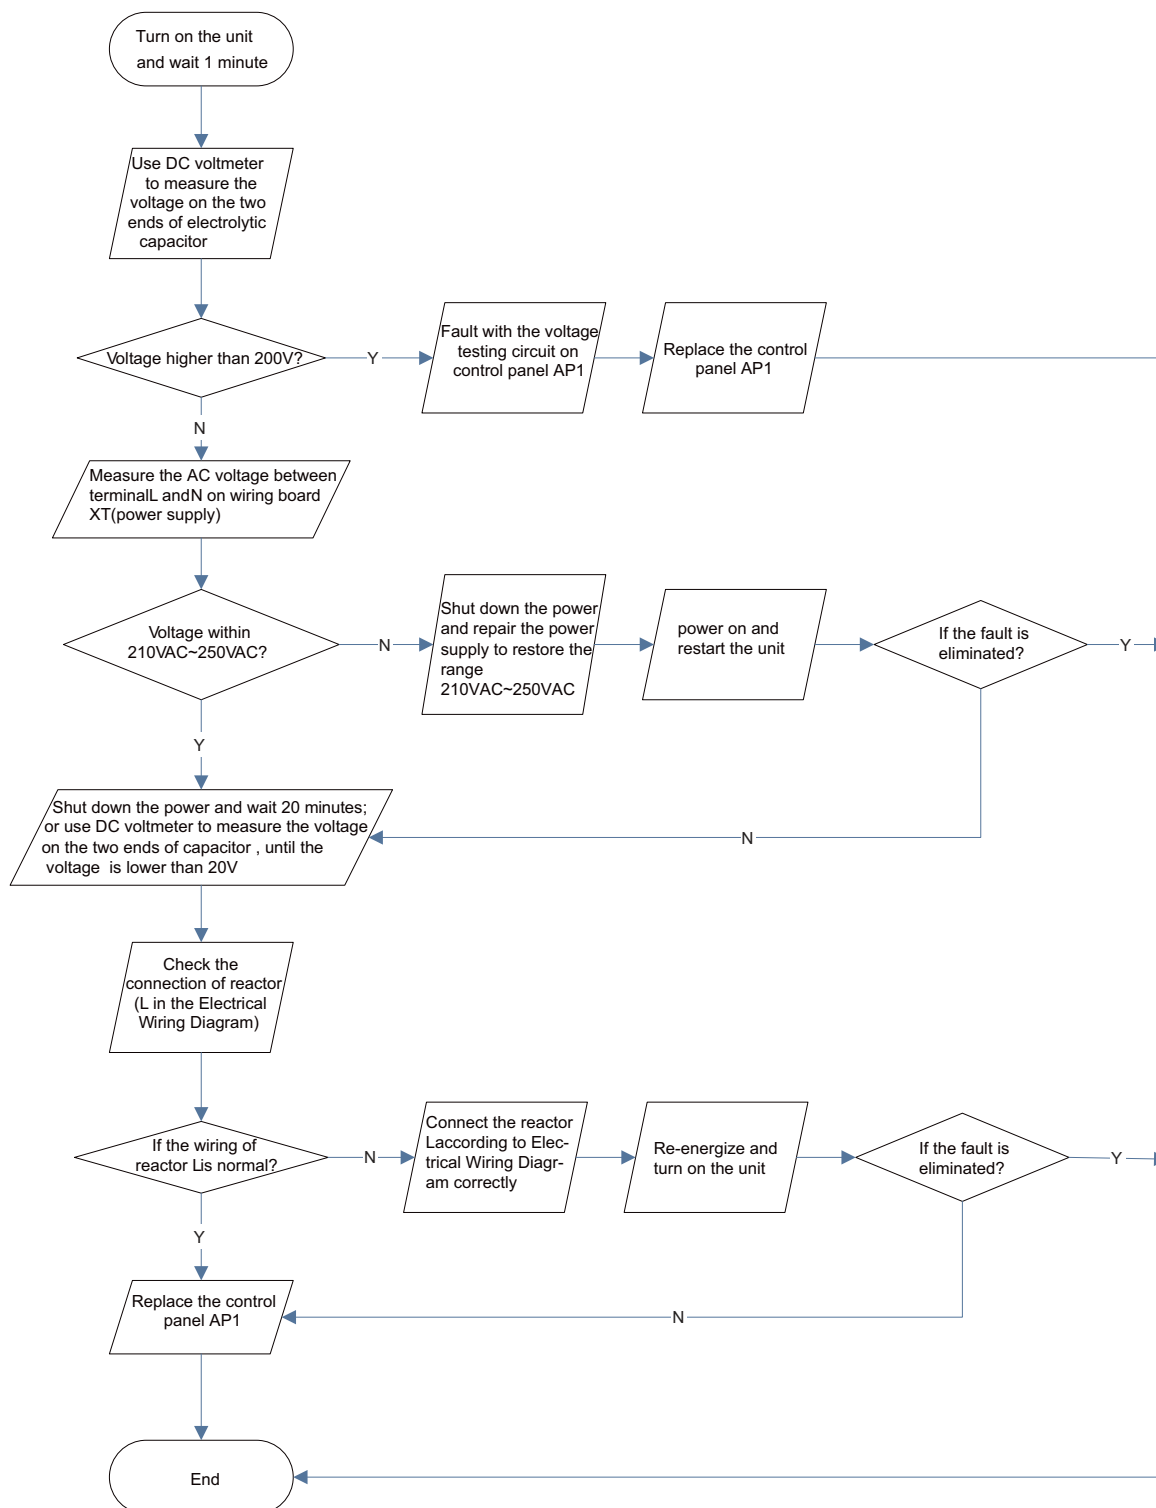


**(2) IPM Protection, Out-of-step Fault, Compressor Phase Overcurrent (AP1 below refers to the outdoor control panel)**

Main check points:

- Is the connection between control panel AP1 and compressor COMP secure? Loose? Is the connection in correct order?
- Is the voltage input of the machine within normal range? (Use AC voltmeter to measure the voltage between terminal L and N on the wiring board XT)
- Is the compressor coil resistance normal? Is the insulation of compressor coil against the copper tube in good condition?
- Is the working load of the machine too high? Is the radiation good?
- Is the charge volume of refrigerant correct?

Fault diagnosis process:

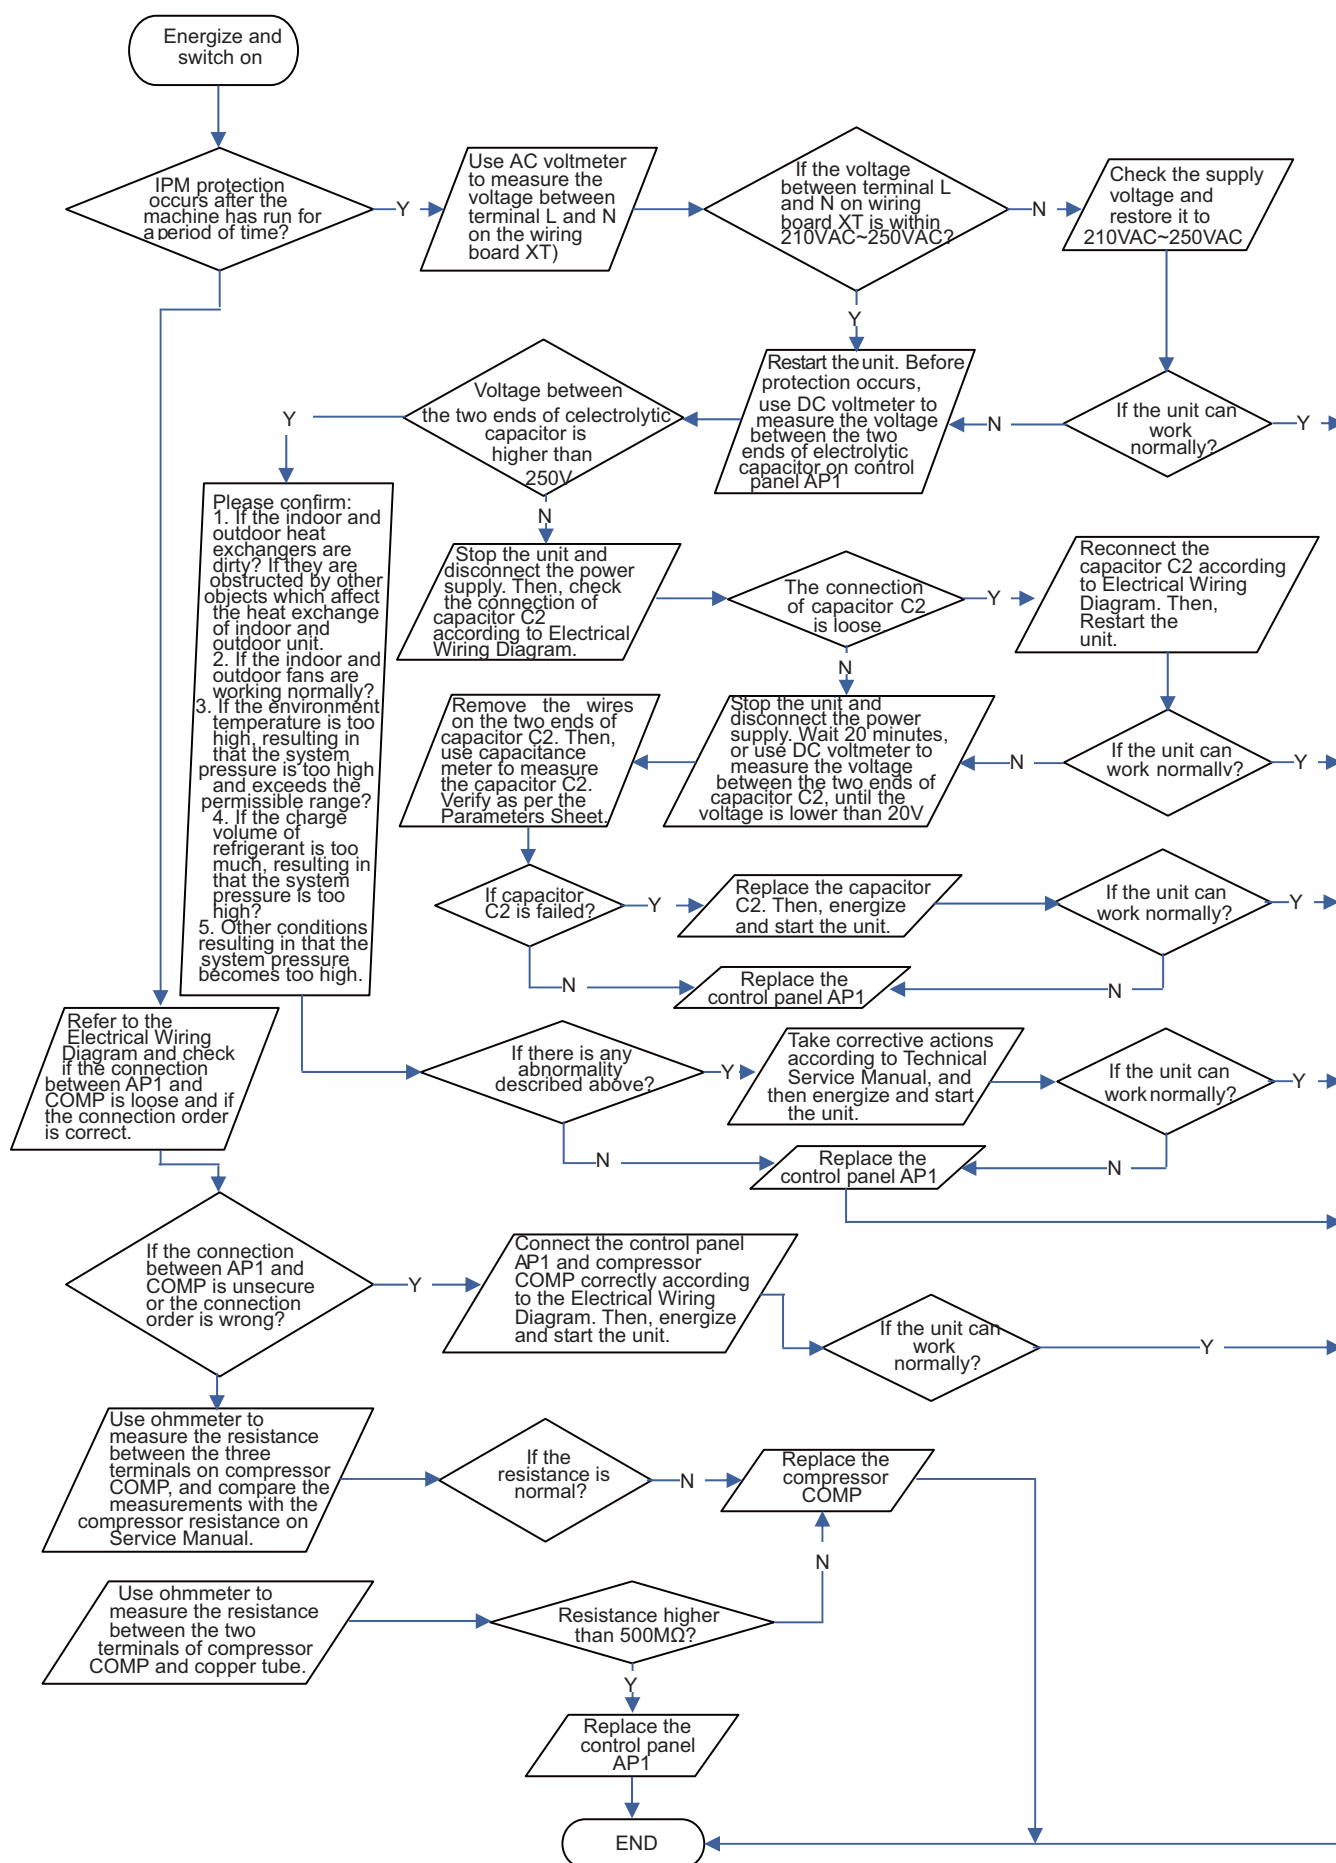


### (3) High temperature and overload protection diagnosis (AP1 hereinafter refers to the control board of the outdoor unit)

Mainly detect:

- Is outdoor ambient temperature in normal range?
- Are the outdoor and indoor fans operating normally?
- Is the heat dissipation environment inside and outside the unit good?

Fault diagnosis process:

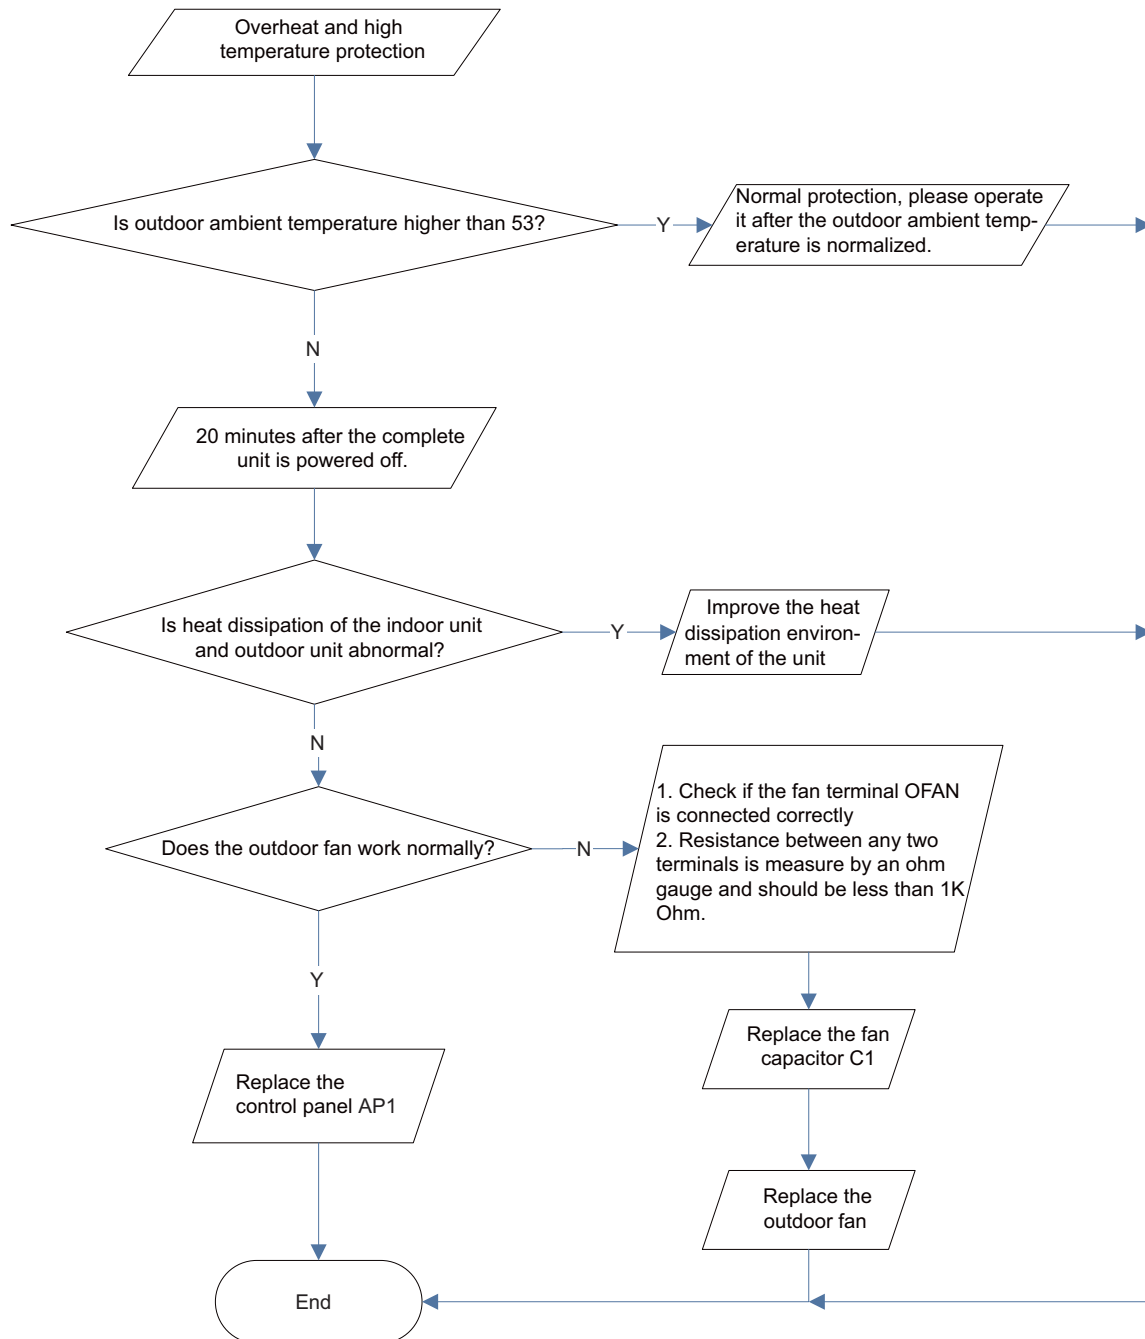


**(4) Start-up failure (following AP1 for outdoor unit control board)**

Mainly detect:

- Whether the compressor wiring is connected correct?
- Is compressor broken?
- Is time for compressor stopping enough?

Fault diagnosis process:

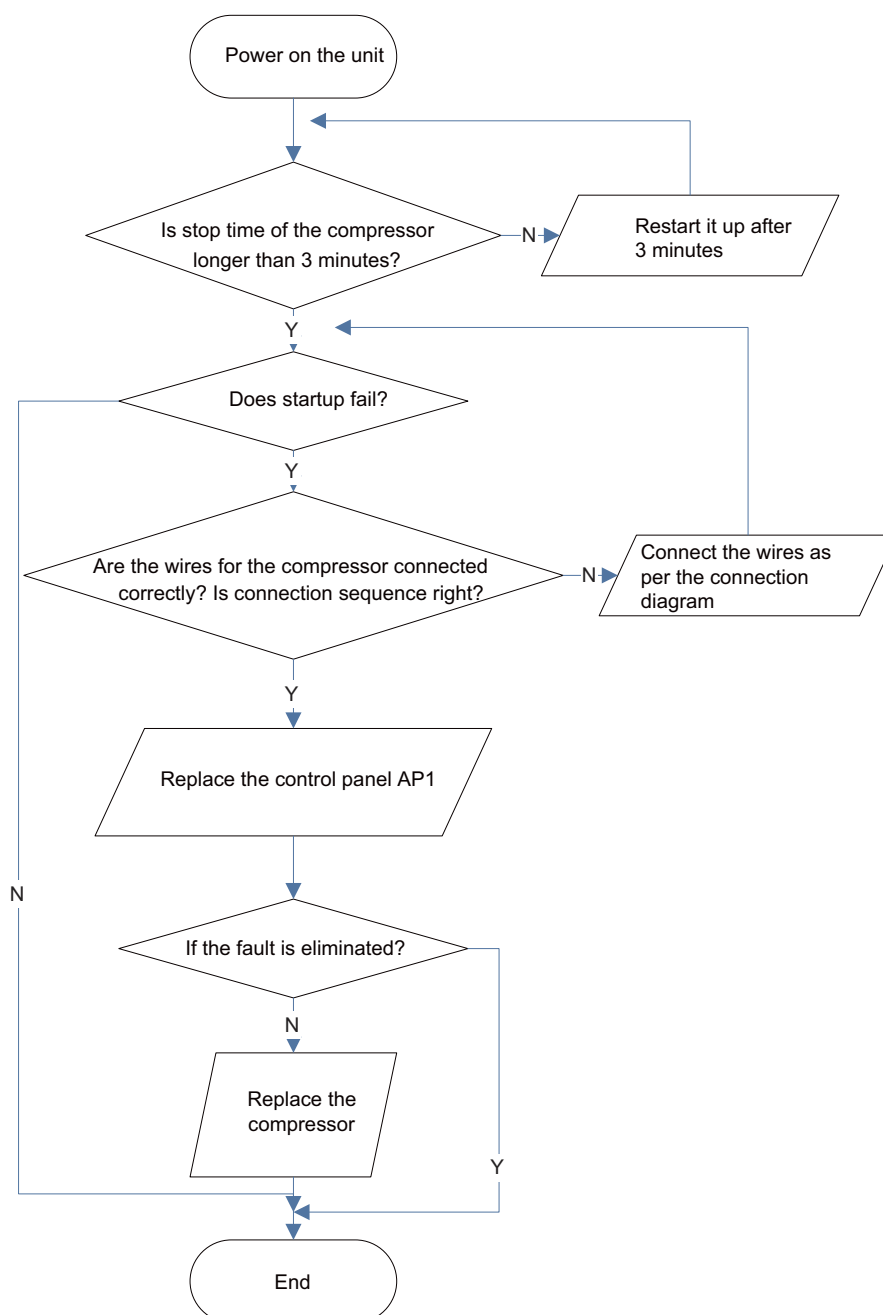


**(5) Out of step diagnosis for the compressor (AP1 hereinafter refers to the control board of the outdoor unit)**

Mainly detect:

- Is the system pressure too high?
- Is the input voltage too low?

Fault diagnosis process:

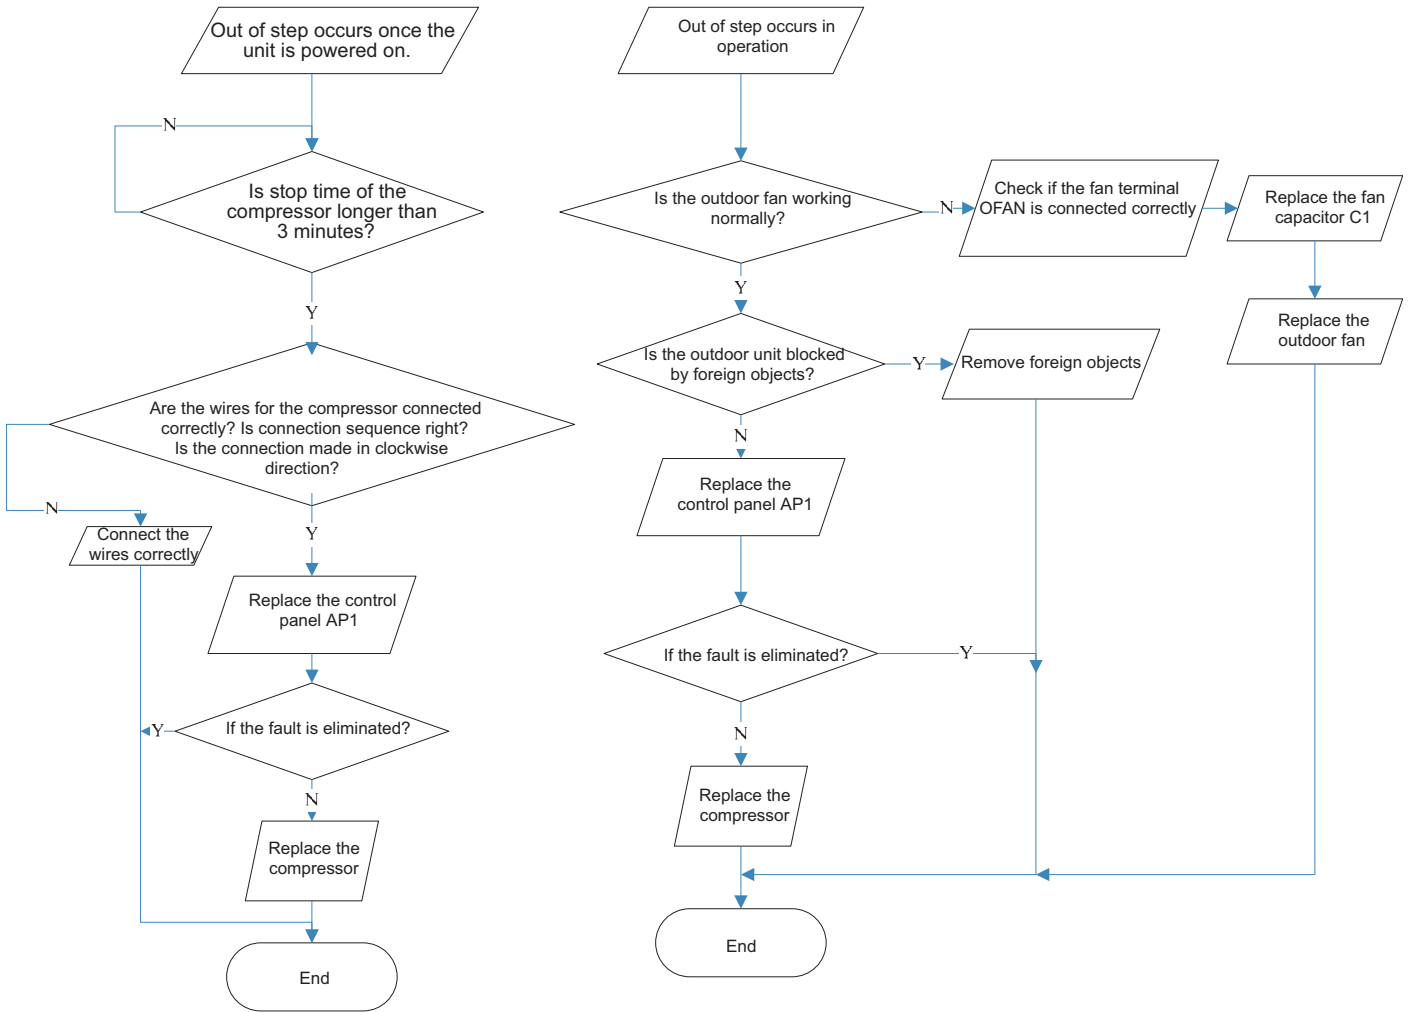




**(6) Overload and air exhaust malfunction diagnosis (following AP1 for outdoor unit control board)**

Mainly detect:

- Is the PMV connected well or not? Is PMV damaged?
- Is refrigerant leaked?

Fault diagnosis process:

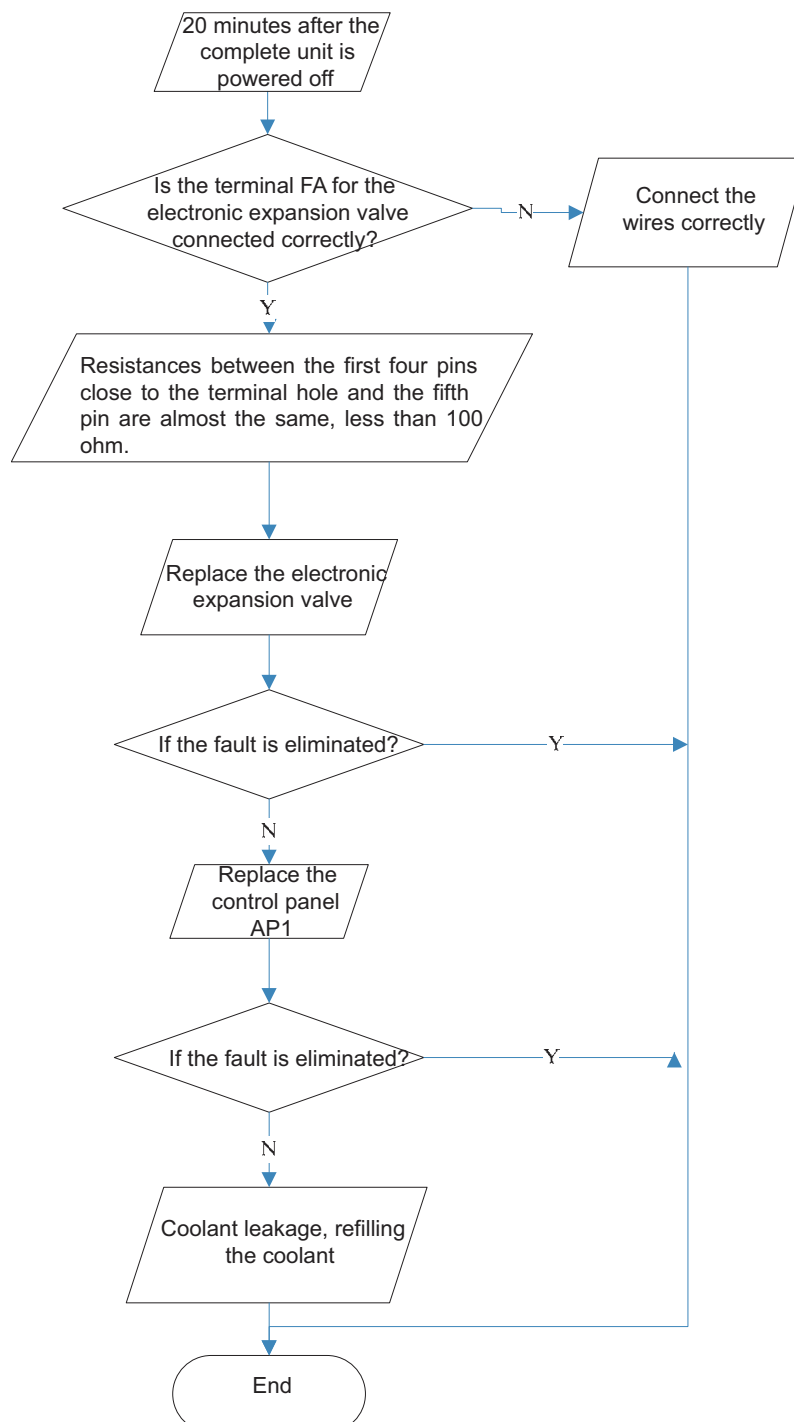


## (7) Power factor correct or (PFC) fault (a fault of outdoor unit) (AP1 hereinafter refers to the control board of the outdoor unit)

Mainly detect:

- Check if the reactor (L) of the outdoor unit and the PFC capacitor are broken

Fault diagnosis process:

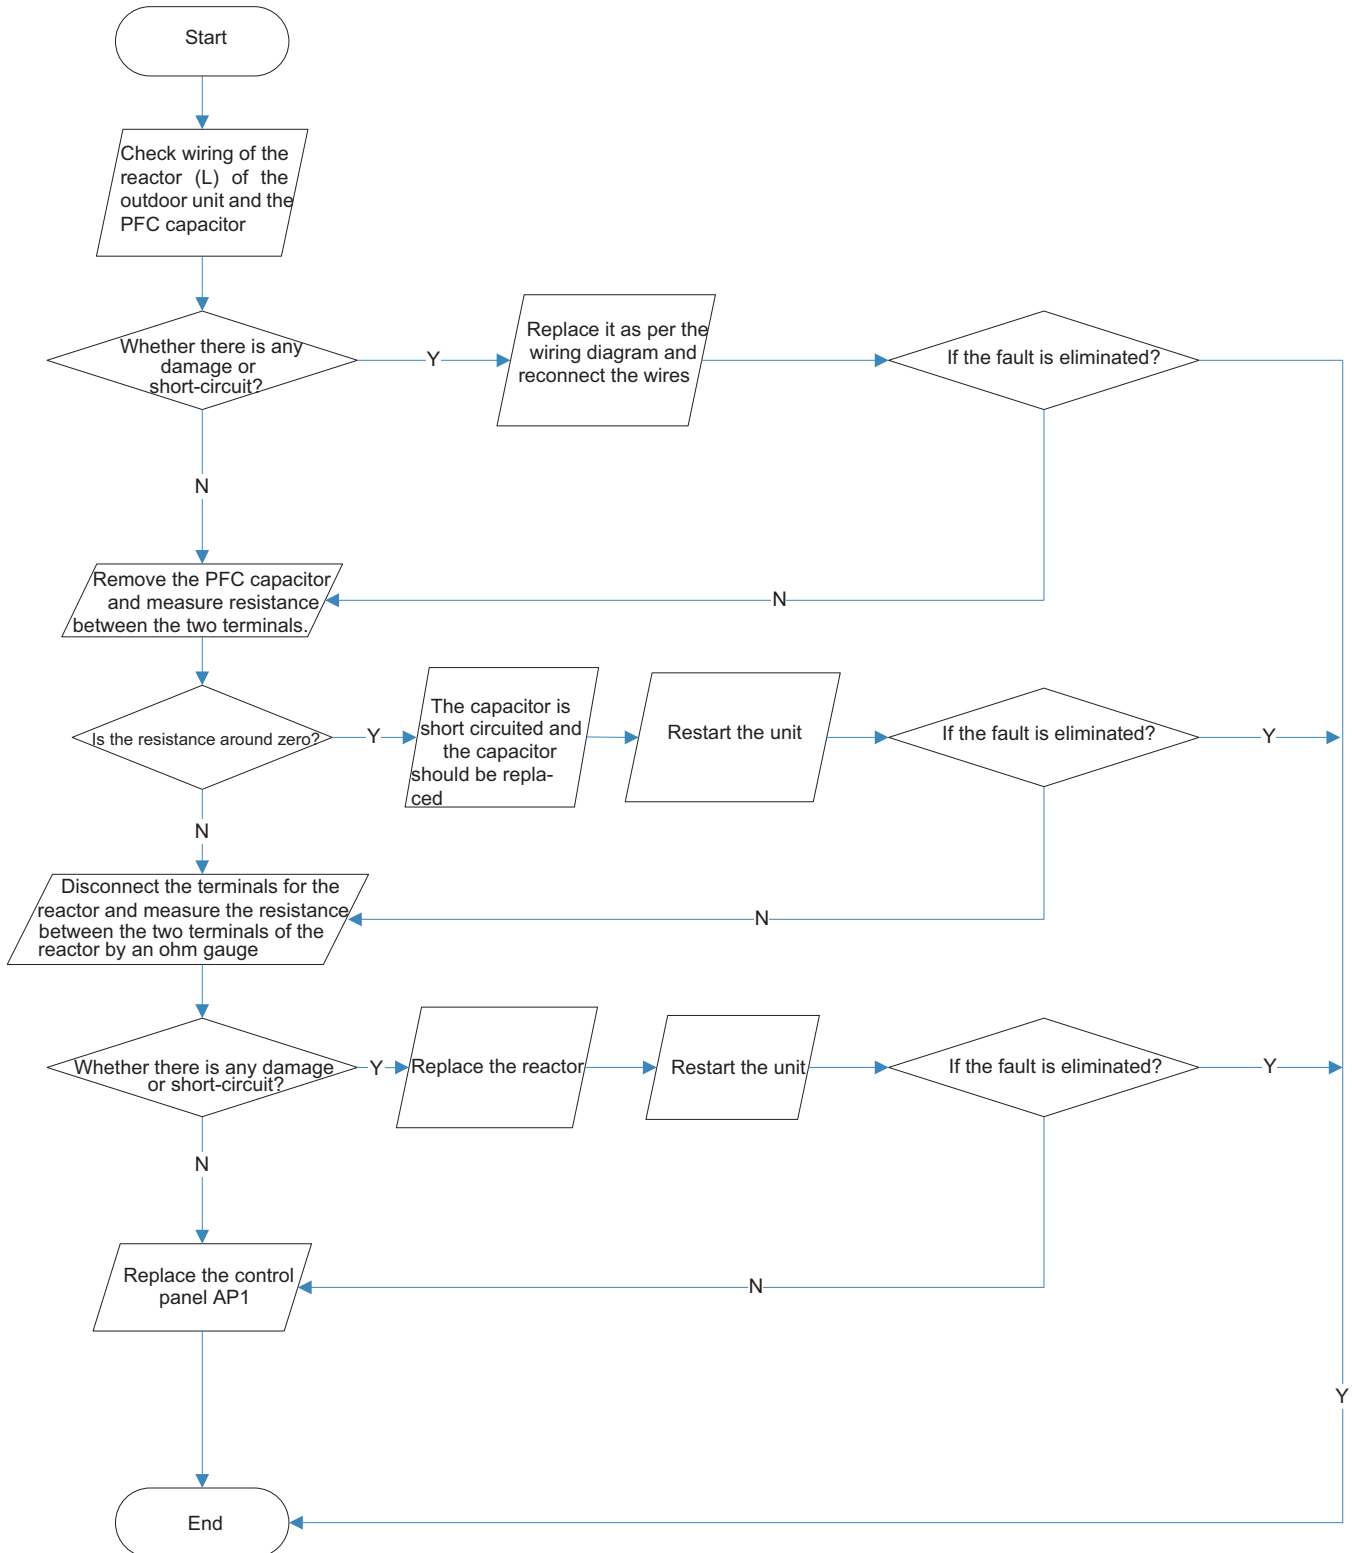


**(8) Communication malfunction: (following AP1 for outdoor unit control board)**

Mainly detect:

- Is there any damage for the indoor unit mainboard communication circuit? Is communication circuit damaged?
- Detect the indoor and outdoor units connection wire and indoor and outdoor units inside wiring is connect well or not, if is there any damage?

Fault diagnosis process:

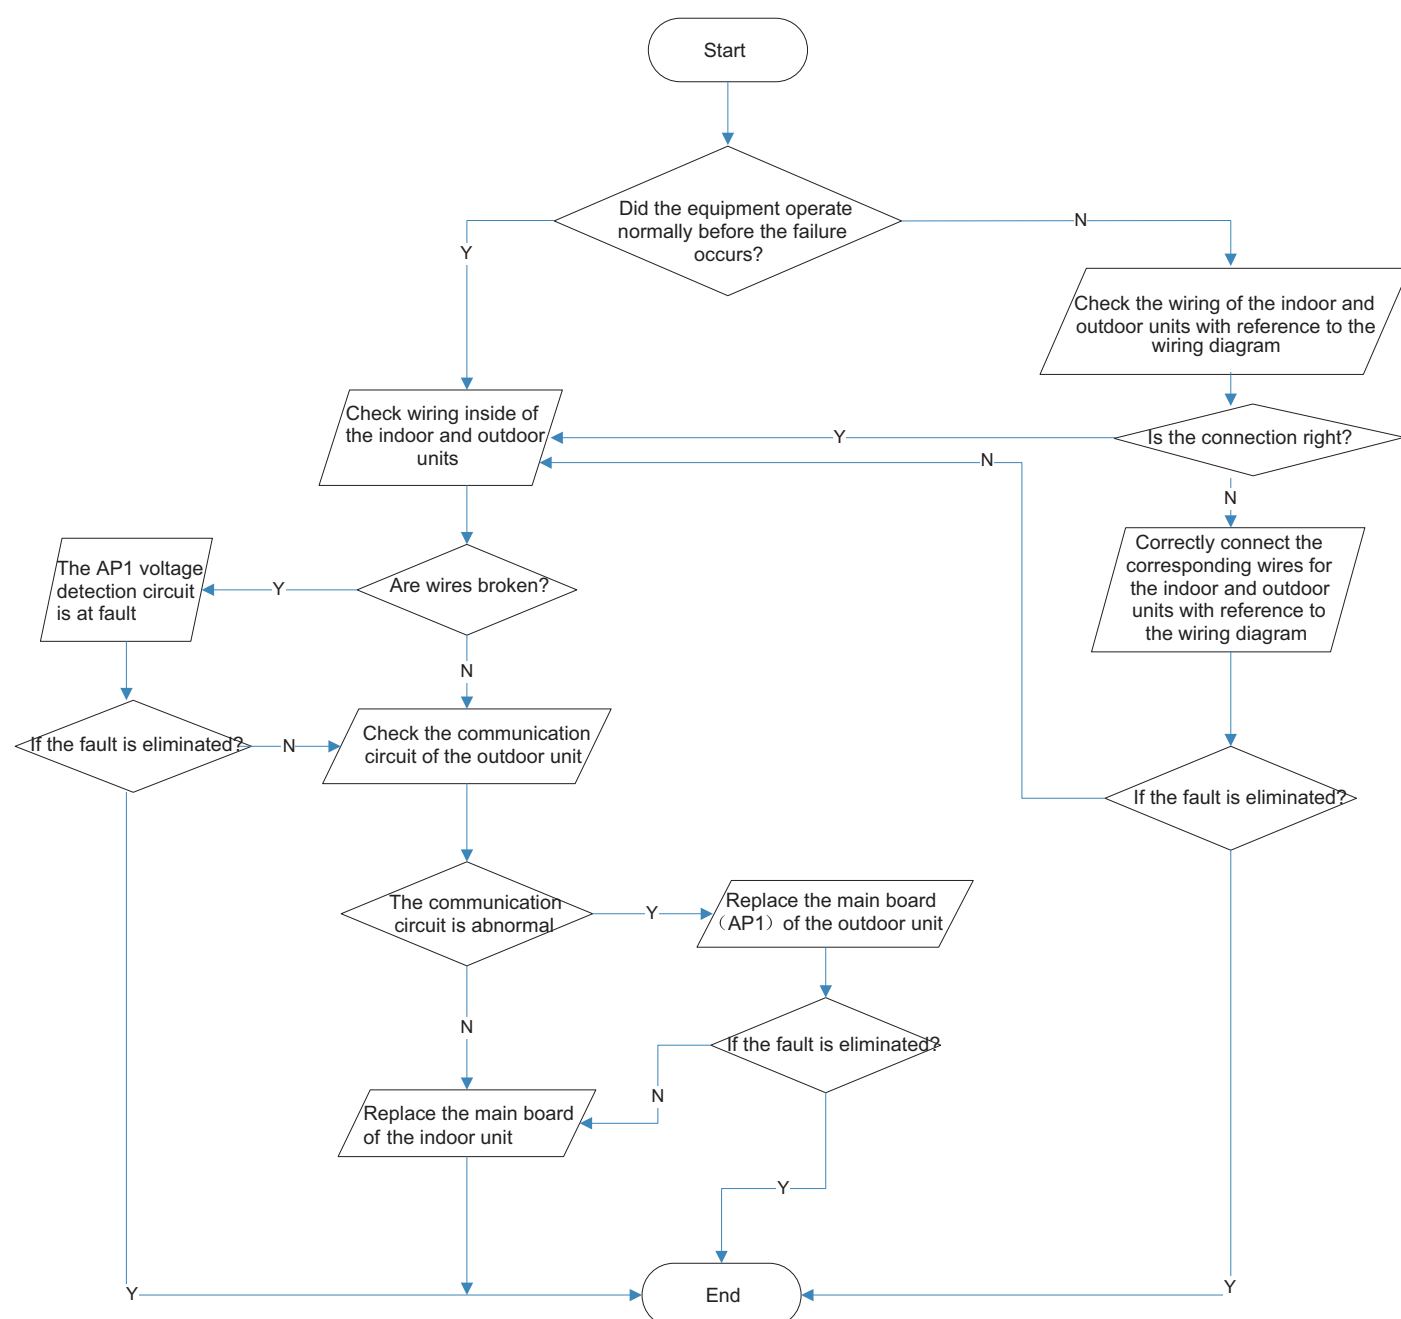

## 9.3 Troubleshooting for Normal Malfunction

### 1. Air Conditioner Can't be Started Up

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
No power supply, or poor connection for power plug	After energization, operation indicator isn't bright and the buzzer can't give out sound	Confirm whether it's due to power failure. If yes, wait for power recovery. If not, check power supply circuit and make sure the power plug is connected well.
Wrong wire connection between indoor unit and outdoor unit, or poor connection for wiring terminals	Under normal power supply circumstances, operation indicator isn't bright after energization	Check the circuit according to circuit diagram and connect wires correctly. Make sure all wiring terminals are connected firmly
Electric leakage for air conditioner	After energization, room circuit breaker trips off at once	Make sure the air conditioner is grounded reliably Make sure wires of air conditioner is connected correctly Check the wiring inside air conditioner. Check whether the insulation layer of power cord is damaged; if yes, place the power cord.
Model selection for air switch is improper	After energization, air switch trips off	Select proper air switch
Malfunction of remote controller	After energization, operation indicator is bright, while no display on remote controller or buttons have no action.	Replace batteries for remote controller Repair or replace remote controller

### 2. Poor Cooling (Heating) for Air Conditioner

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Set temperature is improper	Observe the set temperature on remote controller	Adjust the set temperature
Rotation speed of the IDU fan motor is set too low	Small wind blow	Set the fan speed at high or medium
Filter of indoor unit is blocked	Check the filter to see it's blocked	Clean the filter
Installation position for indoor unit and outdoor unit is improper	Check whether the installation position is proper according to installation requirement for air conditioner	Adjust the installation position, and install the rainproof and sunproof for outdoor unit
Refrigerant is leaking	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unit's pressure is much lower than regulated range	Find out the leakage causes and deal with it. Add refrigerant.
Malfunction of 4-way valve	blow cold wind during heating	Replace the 4-way valve
Malfunction of capillary	Discharged air temperature during cooling is higher than normal discharged wind temperature; Discharged air temperature during heating is lower than normal discharged wind temperature; Unit's pressure is much lower than regulated range. If refrigerant isn't leaking, part of capillary is blocked	Replace the capillary
Flow volume of valve is insufficient	The pressure of valves is much lower than that stated in the specification	Open the valve completely
Malfunction of horizontal louver	Horizontal louver can't swing	Refer to point 3 of maintenance method for details
Malfunction of the IDU fan motor	The IDU fan motor can't operate	Refer to troubleshooting for H6 for maintenance method in details
Malfunction of the ODU fan motor	The ODU fan motor can't operate	Refer to point 4 of maintenance method for details
Malfunction of compressor	Compressor can't operate	Refer to point 5 of maintenance method for details

### 3. Horizontal Louver Can't Swing

Possible Causes	Discriminating Method (Air conditioner Status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Stepping motor is damaged	Stepping motor can't operate	Repair or replace stepping motor
Main board is damaged	Others are all normal, while horizontal louver can't operate	Replace the main board with the same model

#### 4. ODU Fan Motor Can't Operate

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of the ODU fan motor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the capacity of fan
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Motor of outdoor unit is damaged	When unit is on, cooling/heating performance is bad and ODU compressor generates a lot of noise and heat.	Change compressor oil and refrigerant. If no better, replace the compressor with a new one

#### 5. Compressor Can't Operate

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Wrong wire connection, or poor connection	Check the wiring status according to circuit diagram	Connect wires according to wiring diagram to make sure all wiring terminals are connected firmly
Capacity of compressor is damaged	Measure the capacity of fan capacitor with an universal meter and find that the capacity is out of the deviation range indicated on the nameplate of fan capacitor.	Replace the compressor capacitor
Power voltage is a little low or high	Use universal meter to measure the power supply voltage. The voltage is a little high or low	Suggest to equip with voltage regulator
Coil of compressor is burnt out	Use universal meter to measure the resistance between compressor terminals and it's 0	Repair or replace compressor
Cylinder of compressor is blocked	Compressor can't operate	Repair or replace compressor

#### 6. Air Conditioner is Leaking

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
Drain pipe is blocked	Water leaking from indoor unit	Eliminate the foreign objects inside the drain pipe
Drain pipe is broken	Water leaking from drain pipe	Replace drain pipe
Wrapping is not tight	Water leaking from the pipe connection place of indoor unit	wrap it again and bundle it tightly


#### 7. Abnormal Sound and Vibration

Possible causes	Discriminating method (air conditioner status)	Troubleshooting
When turn on or turn off the unit, the panel and other parts will expand and there's abnormal sound	There's the sound of "PAPA"	Normal phenomenon. Abnormal sound will disappear after a few minutes.
When turn on or turn off the unit, there's abnormal sound due to flow of refrigerant inside air conditioner	Water-running sound can be heard	Normal phenomenon. Abnormal sound will disappear after a few minutes.
Foreign objects inside the indoor unit or there're parts touching together inside the indoor unit	There's abnormal sound fro indoor unit	Remove foreign objects. Adjust all parts' position of indoor unit, tighten screws and stick damping plaster between connected parts
Foreign objects inside the outdoor unit or there're parts touching together inside the outdoor unit	There's abnormal sound fro outdoor unit	Remove foreign objects. Adjust all parts' position of outdoor unit, tighten screws and stick damping plaster between connected parts
Short circuit inside the magnetic coil	During heating, the way valve has abnormal electromagnetic sound	Replace magnetic coil
Abnormal shake of compressor	Outdoor unit gives out abnormal sound	Adjust the support foot mat of compressor, tighten the bolts
Abnormal sound inside the compressor	Abnormal sound inside the compressor	If add too much refrigerant during maintenance, please reduce refrigerant properly. Replace compressor for other circumstances.

## 10. Exploded View and Parts List

## 10.1 Indoor Unit


**GWC09QB-K3DNA1B/I**  
**GWH09QB-K3DNA1B/I**

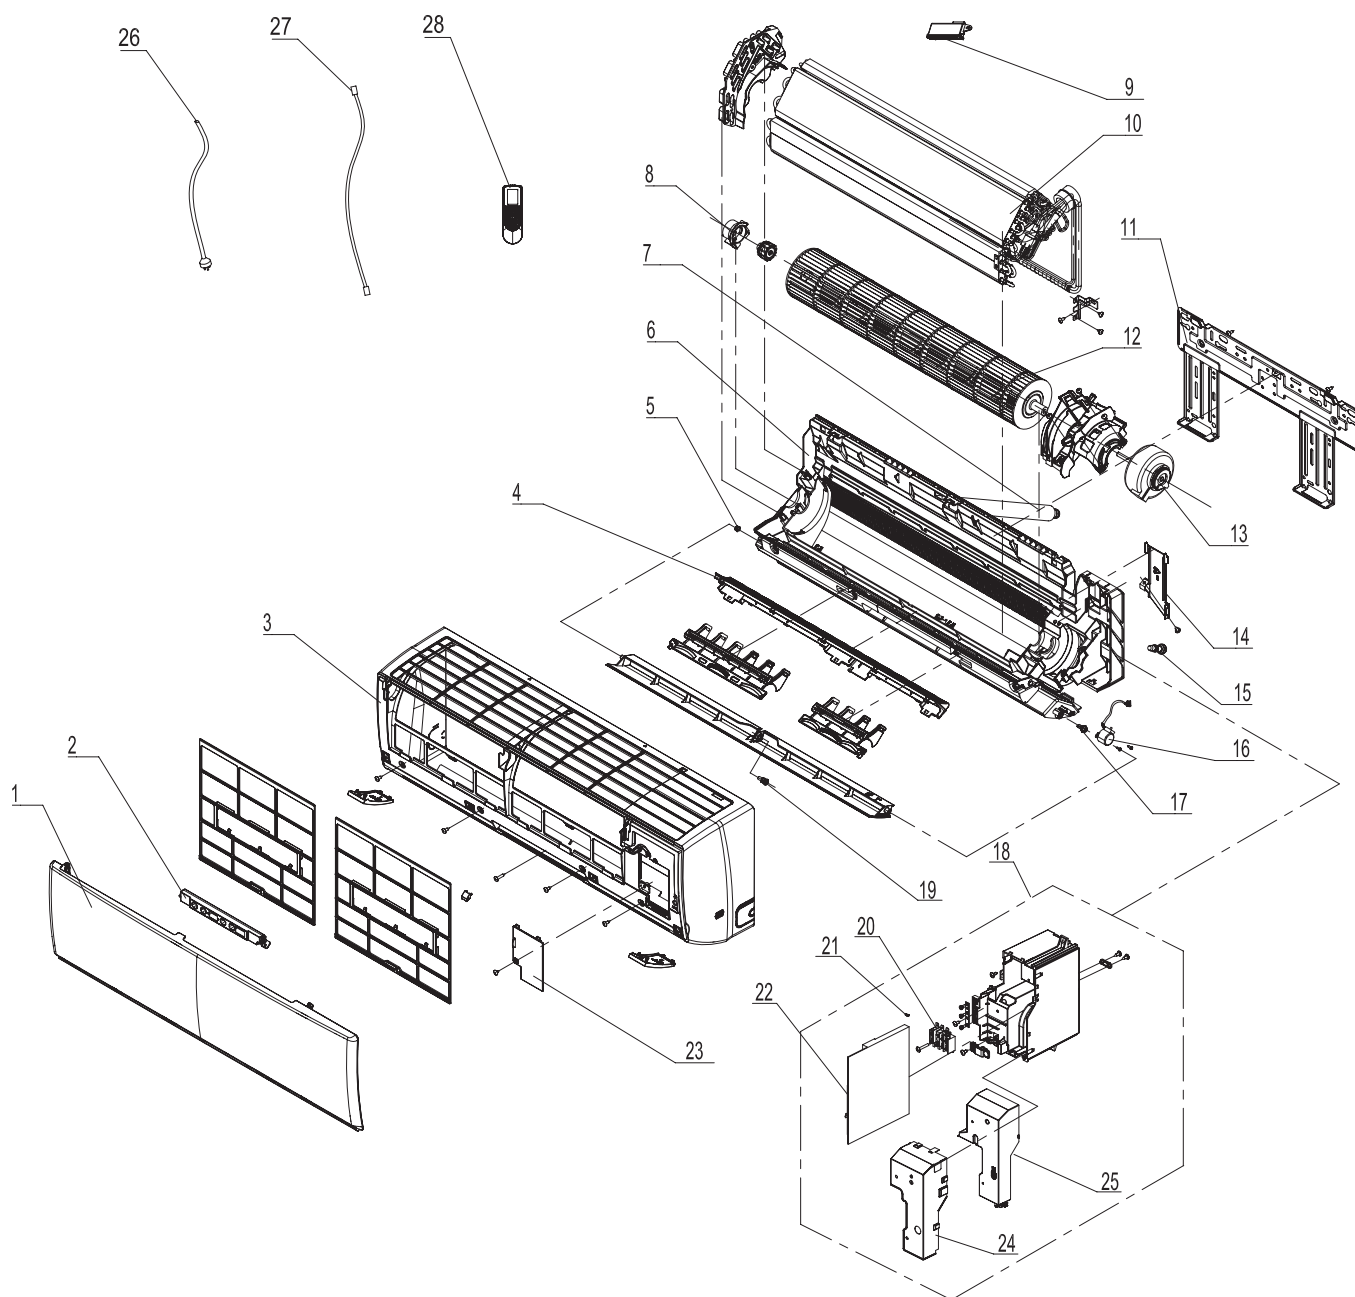

NO.	Description	Part Code		Qty
		GWC09QB-K3DNA1B/I	GWH09QB-K3DNA1B/I	
	Product Code	CB419N01600	CB419N01700	
1	Front Panel Assy	20022496	20022496	1
2	Display Board	30565231	30565231	1
3	Front Case Assy	20022495	20022495	1
4	Helicoid Tongue	26112508	26112508	1
5	Left Axile Bush	10512037	10512037	1
6	Rear Case assy	22202560	22202560	1
7	Drainage Hose	0523001408	0523001408	1
8	Ring of Bearing	26152022	26152022	1
9	Cold Plasma Generator	1114001602	1114001602	1
10	Evaporator Assy	01002954	01002954	1
11	Wall Mounting Frame	01252043	01252043	1
12	Cross Flow Fan	10352059	10352059	1
13	Fan Motor	1501208904	1501208904	1
14	Connecting pipe clamp	2611216401	2611216401	1
15	Rubber Plug (Water Tray)	76712012	76712012	1
16	Stepping Motor	1521212901	1521212901	1
17	Crank	73012005	73012005	1
18	Electric Box Assy	20102000291	20402492	1
19	Axile Bush	10542036	10542036	1
20	Terminal Board	42011233	42011233	1
21	Jumper	4202300101	4202300101	1
22	Main Board	30138000164	30148822	1
23	Electric Box Cover	20112207	20112207	1
24	Electric Box Cover Sub-Assy	02601070	02601070	1
25	Shield Cover of Electric Box Cover	01592154	01592154	1
26	Power Cord	4002048710	4002048710	1
27	Connecting Cable	400205235	400205235	0
28	Remote Controller	30510474	30510474	1

Above data is subject to change without notice.

GWC12QC-K3DNA1B/I  
GWH12QC-K3DNA1B/I

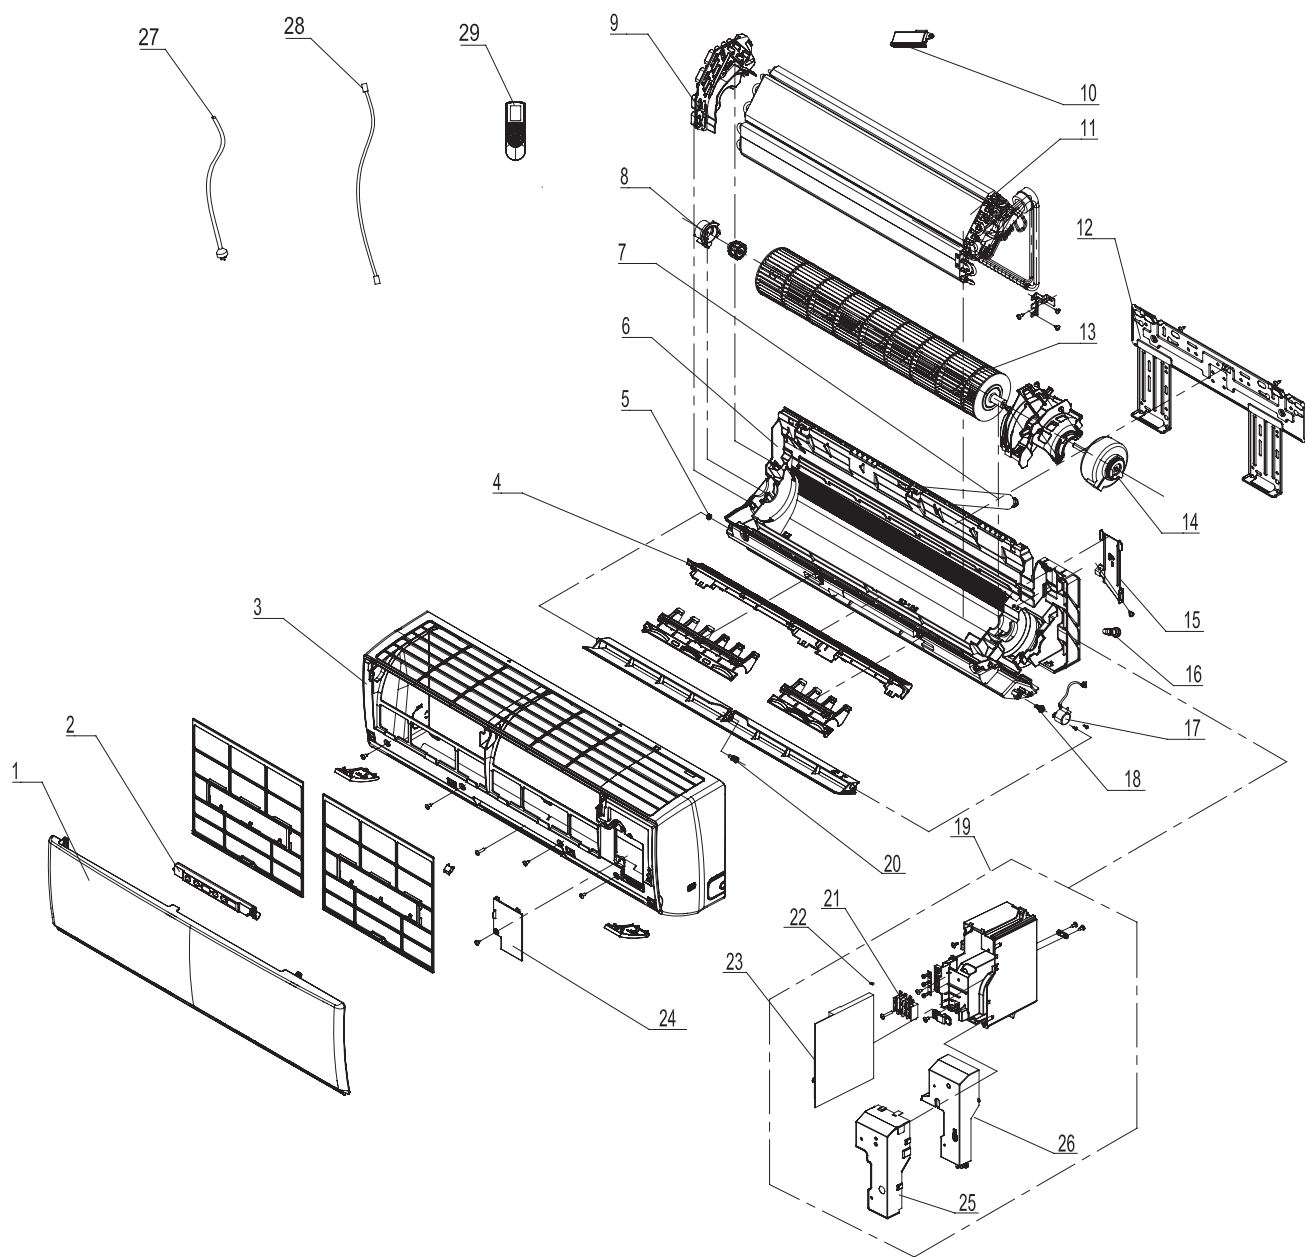




NO.	Description	Part Code		Qty
		GWC12QC-K3DNA1B/I	GWH12QC-K3DNA1B/I	
	Product Code	CB419N01800	CB419N01900	
1	Front Panel Assy	20022493	20022493	1
2	Display Board	30565231	30565231	1
3	Front Case Assy	20022489	20022489	1
4	Helicoid Tongue	26112507	26112507	1
5	Left Axile Bush	10512037	10512037	1
6	Rear Case assy	22202557	22202557	1
7	Drainage Hose	05230014	05230014	1
8	Ring of Bearing	26152022	26152022	1
9	Evaporator Supper	24212179	24212179	1
10	Cold Plasma Generator	1114001602	1114001602	1
11	Evaporator Assy	0100269501	20022493	1
12	Wall Mounting Frame	01252484	01252484	1
13	Cross Flow Fan	10352056	10352056	1
14	Fan Motor	1501214602	1501214602	1
15	Connecting pipe clamp	2611216401	2611216401	1
16	Rubber Plug (Water Tray)	76712012	76712012	1
17	Stepping Motor	1521210701	1521210701	1
18	Crank	73012005	73012005	1
19	Electric Box Assy	20402493	01592135	1
20	Axile Bush	10542036	10542036	1
21	Terminal Board	42011233	42011233	1
22	Jumper	4202300105	4202300105	1
23	Main Board	30138000166	01592135	1
24	Electric Box Cover Sub-Assy	02601070	02601070	1
25	Shield Cover of Electric Box Cover	01592135	01592135	1
26	Electric Box Cover	20112207	20112207	1
27	Power Cord	400220113	400220113	1
28	Connecting Cable	400205235	400205235	0
29	Remote Controller	30510474	30510474	1

Above data is subject to change without notice.

**GWC18QD-K3DNA1B/I**  
**GWH18QD-K3DNA1B/I**

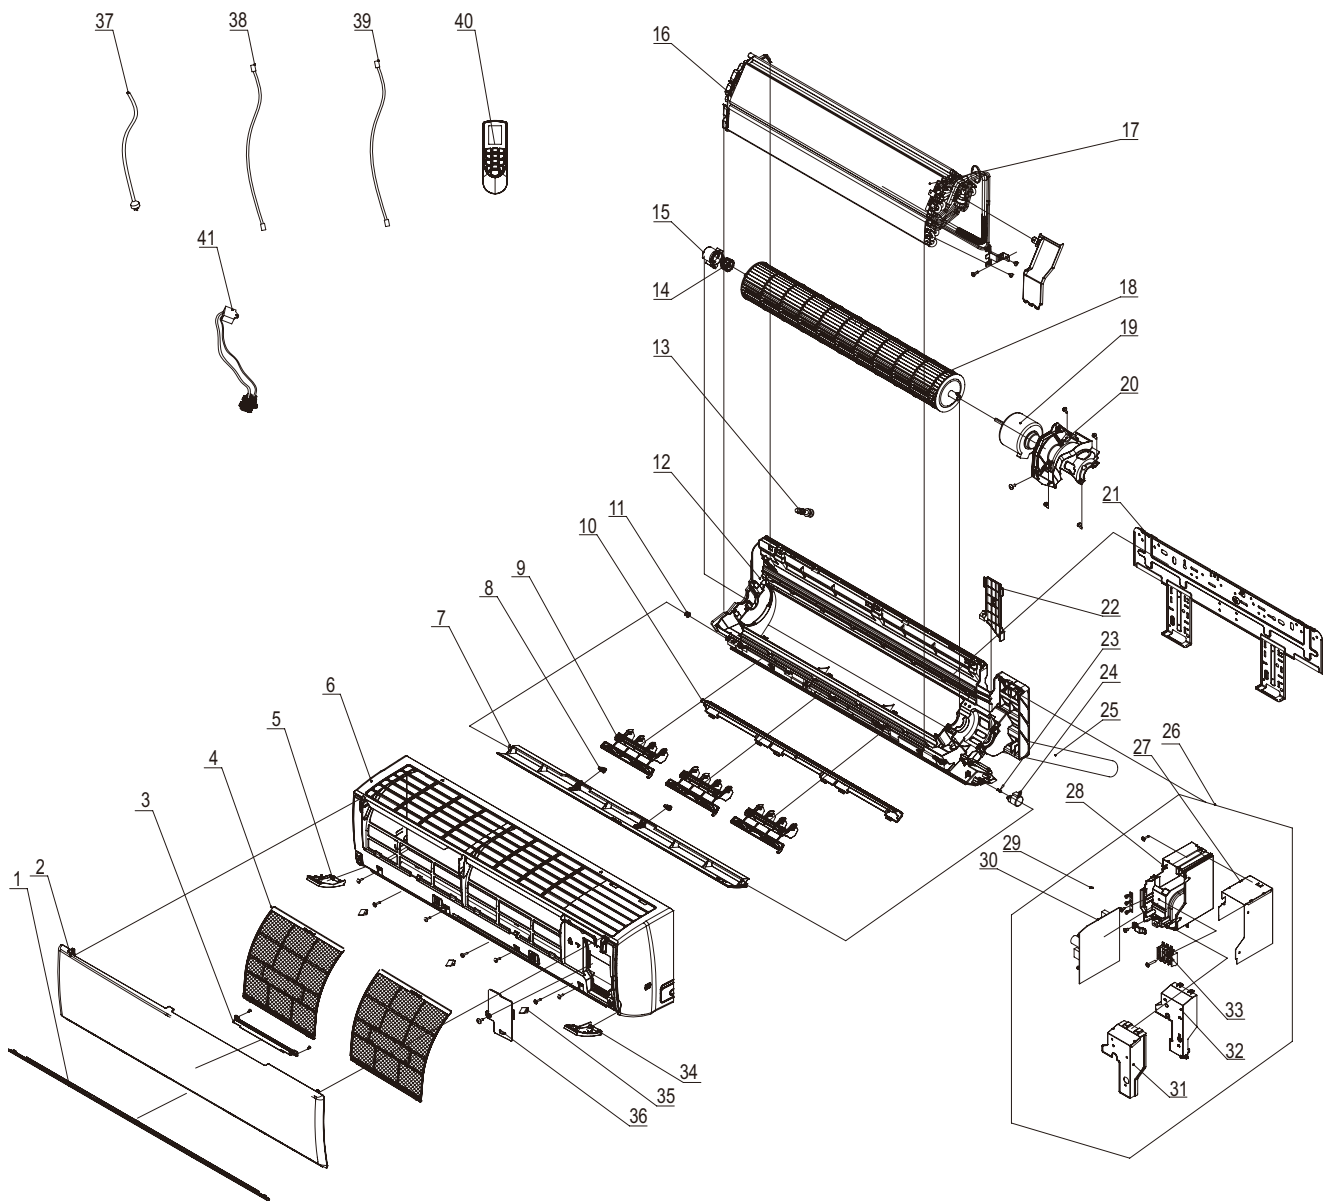


NO.	Description	Part Code		Qty
		GWC18QD-K3DNA1B/I	GWH18QD-K3DNA1B/I	
	Product Code	CB419N02000	CB419N02100	
1	Decorative Strip	20192613	20192613	1
2	Front Panel	20022481S	20022481S	1
3	Display Board	30565233	30565233	1
4	Filter Sub-Assy	11122089	11122089	2
5	Decorative Board (Left)	20192612	20192612	1
6	Front Case	20022484	20022484	1
7	Guide Louver	10512734	10512734	1
8	Axile Bush	10542036	10542036	2
9	Air Louver(Manual)	10512732	10512732	3
10	Helicoid tongue	26112512	26112512	1
11	Left Axile Bush	10512037	10512037	1
12	Rear Case assy	22202556	22202556	1
13	Rubber Plug (Water Tray)	76712012	76712012	1
14	O-Gasket sub-assy of Bearing	7651205102	7651205102	1
15	Ring of Bearing	26152025	26152025	1
16	Evaporator Support	24212177	24212177	1
17	Evaporator Assy	01002000014	01002000014	1
18	Cross Flow Fan	10352060	10352060	1
19	Fan Motor	15012145	15012145	1
20	Motor Press Plate	26112511	26112511	1
21	Wall Mounting Frame	01362026	01362026	1
22	Connecting pipe clamp	2611218801	2611218801	1
23	Crank	73012005	73012005	1
24	Stepping Motor	1521240212	1521240212	1
25	Drainage hose	05230014	05230014	1
26	Electric Box Assy	20102000425	20102000307	1
27	Lower Shield of Electric Box	01592139	01592139	1
28	Electric Box	20112211	20112211	1
29	Jumper	4202300112	4202300112	1
30	Main Board	30138000162	30148829	1
31	Shield Cover of Electric Box	01592140	01592140	1
32	Electric Box Cover	20112209	20112209	1
33	Terminal Board	42011233	42011233	1
34	Decorative Board (Right)	20192611	20192611	1
35	Screw Cover	242520179	242520179	3
36	Electric Box Cover2	20112210	20112210	1
37	Power Cord	4002048722	4002048722	1
38	Connecting Cable	40020538	40020538	0
39	Temperature Sensor	3900031302	3900031302	1
40	Remote Controller	30510474	30510474	1
41	Cold Plasma Generator	1114001602	1114001602	1

Above data is subject to change without notice.

## 10.2 Outdoor Unit


GWC09QB-K3DNA1B/O  
GWC12QC-K3DNA1B/O

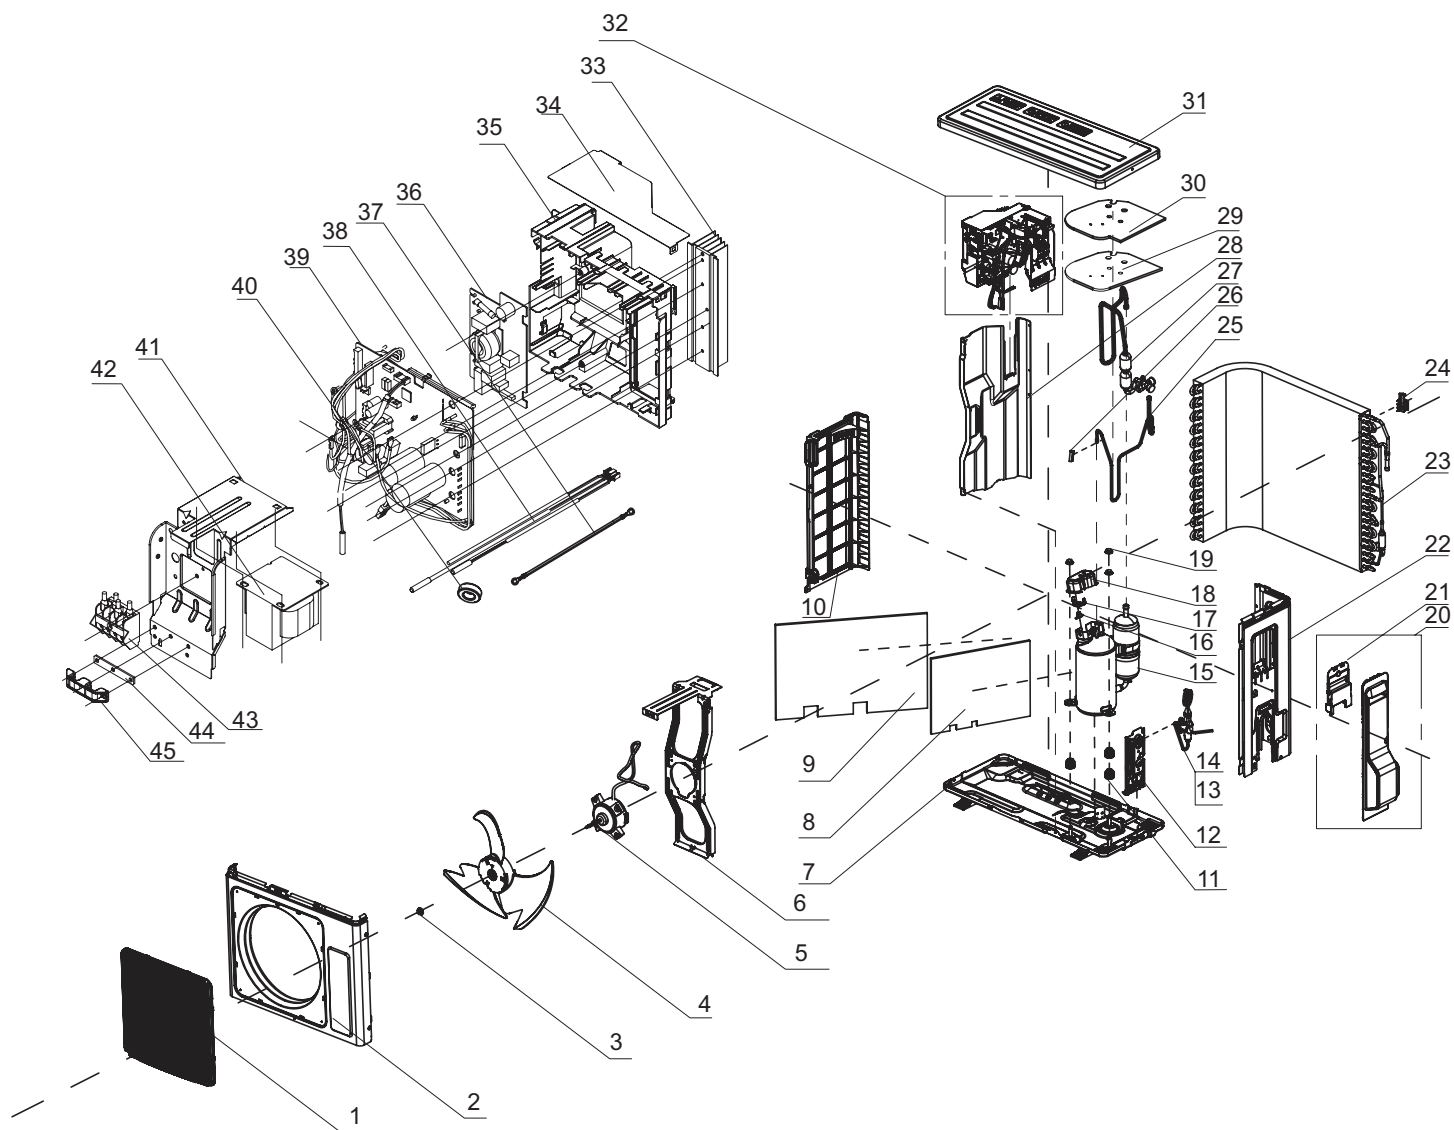

NO.	Description	Part Code		Qty
		GWC09QB-K3DNA1B/O	GWC12QC-K3DNA1B/O	
	Product Code	CB419W01600	CB419W01800	
1	Front Gril	22413018	22413018	1
2	Cabinet	01433418P	01433418P	1
3	Fan fixed nut	70313001	70313001	1
4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1
5	Fan Motor	15013073	15013073	1
6	Motor Support	0170312201	01703122	1
7	Chassis Sub-assy	02803265P	02803265P	1
8	Sound insulation Cotton 2	75013543	75013543	1
9	Sound insulation Cotton Assy	75013150	75013150	1
10	Left Side Plate	20053001	20053001	1
11	Damping Block	76710302	76710302	3
12	Valve Support	01713089	01713089	1
13	Cut-off Valve Assy	07133841	07133841	1
14	Capillary Sub-Assy	03163525	03163502	1
15	Compressor and fittings	00103896G	00103896G	1
16	Overload Protector	00180030	00180030	1
17	Overload Support	/	/	0
18	Terminal cap	/	/	0
19	Compressor fixed Bolt	70310013	70310013	3
20	Handle assy	26233046	26233046	1
21	Thermal baffle	26113005	26113005	1
22	Right Side Plate Sub-Assy	0130318001	0130318001	1
23	Condenser Assy	01103000189	01103000190	1
24	Temp sensor Support	3900030805	3900030805	1
25	Discharge Tube	03543405	03543124	1
26	Temperature Sensor clamp	2143021	02143021	1
27	Cut-off valve Sub-Assy	07133946	7133932	1
28	Clapboard	01233088	01233088	1
29	Sound insulation Cotton 3	75013568	75013568	1
30	Sound insulation Cotton 5	75013536	75013536	1
31	Top Cover Sub-Assy	01253071	01253071	1
32	Electric Box Assy	01403000094	01403000096	1
33	Radiator	49013063	49013063	1
34	Electric Box 2	01413155	01413155	1
35	Electric Box	20113018	20113018	1
36	Filter Plate	30033081	30033081	1
37	Wiring	4011001930	4011001930	1
38	Temperature Sensor	3900030805	3900030805	1
39	Main Board	30138000172	30138000174	1
40	Magnetic Ring	49010109	49010109	1
41	Electric Box 1	01413179	01413179	1
42	Reactor	43130184	43130184	1
43	Terminal Board	42010312	42010312	1
44	Insulation Gasket	70413007	70413007	1
45	Cable clamp	26113010	26113010	1

Above data is subject to change without notice.


GWH09QB-K3DNA1B/O  
GWH12QC-K3DNA1B/O

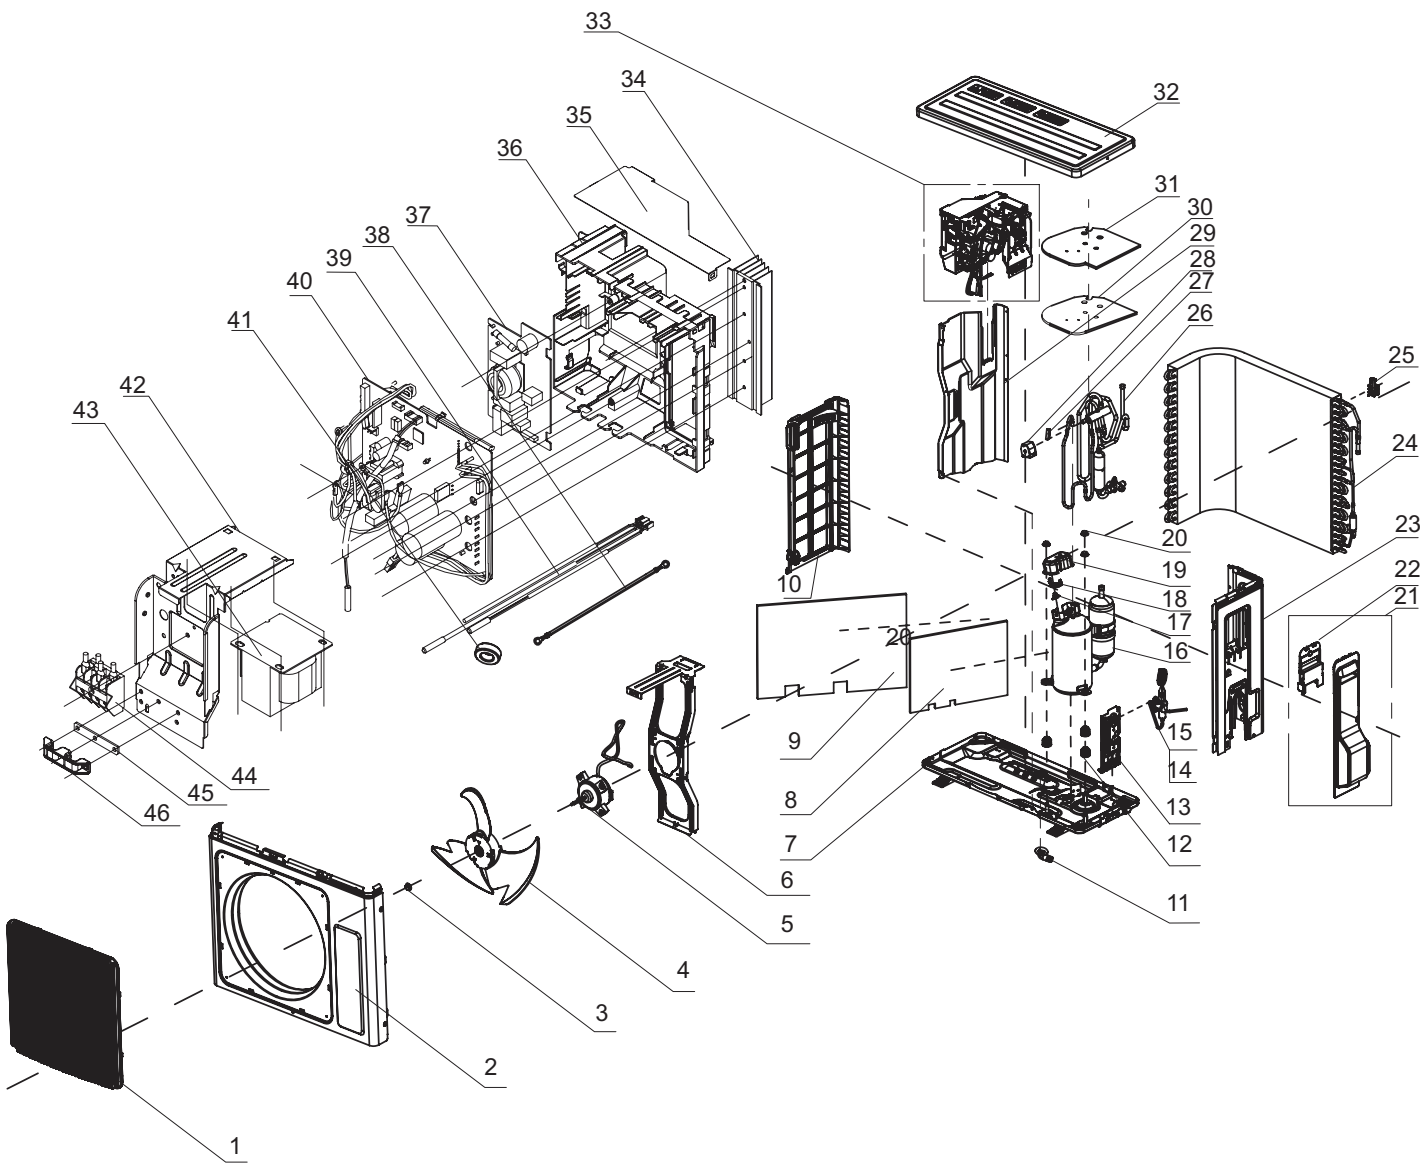

NO.	Description	Part Code		Qty
		GWH09QB-K3DNA1B/O	GWH12QC-K3DNA1B/O	
	Product Code	CB419W01700	CB419W01900	
1	Front Gril	22413018	22413018	1
2	Cabinet	01433418P	01433418P	1
3	Fan fixed nut	70313001	70313001	1
4	Axial Flow Fan Sub-Assy	1033300901	1033300901	1
5	Fan Motor	15013073	15013073	1
6	Motor Support	0170312201	01703122	1
7	Chassis Sub-assy	02803264P	02803265P	1
8	Sound insulation Cotton 2	75013543	75013543	1
9	Sound insulation Cotton Assy	75013150	75013150	1
10	Left Side Plate	20053001	20053001	1
11	11Drainage Joint	06123024	06123024	1
12	Compressor Gasket	76710302	76710302	3
13	Valve Support	01713089	01713089	1
14	Cut-off Valve Assy	07133841	07133841	1
15	Capillary Sub-Assy	03163524	03163501	1
16	Compressor and fittings	00103896G	00103896G	1
17	Overload Protector	00180030	00180030	1
18	Overload Support	/	/	0
19	Terminal cap	/	/	0
20	Compressor fixed Bolt	70310013	70310013	3
21	Handle assy	26233046	26233046	1
22	Thermal baffle	26113005	26113005	1
23	Right Side Plate Sub-Assy	0130318001	0130318001	1
24	Condenser Assy	01103000189	01103000190	1
25	Temp sensor Support	3900030805	3900030805	1
26	4-way Valve Assy	03073299	03073152	1
27	Temperature Sensor clamp	02143021	02143021	1
28	Magnet Coil	07133945	07133931	1
29	Clapboard	01233088	01233088	1
30	Sound insulation Cotton 3	75013568	75013568	1
31	Sound insulation Cotton 4	/	/	0
32	Top Cover Sub-Assy	01253071	01253071	1
33	Electric Box Assy	01403000095	01403000089	1
34	Radiator	49013063	49013063	1
35	Electric Box 2	01413155	01413155	1
36	Electric Box	20113018	20113018	1
37	Filter Plate	30033081	30033081	1
38	Wiring	4011001930	4011001930	1
39	Temperature Sensor	3900030805	3900030805	1
40	Main Board	30138000173	30138000175	1
41	Magnetic Ring	49010109	49010109	1
42	Electric Box 1	01413179	01413179	1
43	Reactor	43130184	43130184	1
44	Terminal Board	42010312	42010312	1
45	Insulation Gasket	70413007	70413007	1
46	Cable clamp	26113010	26113010	1

Above data is subject to change without notice.

GWC18QD-K3DNA1B/O

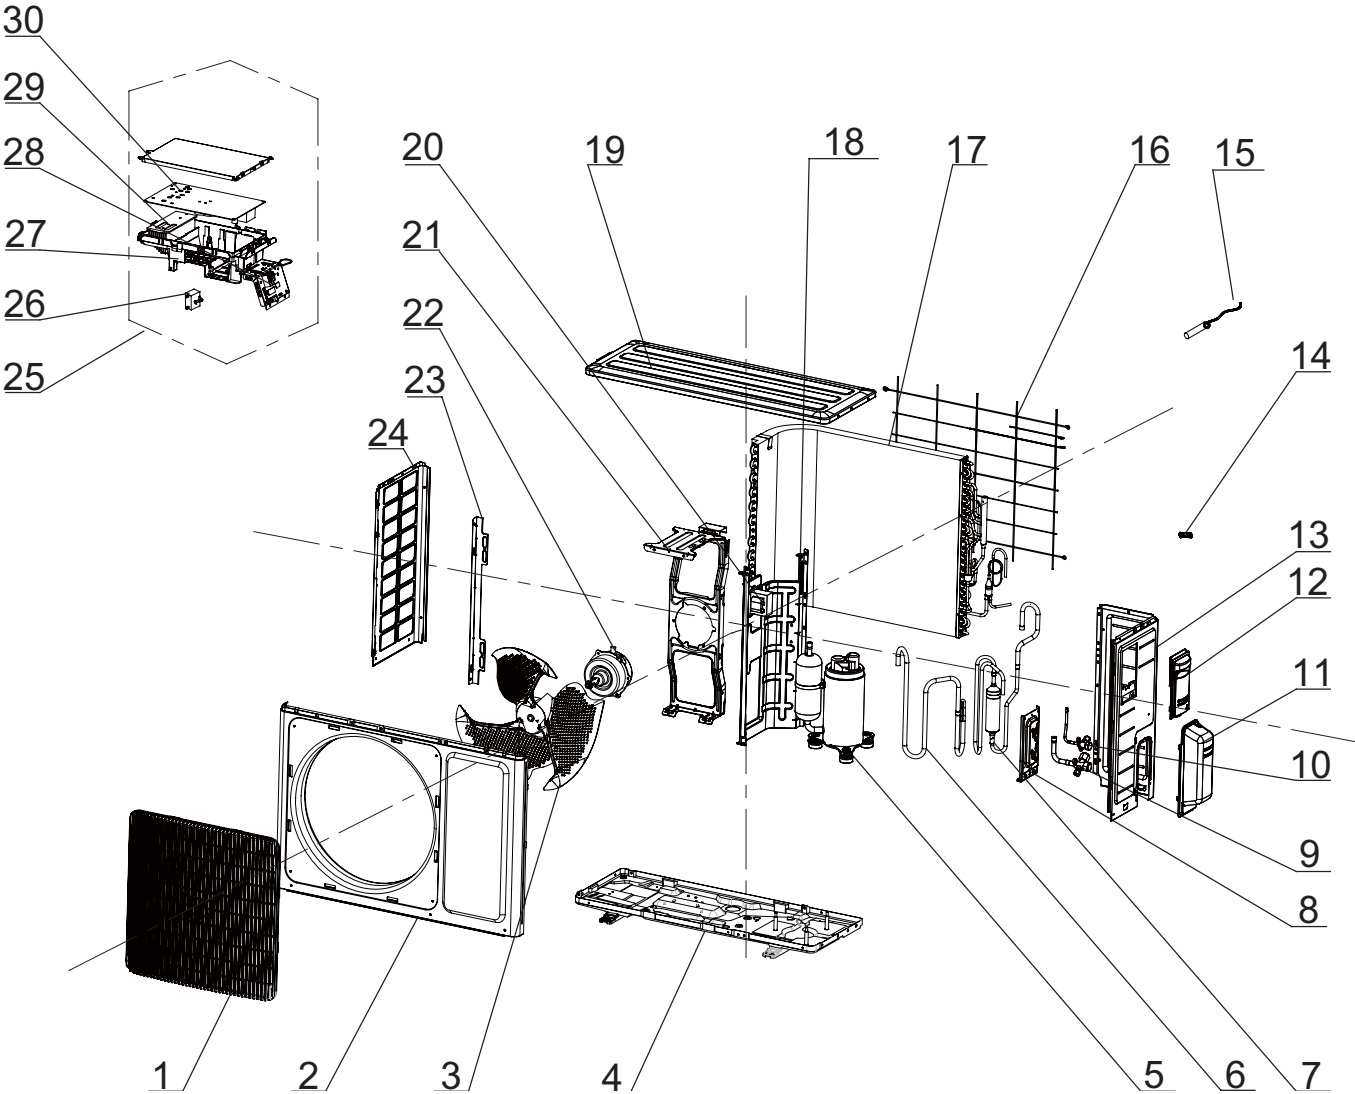




NO.	Description	Part Code	Qty
		GWC18QD-K3DNA1B/O	
		Product Code	
		CB419W02000	
1	Front Grill	22413015	1
2	Cabinet	01433034P	1
3	Axial Flow Fan	10333016	1
4	Chassis Sub-assy	01205176P	1
5	Compressor and Fittings	00105249G	1
6	Inhalation Tube Sub-assy	03833863	1
7	Discharge Tube Sub-assy	03833862	1
8	Valve Support Sub-Assy	01713115P	1
9	Cut off Valve Sub-Assy	07335707	1
10	Cut off Valve Sub-Assy	07335708	1
11	Valve Cover	22243005	1
12	Big Handle	26233431	1
13	Right Side Plate	0130324403P	1
14	Wire Clamp	71010003	1
15	Temperature Sensor	3900030901	1
16	Rear Grill	01475019	1
17	Condenser Assy	01103000183	1
18	Clapboard Sub-Assy	01233168	1
19	Coping	01253034P	1
20	Reactor	43130186	1
21	Motor Support Sub-Assy	0170339802	1
22	Fan Motor	1501307502	1
23	Condenser Support Plate	01173165	1
24	Left Side Plate	01303169P	1
25	Electric Box Assy	20102000309	1
26	Capacitor CBB61	33010010	1
27	Electric Box	20113027	1
28	Terminal Board	420111041	1
29	Radiator	4901302801	1
30	Main Board	30138000168	1

Above data is subject to change without notice.


**GWH18QD-K3DNA1B/O**

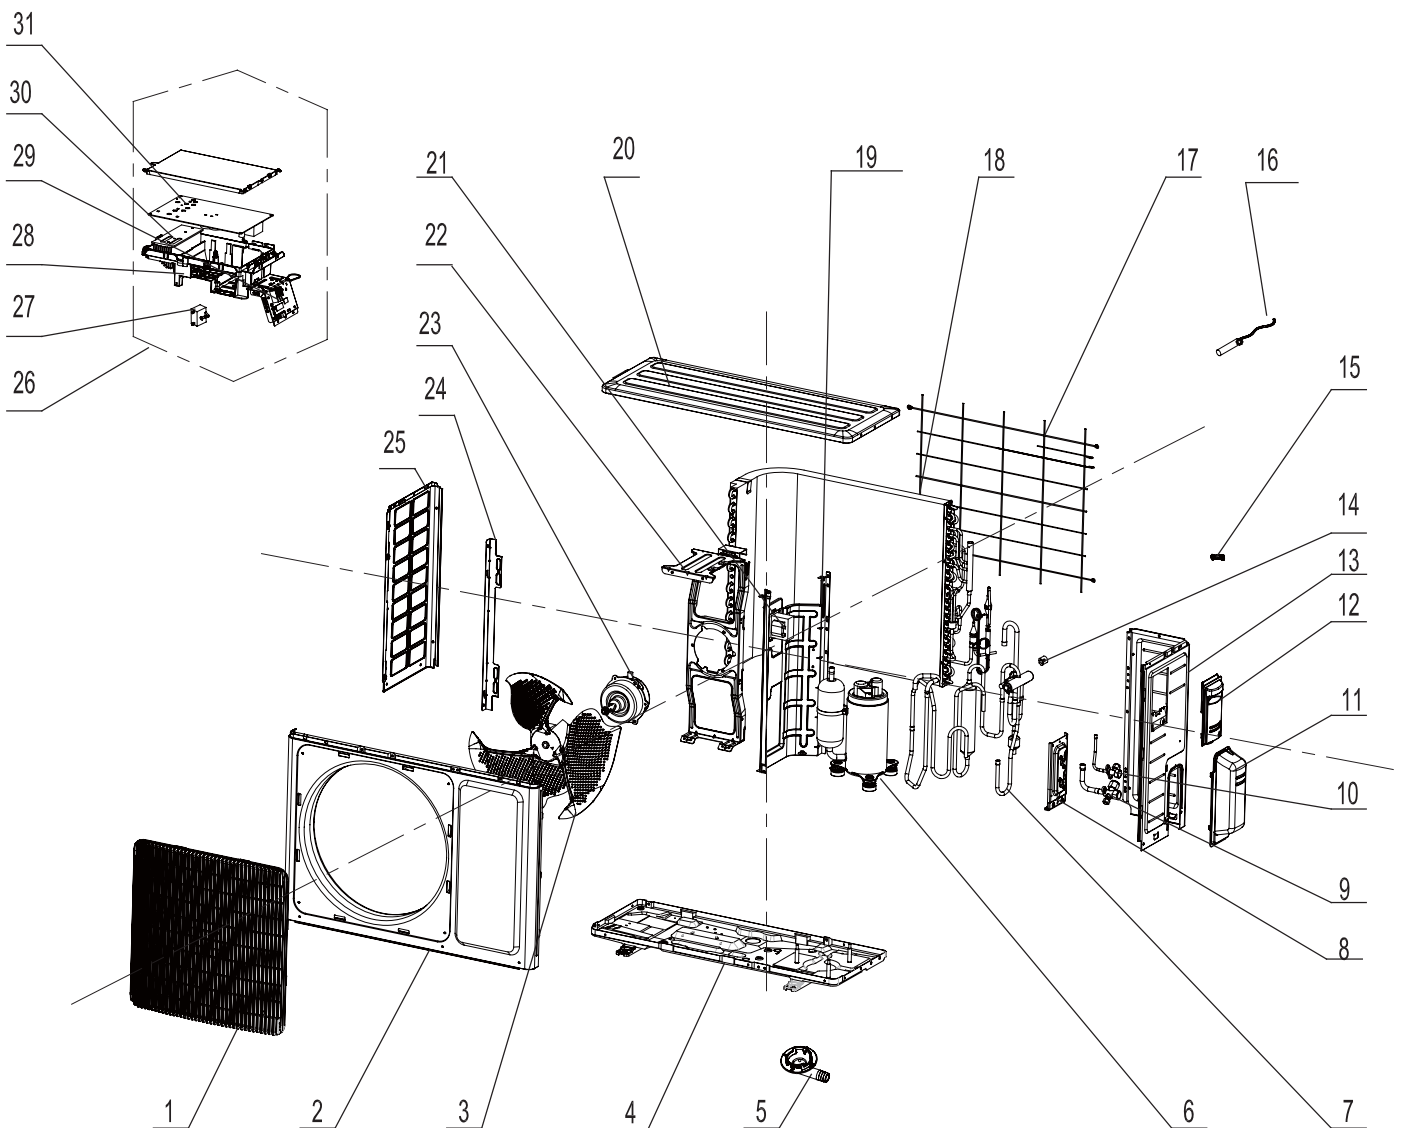





NO.	Description	Part Code	Qty
		GWH18QD-K3DNA1B/O	
		Product Code	
		CB419W02100	
1	Front Grill	22413015	1
2	Cabinet	01433034P	1
3	Axial Flow Fan	10333016	1
4	Chassis Sub-assy	01205176P	1
5	Drainage Joint	26113009	1
6	Compressor and Fittings	00105249G	1
7	4-Way Valve Assy	03025478	1
8	Valve Support Sub-Assy	01713115P	1
9	Cut off Valve Sub-Assy	07335707	1
10	Cut off Valve Sub-Assy	07335708	1
11	Valve Cover	22243005	1
12	Big Handle	26233431	1
13	Right Side Plate	0130324403P	1
14	Magnet Coil	4300040045	1
15	Wire Clamp	71010003	1
16	Temperature Sensor	3900030901	1
17	Rear Grill	01475019	1
18	Condenser Assy	01103000182	1
19	Clapboard Sub-Assy	01233168	1
20	Coping	01253034P	1
21	Reactor	43130186	1
22	Motor Support Sub-Assy	0170339802	1
23	Fan Motor	1501307502	1
24	Condenser Support Plate	01173165	1
25	Left Side Plate	01303169P	1
26	Electric Box Assy	20102000309	1
27	Capacitor CBB61	33010010	1
28	Electric Box	20113027	1
29	Terminal Board	420111041	1
30	Radiator	4901302801	1
31	Main Board	30138000168	1





Above data is subject to change without notice.

# 11. Removal Procedure






 **Warning:** Be sure to wait for a minimum of 20 minutes after turning off all power supplies and discharge the refrigerant completely before removal.

## 11.1 Removal Procedure of Indoor Unit

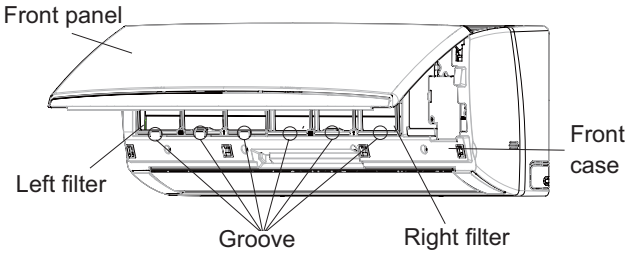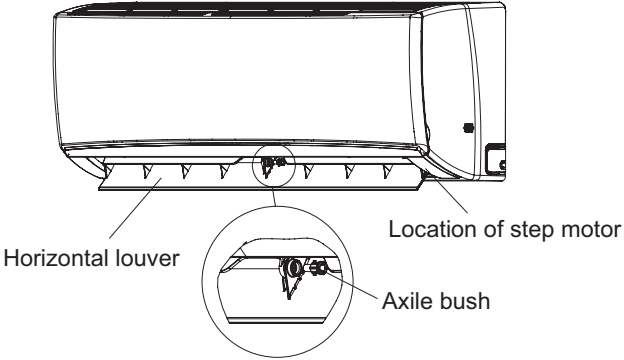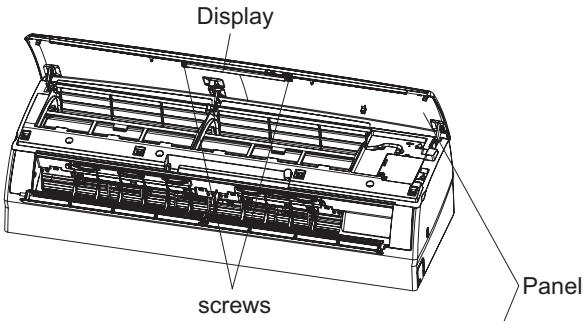
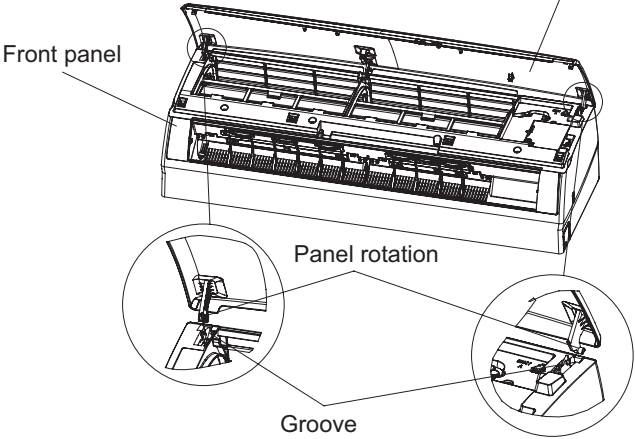
Step	Procedure	
1. Remove filter assembly		
	Open the front panel. Push the left filter and right filter until they are separate from the groove on the front panel. Remove the left filter and right filter respectively.	
2. Remove horizontal louver		
	Push out the axle bush on horizontal louver. Bend the horizontal louver with hand and then separate the horizontal louver from the crankshaft of step motor to remove it.	
3. Remove panel		
a	Screw off the 2 screws that are locking the display board. Separate the display board from the front panel.	
b	Separate the panel rotation shaft from the groove fixing the front panel and then removes the front panel.	

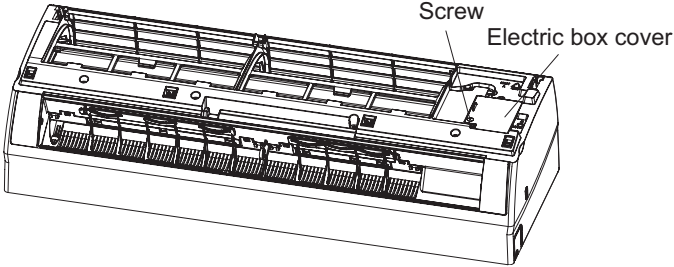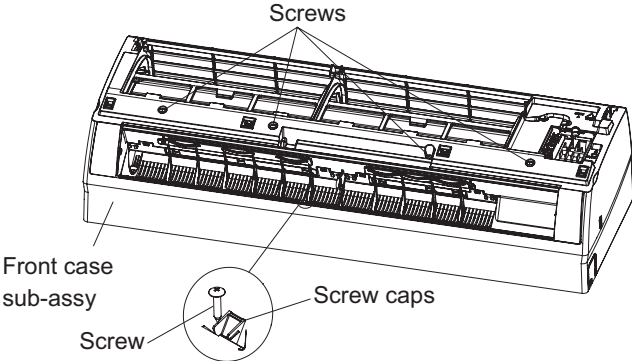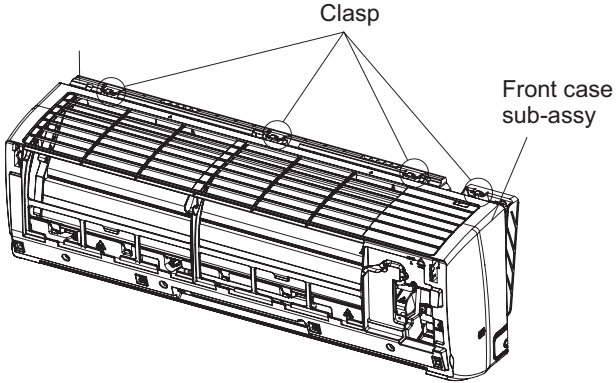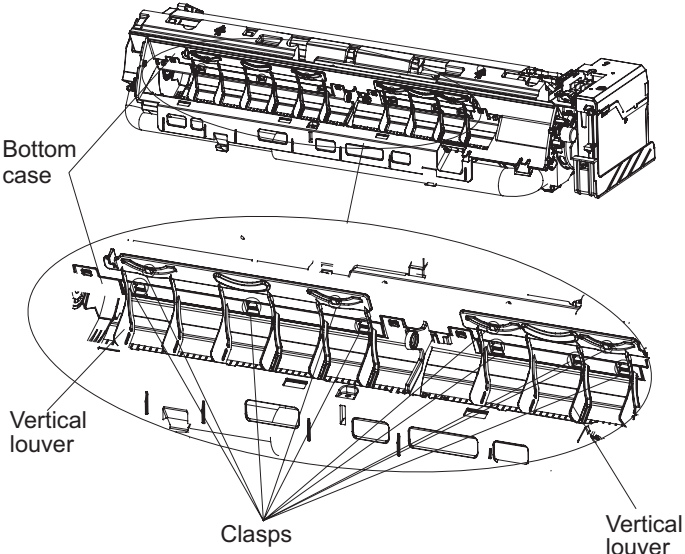Step	Procedure	
4. Remove electric box cover		
	Remove the screws on the electric box cover to remove the electric box cover.	
5. Remove front case sub-assy		
a	Remove the screws fixing front case.  Note: 1.Open the screw caps before removing the screws around the air outlet. 2.The quantity of screws fixing the front case sub-assy is different for different models.	
b	Loosen the connection clasps between front case sub-assy and bottom case. Lift up the front case sub-assy and take it out.	
6. Remove vertical louver		
	Loosen the connection clasps between vertical louver and bottom case to remove vertical louver.	

Step	Procedure
7. Remove electric box assy	
a	<p>Loosen the connection clasps between shield cover of electric box sub-assy and electric box, and then remove the shield cover of electric box sub-assy. Remove the screw fixing electric box assy .</p>
b	<p>① Take off the water retaining sheet. Remove the cold plasma generator by screwing off the locking screw on the generator. ② Take off the indoor tube temperature sensor. ③ Screw off 1 grounding screw. ④ Remove the wiring terminals of motor and stepping motor. ⑤ Remove the electric box assy.</p>
c	<p>Twist off the screws that are locking each lead wire and rotate the electric box assy. Twist off the screws that are locking the wire clip. Loosen the power cord and remove its wiring terminal. Lift up the main board and take it off.</p>

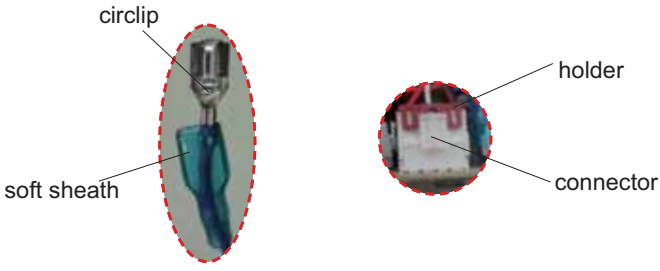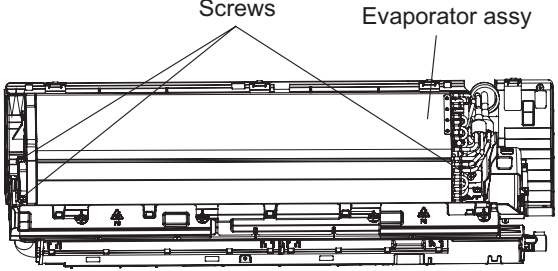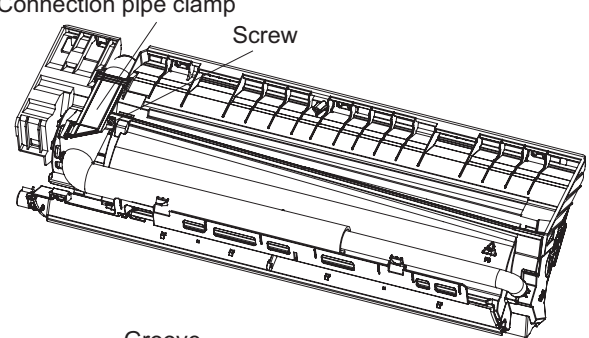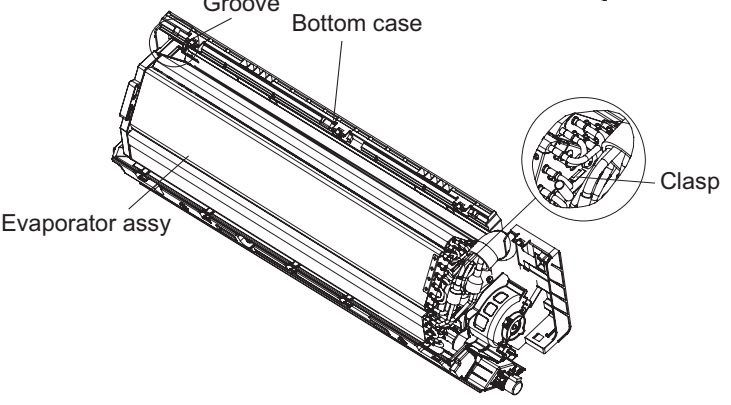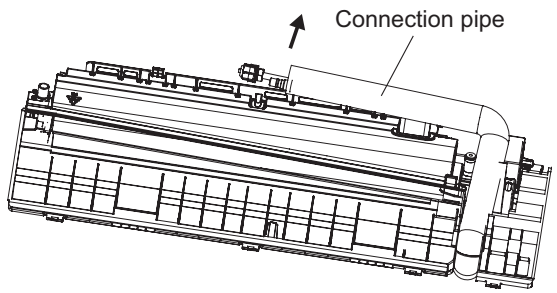Step	Procedure	
	<p>Instruction: Some wiring terminal of this product is with lock catch and other devices. The pulling method is as below:</p> <p>1.Remove the soft sheath for some terminals at first, hold the circlip and then pull out the terminals.</p> <p>2.Pull out the holder for some terminals at first (holder is not available for some wiring terminal), hold the connector and then pull the terminal.</p>	 <p>Diagram illustrating the pulling method for wiring terminals. It shows two scenarios: one where a circlip is used to hold the terminal while the soft sheath is removed, and another where a holder and connector are used to pull out the terminal.</p>
8. Remove evaporator assy		
a	Remove 3 screws fixing evaporator assy.	 <p>Diagram showing the removal of three screws from the evaporator assembly. The screws are labeled 'Screws' and the assembly is labeled 'Evaporator assy'.</p>
b	At the back of the unit, remove the screw fixing connection pipe clamp and then remove the connection pipe clamp.	 <p>Diagram showing the removal of the connection pipe clamp. The clamp is labeled 'Connection pipe clamp' and the screw is labeled 'Screw'.</p>
c	First remove the left side of the evaporator from the groove of bottom case and then remove the right side from the clasp on the bottom case.	 <p>Diagram showing the removal of the evaporator assembly from the bottom case. The evaporator assembly is labeled 'Evaporator assy', the bottom case is labeled 'Bottom case', the groove is labeled 'Groove', and the clasp is labeled 'Clasp'.</p>
d	Adjust the position of connection pipe on evaporator slightly and then lift the evaporator upwards to remove it.	 <p>Diagram showing the adjustment of the connection pipe on the evaporator. The connection pipe is labeled 'Connection pipe'.</p>


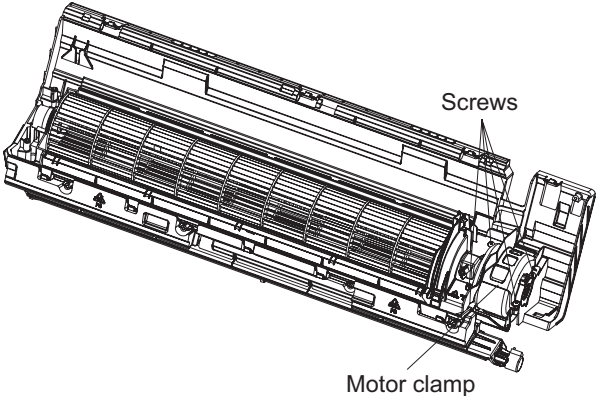
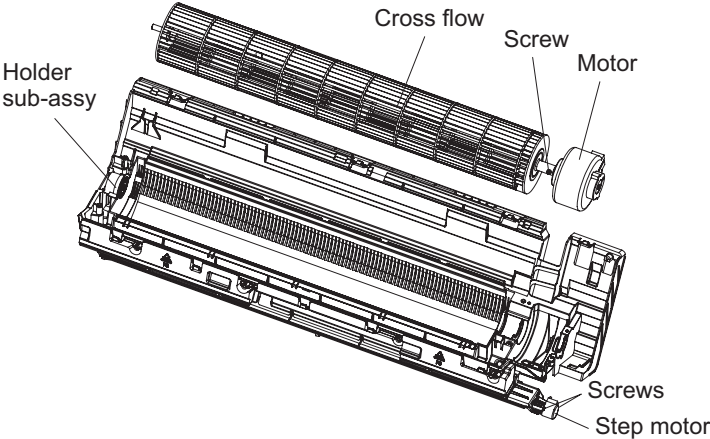




Step	Procedure	
9. Remove motor and cross flow blade		
a	Remove the screws fixing motor clamp and then remove the motor clamp.	
b	Remove the screws at the connection place of cross flow blade and motor; lift the motor and cross flow blade upwards to remove them. Remove the bearing holder sub-assy. Remove the screw fixing step motor and then remove the step motor.	








# 11.2 Removal Procedure of Outdoor Unit



NOTE: Take heat pump for example  
9K/12k

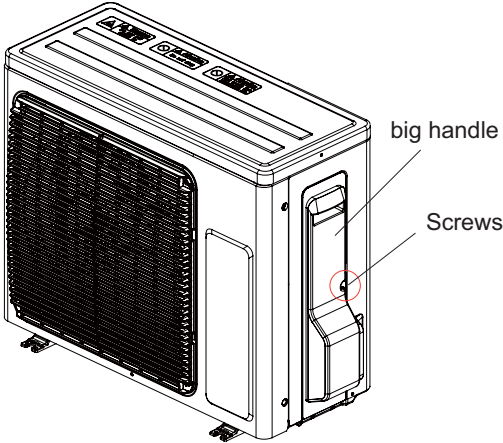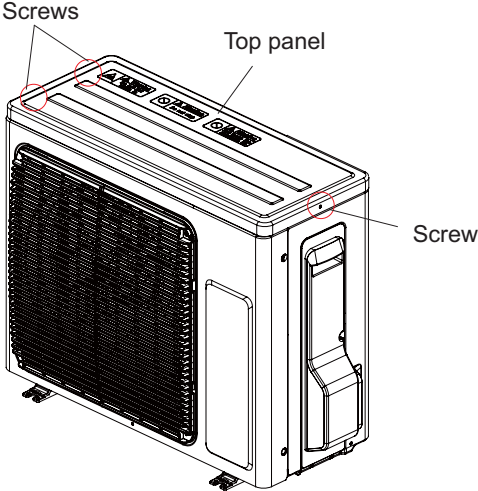
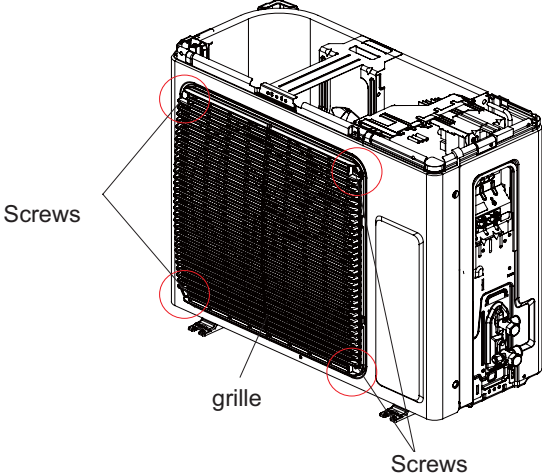
Step	Procedure
1. Remove big handle	<div><div><div>Remove the screw fixing big handle; slide out the big handle down wards to make the clasp of big handle separate from the groove of right side plate, and then remove the big handle.</div><div>A perspective view of the outdoor unit. A red circle highlights a screw on the right side plate that secures the big handle. Labels 'big handle' and 'Screws' point to the handle and the highlighted screw respectively.</div></div></div>
2. Remove top panel	<div><div><div>Remove the screws fixing top panel and then remove the top panel.</div><div>A perspective view of the outdoor unit. Red circles highlight screws on the top panel. Labels 'Screws', 'Top panel', and 'Screw' point to the highlighted screws, the top panel, and one of the screws respectively.</div></div></div>
3. Remove front grille	<div><div><div>Remove the 4 screws connecting the grille and outer case, and then remove the panel grille.</div><div>A perspective view of the outdoor unit with the top panel removed. Red circles highlight four screws that connect the front grille to the outer case. Labels 'Screws', 'grille', and 'Screws' point to the highlighted screws, the grille, and one of the screws respectively.</div></div></div>

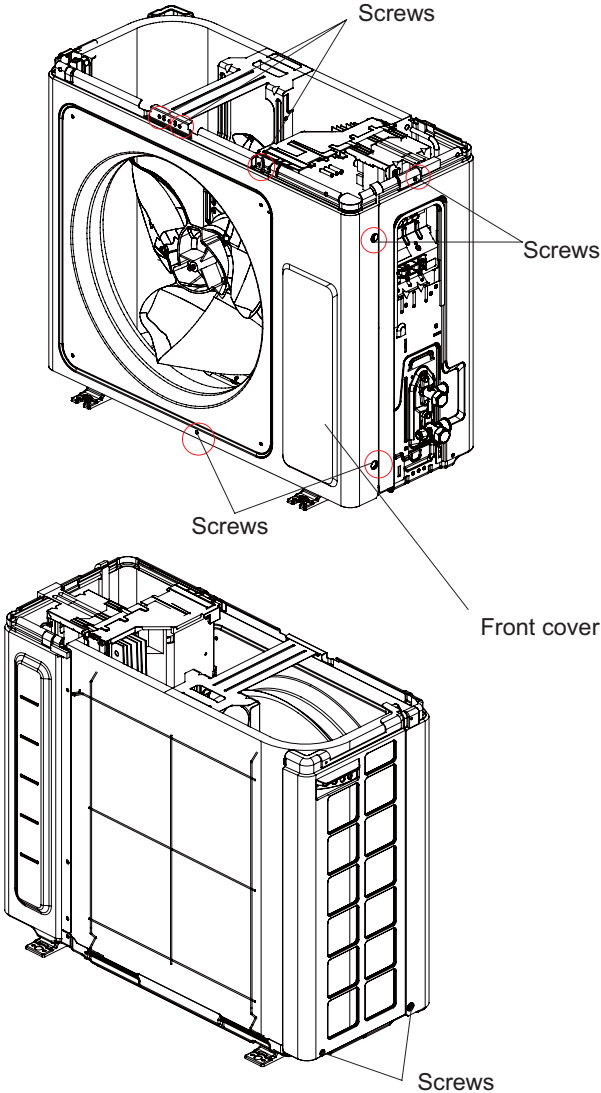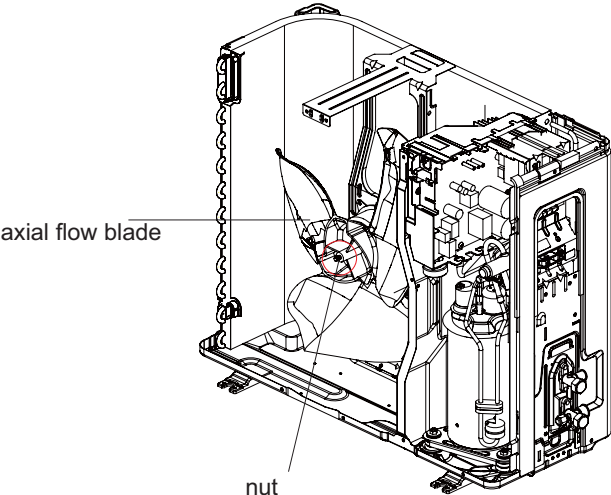Step	Procedure
4. Remove the front cover	<div><div><p>Screw off the screws that are locking the front cover. Then take it off</p></div><div></div></div>
5. Remove axial flow blade	<div><div><p>Remove the nut fixing axial flow blade and then remove the blade.</p></div><div></div></div>


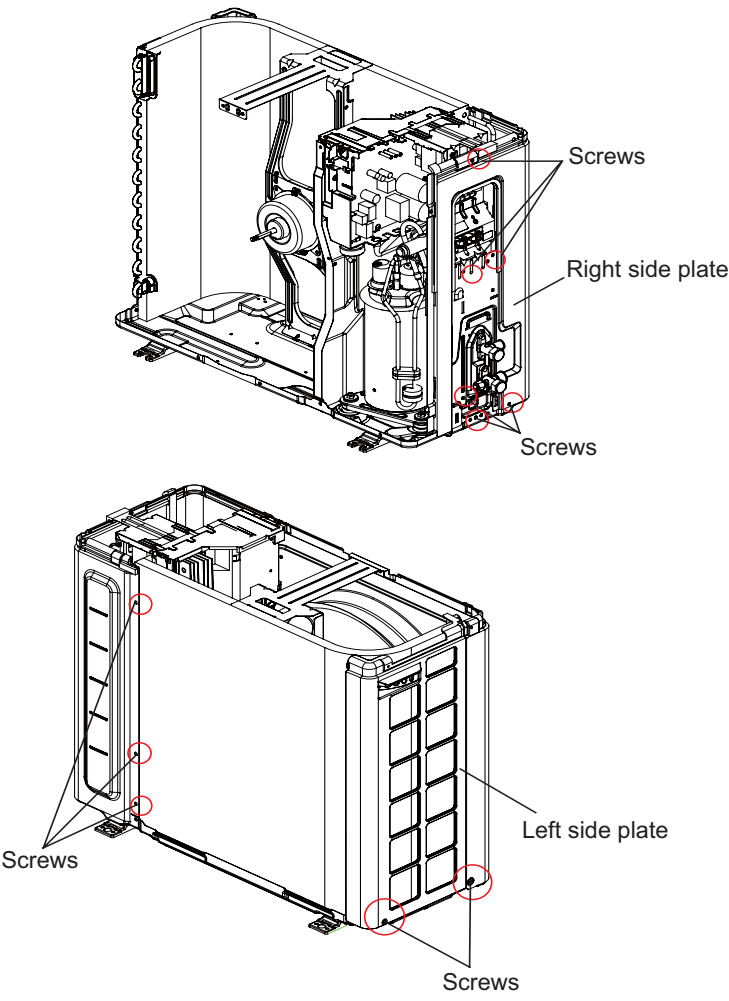
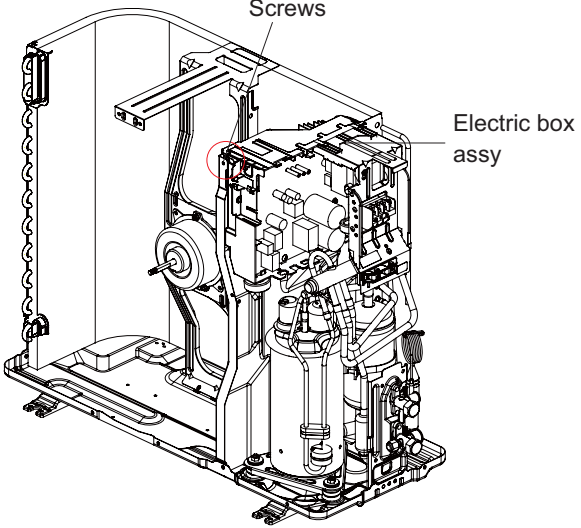
Step	Procedure
<p>6. Remove right side plate and left side plate</p> <p>Remove the screws fixing protective grille and then remove the protective grille.</p> <p>Remove the screws fixing left side plate and then remove the right side plate.</p>	 <p>The top diagram illustrates the removal of the right side plate. It shows a side view of the machine's internal components with the right side plate partially detached. Red circles highlight the screws that hold the plate in place. Labels include 'Screws' and 'Right side plate'.</p> <p>The bottom diagram illustrates the removal of the left side plate. It shows a side view of the machine's internal components with the left side plate partially detached. Red circles highlight the screws that hold the plate in place. Labels include 'Screws' and 'Left side plate'.</p>
<p>7. Remove electric box assy</p> <p>Remove the screws fixing electric box assy ; pull out each wiring terminal; lift the electric box assy upwards to remove it.</p> <p>Note: When pulling out the wiring terminal, pay attention to loose the clasp and don't pull it so hard.</p>	 <p>The diagram shows the electric box assembly being removed from the machine. A red circle highlights the assembly, and a label points to it. Another label points to the screws that hold it in place.</p>

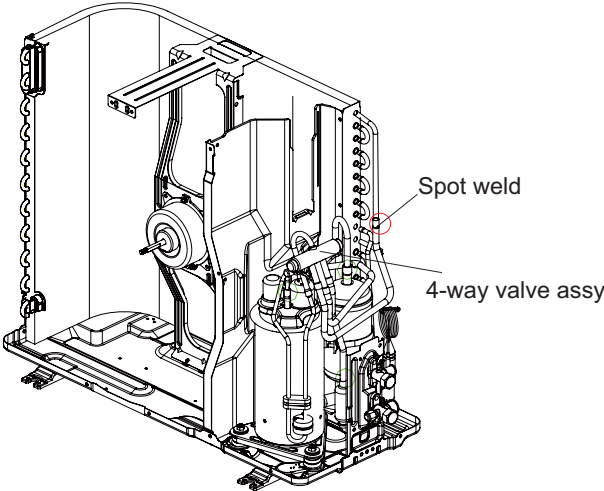
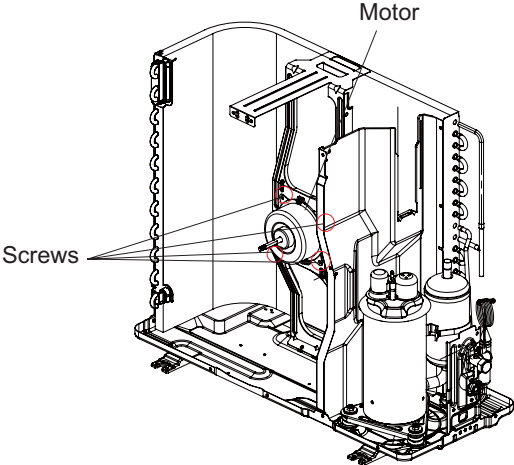
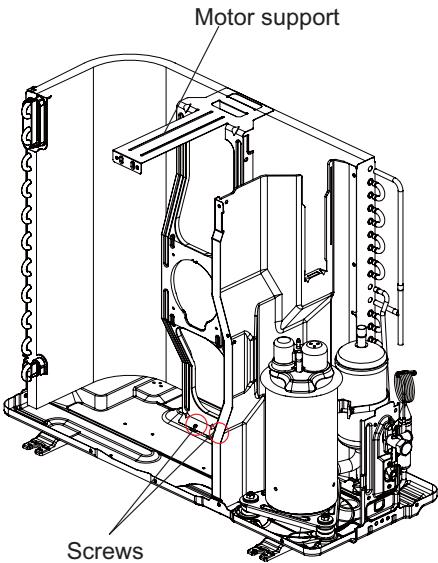
Step	Procedure	
8. Remove 4-way valve assy		
	<p>Unsolder the spot weld of 4-way valve assy, compressor and condenser, and then remove the 4-way valve assy .</p> <p>Note: When unsoldering the spot weld, wrap the 4-way valve with wet cloth completely to avoid damaging the valve due to high temperature.</p>	 <p>The diagram shows a side view of the refrigeration unit's internal components. A red circle highlights the 'Spot weld' connecting the '4-way valve assy' to the compressor and condenser lines. Labels with leader lines point to the 'Spot weld' and the '4-way valve assy'.</p>
9. Remove motor		
	<p>Remove the screws fixing motor and then remove the motor.</p>	 <p>The diagram shows the internal components with the motor highlighted. Red circles indicate the locations of the 'Screws' that hold the 'Motor' in place. Labels with leader lines point to the 'Motor' and the 'Screws'.</p>
10. Remove motor support		
	<p>Remove the screws fixing motor support and then remove the motor support.</p>	 <p>The diagram shows the internal components with the motor support highlighted. Red circles indicate the locations of the 'Screws' that hold the 'Motor support' in place. Labels with leader lines point to the 'Motor support' and the 'Screws'.</p>

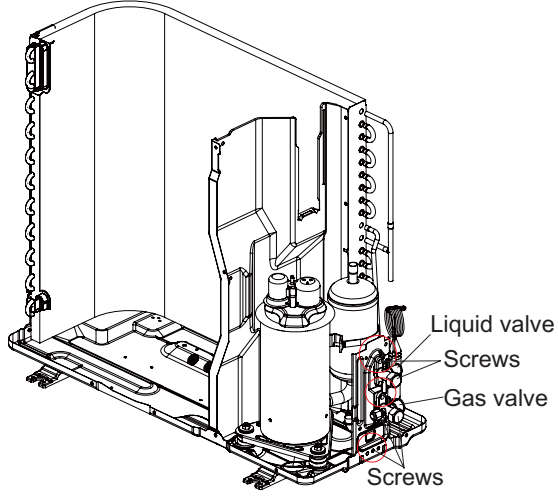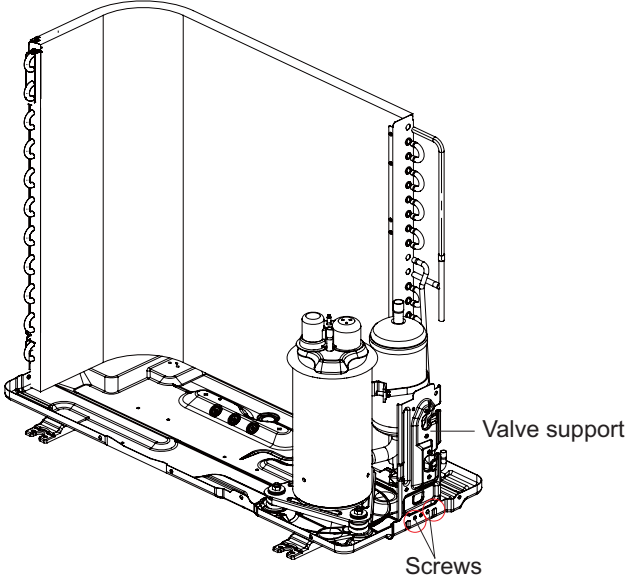Step	Procedure	
11. Remove gas valve and liquid valve	<p>Remove two screws fixing the gas valve, then remove the gas valve.</p> <p>Remove two screws fixing the liquid valve, then remove the liquid valve.</p>	
12. Remove clapboard		
13. Remove the valve support	<p>Screw off the screws that are locking the valve support. Then remove it.</p>	


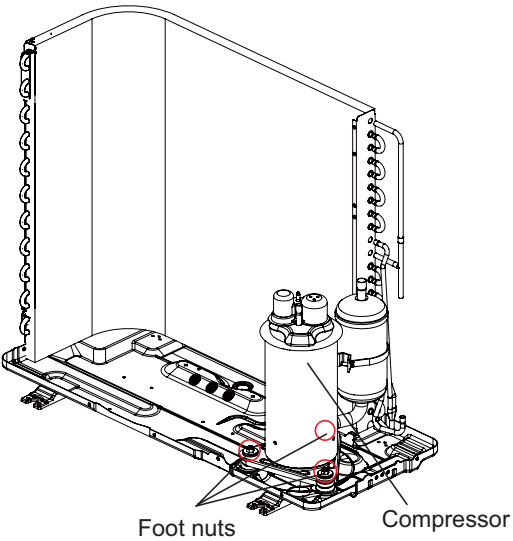
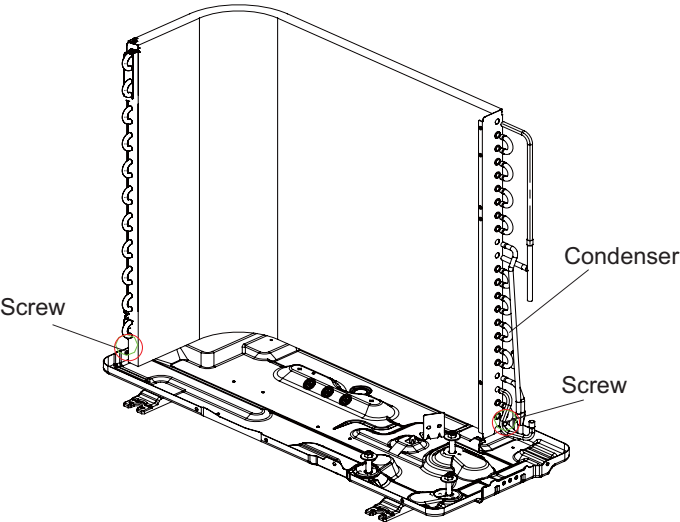
Step	Procedure	
14. Remove compressor		
15. Remove condenser		




18k

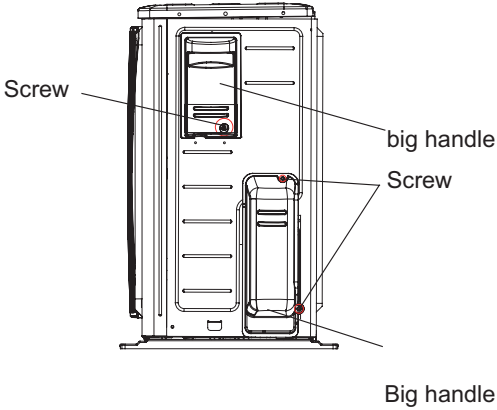
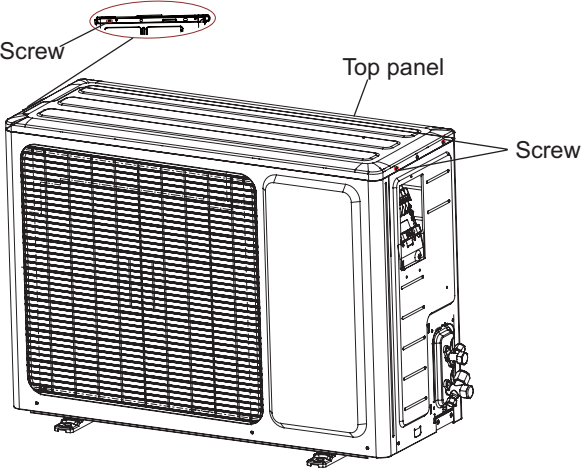
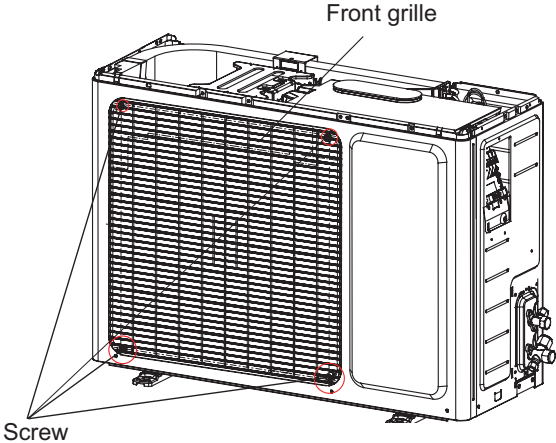
Step	Procedure	
1. Remove big handle	<p>Remove the screw fixing big handle; slide out the big handle down wards to make the clasp of big handle separate from the groove of right side plate, and then remove the big handle.</p>	
2. Remove top panel		
3. Remove front grille	<p>Remove connection screws between the front grille and the front panel. Then remove the front grille.</p>	 

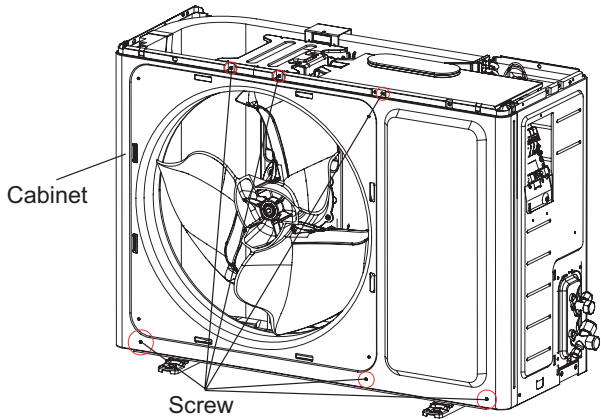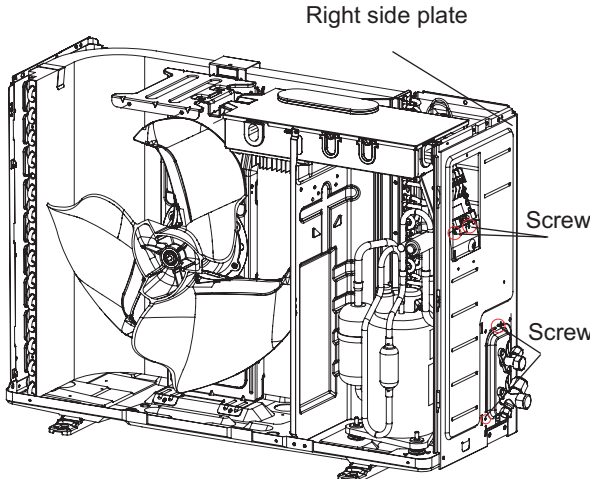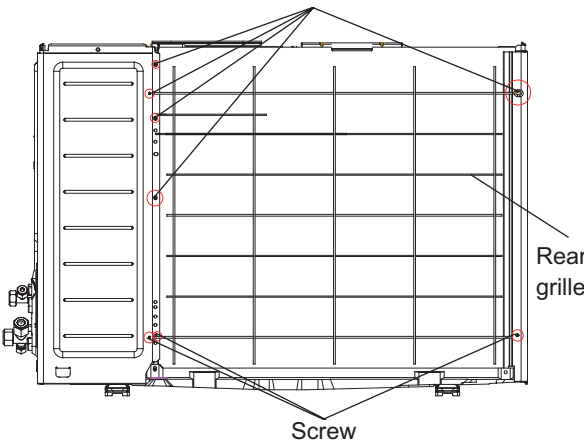
Step	Procedure
4. Remove cabinet	
	<p>Remove the screws fixing cabinet and then remove the cabinet.</p>  <p>Cabinet</p> <p>Screw</p>
5. Remove right side plate and rear grill	
	<p>Remove the screws fixing right side plate and then remove the right side plate.</p>  <p>Right side plate</p> <p>Screw</p> <p>Screw</p> <p>Remove the screws and then remove the grille.</p>  <p>Screw</p> <p>Rear grille</p> <p>Screw</p>

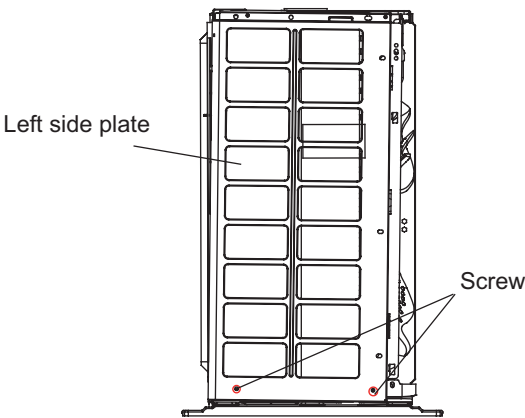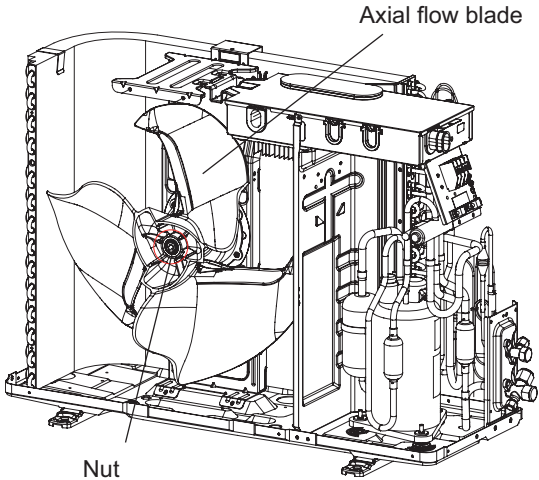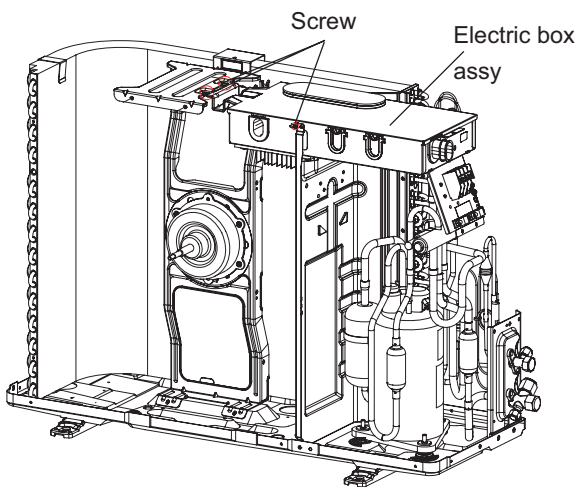

Step	Procedure
6. Remove left side plate	
<p>Remove the screws fixing left side plate and then remove the left side plate.</p>	 <p>Left side plate</p> <p>Screw</p>
7. Remove axial flow blade	
<p>Remove the nut fixing axial flow blade and then remove the axial flow blade.</p>	 <p>Axial flow blade</p> <p>Nut</p>
8. Remove electric box assy	
<p>Remove the screws fixing electric box assy ; pull out each wiring terminal; lift the electric box assy upwards to remove it.</p> <p>Note: When pulling out the wiring terminal, pay attention to loose the clasp and don't pull it so hard.</p>	 <p>Screw</p> <p>Electric box assy</p>

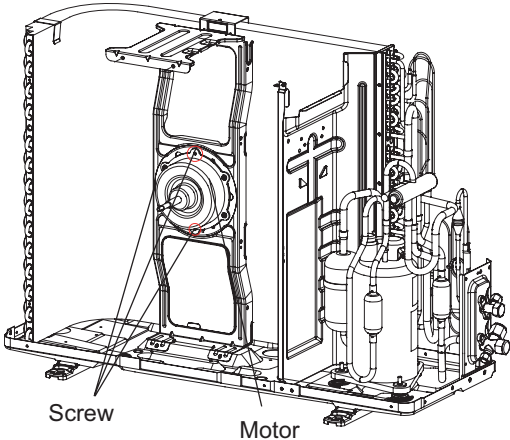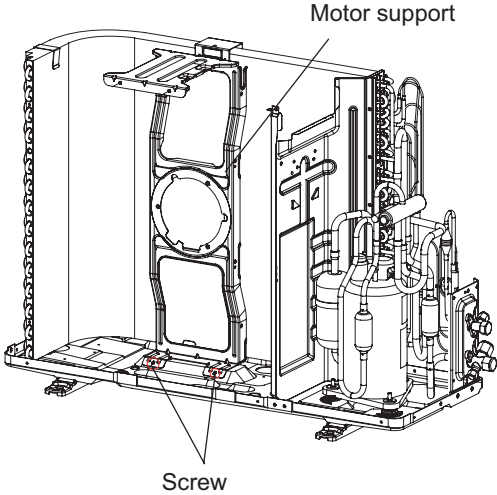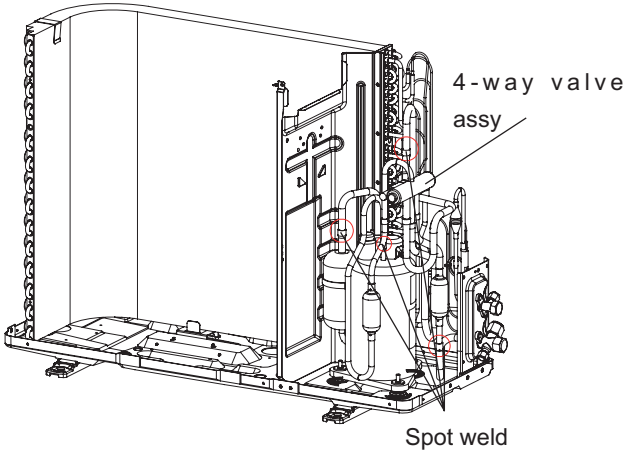Step	Procedure	
9.Remove motor		
	Remove the screws fixing motor and then remove the motor.	
10.Remove motor support		
	Remove the screws fixing motor support and then remove the motor support.	
11.Remove 4-way valve assy		
	Unsolder the spot weld of 4-way valve assy, compressor and condenser, and then remove the 4-way valve assy . Note: When unsoldering the spot weld, wrap the 4-way valve with wet cloth completely to avoid damaging the valve due to high temperature.	

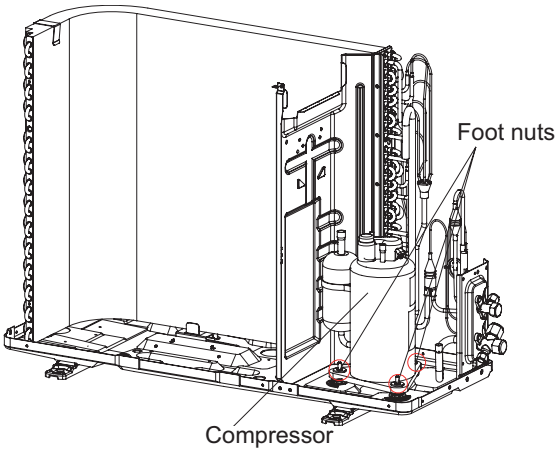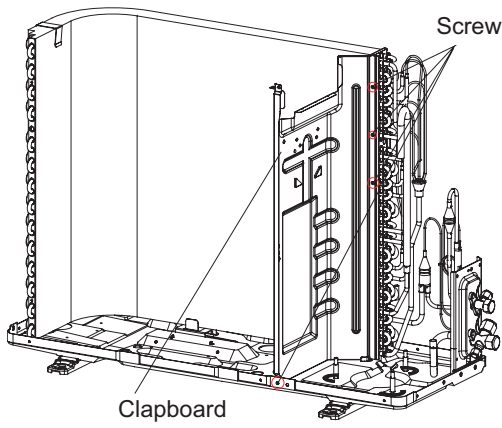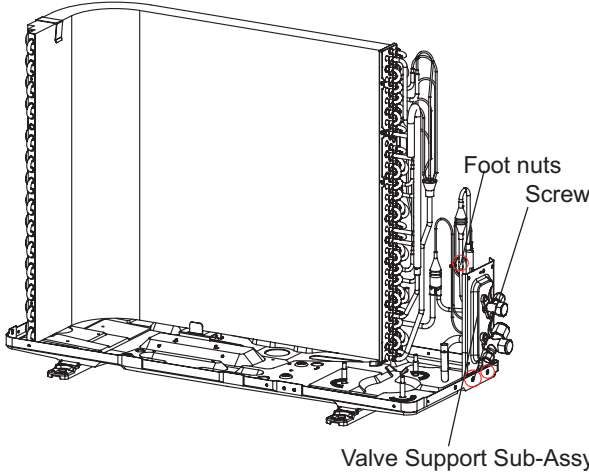Step	Procedure	
12.Remove compressor		
	<p>Remove 3 foot nuts on compressor, and then remove the compressor.</p> <p>Note: Protect the ports of discharge pipe and suction pipe to avoid foreign objects to enter it.</p>	
13.Remove clapboard		
	<p>Remove the screws fixing clapboard and then remove the clapboard.</p>	
14. Remove Valve support sub-assy		
	<p>Screw off the screws that are locking the valve support sub-assy. Then remove it.</p>	

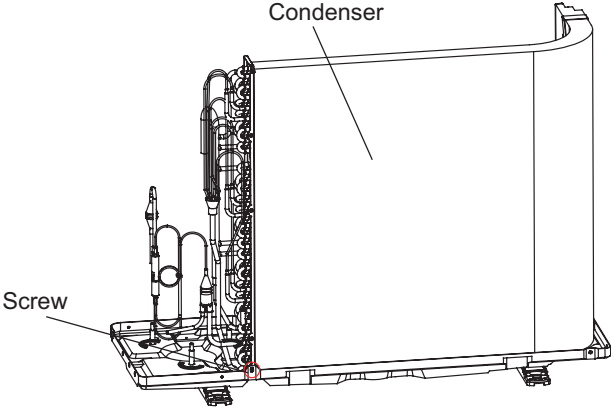Step	Procedure	
15. Remove condenser		
	Remove one screw fixing the condenser, then remove the condenser.	

## Appendix:

### Appendix 1: Reference Sheet of Celsius and Fahrenheit

Conversion formula for Fahrenheit degree and Celsius degree:  $T_f = T_c \times 1.8 + 32$

Set temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
61	60.8	16	69/70	69.8	21	78/79	78.8	26
62/63	62.6	17	71/72	71.6	22	80/81	80.6	27
64/65	64.4	18	73/74	73.4	23	82/83	82.4	28
66/67	66.2	19	75/76	75.2	24	84/85	84.2	29
68	68	20	77	77	25	86	86	30

Ambient temperature

Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)	Fahrenheit display temperature (°F)	Fahrenheit (°F)	Celsius (°C)
32/33	32	0	55/56	55.4	13	79/80	78.8	26
34/35	33.8	1	57/58	57.2	14	81	80.6	27
36	35.6	2	59/60	59	15	82/83	82.4	28
37/38	37.4	3	61/62	60.8	16	84/85	84.2	29
39/40	39.2	4	63	62.6	17	86/87	86	30
41/42	41	5	64/65	64.4	18	88/89	87.8	31
43/44	42.8	6	66/67	66.2	19	90	89.6	32
45	44.6	7	68/69	68	20	91/92	91.4	33
46/47	46.4	8	70/71	69.8	21	93/94	93.2	34
48/49	48.2	9	72	71.6	22	95/96	95	35
50/51	50	10	73/74	73.4	23	97/98	96.8	36
52/53	51.8	11	75/76	75.2	24	99	98.6	37
54	53.6	12	77/78	77	25			

### Appendix 2: Configuration of Connection Pipe

1. Standard length of connection pipe

- 5m, 7.5m, 8m.

2. Min. length of connection pipe is 3m.

3. Max. length of connection pipe and max. high difference.

4. The additional refrigerant oil and refrigerant charging required after prolonging connection pipe

- After the length of connection pipe is prolonged for 10m at the basis of standard length, you should add 5ml of refrigerant oil for each additional 5m of connection pipe.

- The calculation method of additional refrigerant charging amount (on the basis of liquid pipe):

Cooling capacity	Max length of connection pipe	Max height difference
5000 Btu/h(1465 W)	15 m	5 m
7000 Btu/h(2051 W)	15 m	5 m
9000 Btu/h(2637 W)	15 m	10 m
12000 Btu/h(3516 W)	20 m	10 m
18000 Btu/h(5274 W)	25 m	10 m
24000 Btu/h(7032 W)	25 m	10 m
28000 Btu/h(8204 W)	30 m	10 m
36000 Btu/h(10548 W)	30 m	20 m
42000 Btu/h(12306 W)	30 m	20 m
48000 Btu/h(14064 W)	30 m	20 m

- When the length of connection pipe is above 5m, add refrigerant according to the prolonged length of liquid pipe. The additional refrigerant charging amount per meter is different according to the diameter of liquid pipe. See the following sheet.

- Additional refrigerant charging amount = prolonged length of liquid pipe X additional refrigerant charging amount per meter

Additional refrigerant charging amount for R22, R407C, R410A and R134a			
Diameter of connection pipe		Outdoor unit throttle	
Liquid pipe(mm)	Gas pipe(mm)	Cooling only(g/m)	Cooling and heating(g/m)
Φ6	Φ9.5 or Φ12	15	20
Φ6 or Φ9.5	Φ16 or Φ19	15	20
Φ12	Φ19 or Φ22.2	30	120
Φ16	Φ25.4 or Φ31.8	60	120
Φ19	/	250	250
Φ22.2	/	350	350


Appendix 3: Pipe Expanding Method

⚠ Note:

Improper pipe expanding is the main cause of refrigerant leakage. Please expand the pipe according to the following steps:


A: Cut the pip

- Confirm the pipe length according to the distance of indoor unit and outdoor unit.
- Cut the required pipe with pipe cutter.

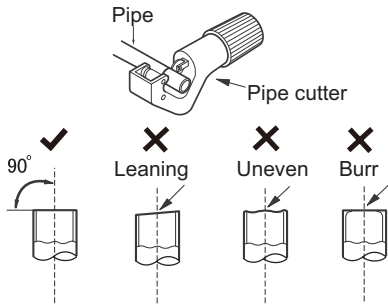

B: Remove the burrs


- Remove the burrs with shaper and prevent the burrs from getting into the pipe.

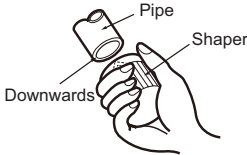

C: Put on suitable insulating pipe

D: Put on the union nut

- Remove the union nut on the indoor connection pipe and outdoor valve; install the union nut on the pipe.

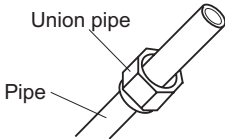


E: Expand the port

- Expand the port with expander.

⚠ Note:


- "A" is different according to the diameter, please refer to the sheet below:

Outer diameter(mm)	A(mm)	
	Max	Min
Φ6 - 6.35 (1/4")	1.3	0.7
Φ9.52 (3/8")	1.6	1.0
Φ12 - 12.70 (1/2")	1.8	1.0
Φ16 - 15.88 (5/8")	2.4	2.2

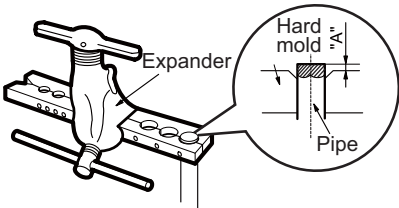

F: Inspection

- Check the quality of expanding port. If there is any blemish, expand the port again according to the steps above.

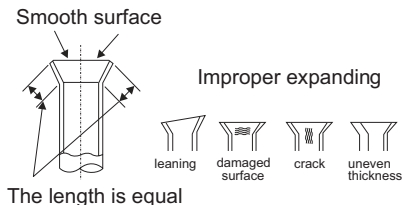

## Appendix 4: List of Resistance for Ambient Temperature Sensor

Resistance Table of Ambient Temperature Sensor for Indoor and Outdoor Units(15K)

Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)
-19	138.1	20	18.75	59	3.848	98	1.071
-18	128.6	21	17.93	60	3.711	99	1.039
-17	121.6	22	17.14	61	3.579	100	1.009
-16	115	23	16.39	62	3.454	101	0.98
-15	108.7	24	15.68	63	3.333	102	0.952
-14	102.9	25	15	64	3.217	103	0.925
-13	97.4	26	14.36	65	3.105	104	0.898
-12	92.22	27	13.74	66	2.998	105	0.873
-11	87.35	28	13.16	67	2.896	106	0.848
-10	82.75	29	12.6	68	2.797	107	0.825
-9	78.43	30	12.07	69	2.702	108	0.802
-8	74.35	31	11.57	70	2.611	109	0.779
-7	70.5	32	11.09	71	2.523	110	0.758
-6	66.88	33	10.63	72	2.439	111	0.737
-5	63.46	34	10.2	73	2.358	112	0.717
-4	60.23	35	9.779	74	2.28	113	0.697
-3	57.18	36	9.382	75	2.206	114	0.678
-2	54.31	37	9.003	76	2.133	115	0.66
-1	51.59	38	8.642	77	2.064	116	0.642
0	49.02	39	8.297	78	1.997	117	0.625
1	46.6	40	7.967	79	1.933	118	0.608
2	44.31	41	7.653	80	1.871	119	0.592
3	42.14	42	7.352	81	1.811	120	0.577
4	40.09	43	7.065	82	1.754	121	0.561
5	38.15	44	6.791	83	1.699	122	0.547
6	36.32	45	6.529	84	1.645	123	0.532
7	34.58	46	6.278	85	1.594	124	0.519
8	32.94	47	6.038	86	1.544	125	0.505
9	31.38	48	5.809	87	1.497	126	0.492
10	29.9	49	5.589	88	1.451	127	0.48
11	28.51	50	5.379	89	1.408	128	0.467
12	27.18	51	5.197	90	1.363	129	0.456
13	25.92	52	4.986	91	1.322	130	0.444
14	24.73	53	4.802	92	1.282	131	0.433
15	23.6	54	4.625	93	1.244	132	0.422
16	22.53	55	4.456	94	1.207	133	0.412
17	21.51	56	4.294	95	1.171	134	0.401
18	20.54	57	4.139	96	1.136	135	0.391
19	19.63	58	3.99	97	1.103	136	0.382

Resistance Table of Ambient Temperature Sensor for Indoor and Outdoor Units(20K)

Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)	Temp(°C)	Resistance(kΩ)
-19	181.4	20	25.01	59	5.13	98	1.427
-18	171.4	21	23.9	60	4.948	99	1.386
-17	162.1	22	22.85	61	4.773	100	1.346
-16	153.3	23	21.85	62	4.605	101	1.307
-15	145	24	20.9	63	4.443	102	1.269
-14	137.2	25	20	64	4.289	103	1.233
-13	129.9	26	19.14	65	4.14	104	1.198
-12	123	27	18.13	66	3.998	105	1.164
-11	116.5	28	17.55	67	3.861	106	1.131
-10	110.3	29	16.8	68	3.729	107	1.099
-9	104.6	30	16.1	69	3.603	108	1.069
-8	99.13	31	15.43	70	3.481	109	1.039
-7	94	32	14.79	71	3.364	110	1.01
-6	89.17	33	14.18	72	3.252	111	0.983
-5	84.61	34	13.59	73	3.144	112	0.956
-4	80.31	35	13.04	74	3.04	113	0.93
-3	76.24	36	12.51	75	2.94	114	0.904
-2	72.41	37	12	76	2.844	115	0.88
-1	68.79	38	11.52	77	2.752	116	0.856
0	65.37	39	11.06	78	2.663	117	0.833
1	62.13	40	10.62	79	2.577	118	0.811
2	59.08	41	10.2	80	2.495	119	0.77
3	56.19	42	9.803	81	2.415	120	0.769
4	53.46	43	9.42	82	2.339	121	0.746
5	50.87	44	9.054	83	2.265	122	0.729
6	48.42	45	8.705	84	2.194	123	0.71
7	46.11	46	8.37	85	2.125	124	0.692
8	43.92	47	8.051	86	2.059	125	0.674
9	41.84	48	7.745	87	1.996	126	0.658
10	39.87	49	7.453	88	1.934	127	0.64
11	38.01	50	7.173	89	1.875	128	0.623
12	36.24	51	6.905	90	1.818	129	0.607
13	34.57	52	6.648	91	1.736	130	0.592
14	32.98	53	6.403	92	1.71	131	0.577
15	31.47	54	6.167	93	1.658	132	0.563
16	30.04	55	5.942	94	1.609	133	0.549
17	28.68	56	5.726	95	1.561	134	0.535
18	27.39	57	5.519	96	1.515	135	0.521
19	26.17	58	5.32	97	1.47	136	0.509



Resistance Table of Ambient Temperature Sensor for Indoor and Outdoor Units(50K)

Temp(°C)	Resistance(kΩ)		Temp(°C)	Resistance(kΩ)		Temp(°C)	Resistance(kΩ)		Temp(°C)	Resistance(kΩ)
-29	853.5		10	98		49	18.34		88	4.75
-28	799.8		11	93.42		50	17.65		89	4.61
-27	750		12	89.07		51	16.99		90	4.47
-26	703.8		13	84.95		52	16.36		91	4.33
-25	660.8		14	81.05		53	15.75		92	4.20
-24	620.8		15	77.35		54	15.17		93	4.08
-23	580.6		16	73.83		55	14.62		94	3.96
-22	548.9		17	70.5		56	14.09		95	3.84
-21	516.6		18	67.34		57	13.58		96	3.73
-20	486.5		19	64.33		58	13.09		97	3.62
-19	458.3		20	61.48		59	12.62		98	3.51
-18	432		21	58.77		60	12.17		99	3.41
-17	407.4		22	56.19		61	11.74		100	3.32
-16	384.5		23	53.74		62	11.32		101	3.22
-15	362.9		24	51.41		63	10.93		102	3.13
-14	342.8		25	49.19		64	10.54		103	3.04
-13	323.9		26	47.08		65	10.18		104	2.96
-12	306.2		27	45.07		66	9.83		105	2.87
-11	289.6		28	43.16		67	9.49		106	2.79
-10	274		29	41.34		68	9.17		107	2.72
-9	259.3		30	39.61		69	8.85		108	2.64
-8	245.6		31	37.96		70	8.56		109	2.57
-7	232.6		32	36.38		71	8.27		110	2.50
-6	220.5		33	34.88		72	7.99		111	2.43
-5	209		34	33.45		73	7.73		112	2.37
-4	198.3		35	32.09		74	7.47		113	2.30
-3	199.1		36	30.79		75	7.22		114	2.24
-2	178.5		37	29.54		76	7.00		115	2.18
-1	169.5		38	28.36		77	6.76		116	2.12
0	161		39	27.23		78	6.54		117	2.07
1	153		40	26.15		79	6.33		118	2.02
2	145.4		41	25.11		80	6.13		119	1.96
3	138.3		42	24.13		81	5.93		120	1.91
4	131.5		43	23.19		82	5.75		121	1.86
5	125.1		44	22.29		83	5.57		122	1.82
6	119.1		45	21.43		84	5.39		123	1.77
7	113.4		46	20.6		85	5.22		124	1.73
8	108		47	19.81		86	5.06		125	1.68
9	102.8		48	19.06		87	4.90		126	1.64

JF00301965



**GREE ELECTRIC APPLIANCES, INC. OF ZHUHAI**

Add: West Jinji Rd, Qianshan, Zhuhai, Guangdong, China 519070

Tel: (+86-756) 8522218 Fax: (+86-756) 8669426

Email: [gree@gree.com.cn](mailto:gree@gree.com.cn) Http: [www.gree.com](http://www.gree.com)

**HONG KONG GREE ELECTRIC APPLIANCES SALES LIMITED**

Add: Unit 2612, 26/F., Miramar Tower 132 Nathan Road, TST, Kowloon, HK

Tel: (852) 31658898 Fax: (852) 31651029

For product improvement, specifications and appearance in this manual are subject to change without prior notice.