



Service Manual

**MODEL: GWH09MA-K3DNA2B
GWC09MA-K3DNA3B
GWH09MA-K3DNA3B
GWC09MA-K3DNA4B
GWH09MA-K3DNA5B
GWH09MA-K3DNB7B
GWH09MA-K3DNE4B
GWH12MB-K3DNA2B
GWC12MB-K3DNA3B
GWH12MB-K3DNA3B
GWC12MB-K3DNA4B
GWH12MB-K3DNA5B
GWH12MB-K3DNB7B
GWC12MB-K3DNB8B
GWH12MB-K3DNC3B
GWC12MB-K3DNC3B
(Cold Plasma)
GWH12MB-K3DNC3B
(Cold Plasma)
GWH12MB-K3DNE4B
(Refrigerant R410A)**

GREE ELECTRIC APPLIANCES INC.OF ZHUHAI

Table of Contents


Summary and Features	1
1. Safety Precautions	3
2. Specifications	4
2.1 Unit Specifications	4
2.2 Operation Characteristic Curve	10
2.3 Capacity Variation Ratio According to Temperature	10
2.4 Noise Criteria Curve Tables for Both Models	11
2.5 Operation Data	11
3. Construction Views	12
3.1 Indoor Unit	12
3.2 Outdoor Unit	13
4. Refrigerant System Diagram	14
5. Schematic Diagram	15
5.1 Electrical Data	15
5.2 Electrical Wiring	15
5.3 Printed Circuit Board	18
6. Function and Control	21
6.1 Remote Control Operations	21
6.2 Description of Each Control Operation	24
7. Installation Manual	29
7.1 Notices for Installation	29
7.2 Installation Drawing	31
7.3 Install Indoor Unit	32
7.4 Install Outdoor Unit	33

7.5 Check after Installation and Operation Test	34
7.6 Installation and Maintenance of Healthy Filter	35
8. Exploded Views and Parts List	36
8.1 Indoor Unit.....	36
8.2 Outdoor Unit.....	55
9. Troubleshooting	63
9.1 Malfunction Analysis.....	63
9.2 Flashing LED of Indoor/Outdoor Unit and Primary Judgement.....	67
9.3 Malfunction Display	68
9.4 How to Check Simply the Main Part.....	70
10. Removal Procedure.....	83
10.1 Removal Procedure of Indoor Unit.....	83
10.2 Removal Procedure of Outdoor Unit	86


Summary and Features

Indoor Unit


GWH09MA-K3DNA2B/I
GWH12MB-K3DNA2B/I

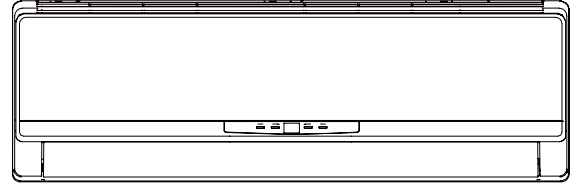


GWC09MA-K3DNA3B/I
GWH09MA-K3DNA3B/I
GWC12MB-K3DNA3B/I
GWH12MB-K3DNA3B/I

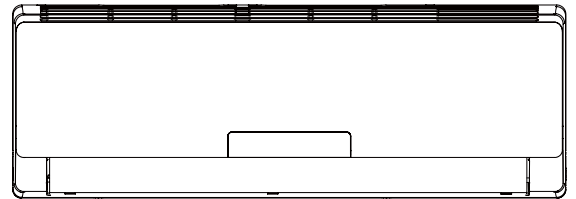


GWC09MA-K3DNA4B/I
GWC12MB-K3DNA4B/I

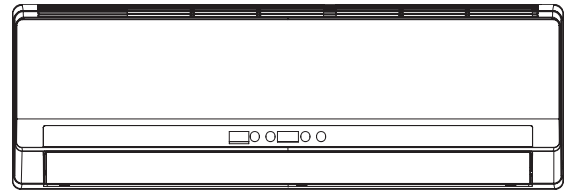


GWH09MA-K3DNA5B/I
GWH12MB-K3DNA5B/I

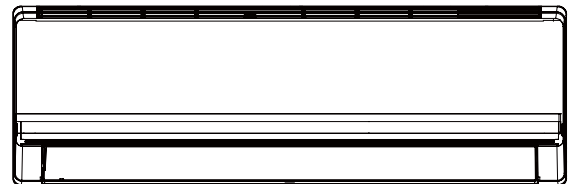

GWH09MA-K3DNB7B/I
GWH12MB-K3DNB7B/I

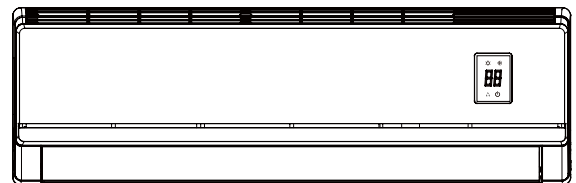


GWC12MB-K3DNB8B/I

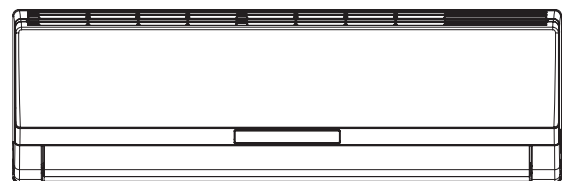


Summary and Features

GWH12MB-K3DNC3B/I
GWC12MB-K3DNC3B/I(Cold Plasma)
GWH12MB-K3DNC3B/I(Cold Plasma)

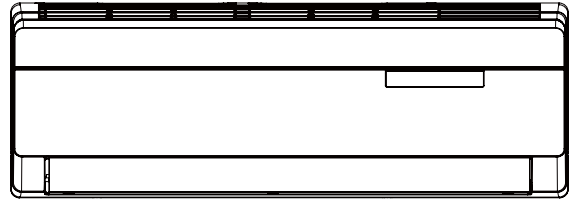


GWH09MA-K3DNE4B
GWH12MB-K3DNE4B

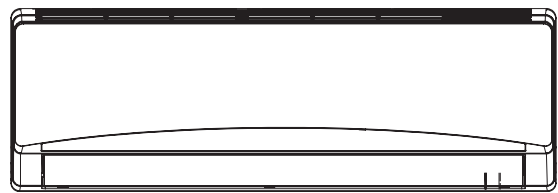

Outdoor Unit

GWC09MA-K3DNA3B/O
GWH09MA-K3DNA3B/O
GWC12MB-K3DNA3B/O
GWH12MB-K3DNA3B/O

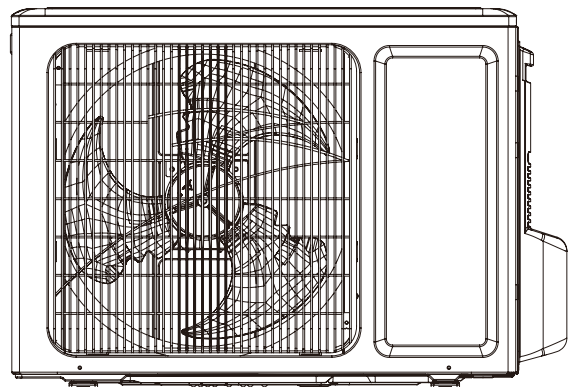

Remote Controller

YB1FA



1. Safety Precautions

Installing, starting up, and servicing air conditioner can be hazardous due to system pressure, electrical components, and equipment location, etc.


Only trained, qualified installers and service personnel are allowed to install, start-up, and service this equipment.


Untrained personnel can perform basic maintenance functions such as cleaning coils. All other operations should be performed by trained service personnel.

When handling the equipment, observe precautions in the manual and on tags, stickers, and labels attached to the equipment. Follow all safety codes. Wear safety glasses and work gloves. Keep quenching cloth and fire extinguisher nearby when brazing.

Read the instructions thoroughly and follow all warnings or cautions in literature and attached to the unit. Consult local building codes and current editions of national as well as local electrical codes.

Recognize the following safety information:

 **Warning** Incorrect handling could result in personal injury or death.

 **Caution** Incorrect handling may result in minor injury, or damage to product or property.

 **Warning**

All electric work must be performed by a licensed technician according to local regulations and the instructions given in this manual.

- Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position. There may be more than 1 disconnect switch. Lock out and tag switch with a suitable warning label.
- Never supply power to the unit unless all wiring and tubing are completed, reconnected and checked.
- This system adopts highly dangerous electrical voltage. Incorrect connection or inadequate grounding can cause personal injury or death. Stick to the wiring diagram and all the instructions when wiring.
- Have the unit adequately grounded in accordance with local electrical codes.
- Have all wiring connected tightly. Loose connection may lead to overheating and a possible fire hazard.

All installation or repair work shall be performed by your dealer or a specialized subcontractor as there is the risk of fire, electric shock, explosion or injury.

- Make sure the outdoor unit is installed on a stable, level surface with no accumulation of snow, leaves, or trash beside.
- Make sure the ceiling/wall is strong enough to bear the weight of the unit.
- Make sure the noise of the outdoor unit does not disturb neighbors.
- Follow all the installation instructions to minimize the risk of damage from earthquakes, typhoons or strong winds.
- Avoid contact between refrigerant and fire as it generates poisonous gas.
- Apply specified refrigerant only. Never have it mixed with any other refrigerant. Never have air remain in the refrigerant line as it may lead to rupture and other hazards.
- Make sure no refrigerant gas is leaking out when installation is completed.
- Should there be refrigerant leakage, the density of refrigerant in the air shall in no way exceed its limited value, or it may lead to explosion.
- Keep your fingers and clothing away from any moving parts.
- Clear the site after installation. Make sure no foreign objects are left in the unit.
- Always ensure effective grounding for the unit.

 **Caution**

- Never install the unit in a place where a combustible gas might leak, or it may lead to fire or explosion.
- Make a proper provision against noise when the unit is installed at a telecommunication center or hospital.
- Provide an electric leak breaker when it is installed in a watery place.
- Never wash the unit with water.
- Handle unit transportation with care. The unit should not be carried by only one person if it is more than 20kg.
- Never touch the heat exchanger fins with bare hands.
- Never touch the compressor or refrigerant piping without wearing glove.
- Do not have the unit operate without air filter.
- Should any emergency occur, stop the unit and disconnect the power immediately.
- Properly insulate any tubing running inside the room to prevent the water from damaging the wall.

2. Specifications

2.1 Unit Specifications

Parameter		Unit	Value	
Model			GWC09MA-K3DNA3B GWC09MA-K3DNA4B	GWC12MB-K3DNA3B GWC12MB-K3DNB8B GWC12MB-K3DNA4B GWC12MB-K3DNC3B (Cold Plasma)
Product Code			CB17100180 CB161002500	CB17100200 CB17400130 CB161002600 CB136000300
Power Supply	Rated Voltage	V ~	220-240	220-240
	Rated Frequency	Hz	50	50
	Phases		1	1
Power Supply Mode			Indoor	Indoor
Cooling Capacity (Min ~ Max)		W	2500(550 ~ 3500)	3500(510 ~ 3900)
Heating Capacity (Min ~ Max)		W	-	-
Cooling Power Input (Min ~ Max)		W	770(250 ~ 1360)	1080(230 ~ 1400)
Heating Power Input (Min ~ Max)		W	-	-
Cooling Power Current		A	3.73	5.00
Heating Power Current		A	-	-
Rated Input		W	1360	1500
Rated Current		A	9	9
Air Flow Volume(SH/H/M/L/SL)		m ³ /h	550/500/400/300/-	600/500/400/300/-
Dehumidifying Volume		L/h	0.8	1.4
EER		W/W	3.21	3.21
COP		W/W	-	-
SEER		W/W	-	-
HSPF		W/W	-	-
Application Area		m ²	12-18	16-24
Indoor Unit	Model of indoor unit		GWC09MA-K3DNA3B/I GWC09MA-K3DNA4B/I	GWC12MB-K3DNA3B/I GWC12MB-K3DNB8B/I GWC12MB-K3DNA4B/I GWC12MB-K3DNC3B/I (Cold Plasma)
	Fan Type		Cross-flow	Cross-flow
	Diameter Length(DXL)	mm	Φ85X596	Φ92X645
	Fan Motor Cooling Speed (SH/H/M/L/SL)	r/min	1260/1050/900/690/-	1290/1070/900/690/-
	Fan Motor Heating Speed (SH/H/M/L/SL)	r/min	-	-
	Output of Fan Motor	W	10	20
	Fan Motor RLA	A	0.1	0.1
	Fan Motor Capacitor	μF	1	1
	Input of Heater	W	-	-
	Evaporator Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Row-fin Gap	mm	2-1.5	2-1.4
	Coil Length (LXDXW)	mm	581X25.4X264	645X25.4X267
	Swing Motor Model		MP24AA	MP24AA
	Output of Swing Motor	W	1.5	1.5
	Fuse	A	3.15	3.15
	Sound Pressure Level (SH/H/M/L/SL)	dB (A)	40/37/35/32/-	42/39/36/33/-
	Sound Power Level (SH/H/M/L)	dB (A)	50/47/45/42/-	52/49/46/43/-
	Dimension (WXHXD)	mm	790X265X170	845X275X180
	Dimension of Carton Box (L/W/H)	mm	870X248X355	915X355X255
Dimension of Package (L/W/H)	mm	873X251X370	918X370X258	
Net Weight	kg	9	11	
Gross Weight	kg	12	14	

Specifications

Outdoor Unit	Model of Outdoor Unit		GWC09MA-K3DNA3B/O	GWC12MB-K3DNA3B/O
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO., LTD./GREE	ZHUHAI LANDA COMPRESSOR CO., LTD./GREE
	Compressor Model		QXA-A104zC190A	QXA-A104zC190A
	Compressor Oil		FVC 68D	FVC 68D
	Compressor Type		Rotary	Rotary
	L.R.A.	A	25	25
	Compressor RLA	A	3.89	3.89
	Compressor Power Input	W	890	890
	Overload Protector		1NT11L-6233	1NT11L-6233
	Throttling Method		Capillary	Capillary
	Operation temp	°C	16 ~ 30	16 ~ 30
	Ambient temp (cooling)	°C	18 ~ 43	18 ~ 43
	Ambient temp (heating)	°C	-	-
	Condenser Form		Aluminum Fin-copper Tube	Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7	Φ7
	Rows-fin Gap	mm	1-1.4	2-1.4
	Coil Length (LXDXW)	mm	730X12.7X495	695X38.1X508
	Fan Motor Speed	rpm	830±30	830±30
	Output of Fan Motor	W	30	30
	Fan Motor RLA	A	0.3	0.3
	Fan Motor Capacitor	μF	2.5	2.5
	Air Flow Volume of Outdoor Unit	m ³ /h	1600	1600
	Fan Type		Axial-flow	Axial-flow
	Fan Diameter	mm	Φ400	Φ400
	Defrosting Method		-	-
	Climate Type		T1	T1
	Isolation		I	I
	Moisture Protection		IP24	IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa	2.8	2.8
	Permissible Excessive Operating Pressure for the Suction Side	MPa	1.2	1.2
	Sound Pressure Level (H/M/L)	dB (A)	50/-/-	52/-/-
	Sound Power Level (H/M/L)	dB (A)	60/-/-	62/-/-
	Dimension (WXHXD)	mm	776X540X320	776X540X320
Dimension of Carton Box (L/W/H)	mm	848X360X580	848X360X580	
Dimension of Package (L/W/H)	mm	851X363X595	851X363X595	
Net Weight	kg	26	29	
Gross Weight	kg	30	33	
Refrigerant		R410A	R410A	
Refrigerant Charge	kg	0.70	0.95	
Connection Pipe	Length	m	5	5
	Gas Additional Charge	g/m	20	20
	Outer Diameter Liquid Pipe	mm	Φ6	Φ6
	Outer Diameter Gas Pipe	mm	Φ9.52	Φ9.52
	Max Distance Height	m	10	10
	Max Distance Length	m	15	20

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Parameter		Unit	Value	
Model			GWH09MA-K3DNA2B、GWH09MA-K3DNA3B GWH09MA-K3DNA5B、GWH09MA-K3DNB7B GWH09MA-K3DNE4B	
Product Code			CB181003000、CB17100190 CB162002800、CB164001300 CB403000200	
Power Supply	Rated Voltage	V ~	220-240	
	Rated Frequency	Hz	50	
	Phases		1	
Power Supply Mode			Indoor	
Cooling Capacity (Min ~ Max)		W	2500(550 ~ 3200)	
Heating Capacity (Min ~ Max)		W	2800(800 ~ 3600)	
Cooling Power Input (Min ~ Max)		W	770(250 ~ 1360)	
Heating Power Input (Min ~ Max)		W	775(200 ~ 1380)	
Cooling Power Current		A	3.44	
Heating Power Current		A	3.55	
Rated Input		W	1380	
Rated Current		A	9	
Air Flow Volume(SH/H/M/L/SL)		m ³ /h	550/500/400/300/-	
Dehumidifying Volume		L/h	0.8	
EER		W/W	3.24	
COP		W/W	3.61	
SEER		W/W	-	
HSPF		W/W	-	
Application Area		m ²	12-18	
Indoor Unit	Model of indoor unit		GWH09MA-K3DNA2B/I、GWH09MA-K3DNA3B/I GWH09MA-K3DNA5B/I、GWH09MA-K3DNB7B/I GWH09MA-K3DNE4B/I	
	Fan Type		Cross-flow	
	Diameter Length(DXL)		mm	Φ85X596
	Fan Motor Cooling Speed (SH/H/M/L/SL)		r/min	1260/1050/900/690/-
	Fan Motor Heating Speed (SH/H/M/L/SL)		r/min	1320/1200/1000/910/-
	Output of Fan Motor		W	10
	Fan Motor RLA		A	0.1
	Fan Motor Capacitor		μF	1
	Input of Heater		W	-
	Evaporator Form			Aluminum Fin-copper Tube
	Pipe Diameter		mm	Φ7
	Row-fin Gap		mm	2-1.5
	Coil Length (LXDXW)		mm	581X25.4X264
	Swing Motor Model			MP24AA
	Output of Swing Motor		W	1.5
	Fuse		A	3.15
	Sound Pressure Level (SH/H/M/L/SL)		dB (A)	40/37/35/32/-
	Sound Power Level (SH/H/M/L)		dB (A)	50/47/45/42/-
	Dimension (WXHXD)		mm	790X265X170
	Dimension of Carton Box (L/W/H)		mm	870X248X355
	Dimension of Package (L/W/H)		mm	873X251X370
Net Weight		kg	9	
Gross Weight		kg	12	

Specifications

Outdoor Unit	Model of Outdoor Unit		GWH09MA-K3DNA3B/O	
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO., LTD./GREE	
	Compressor Model		QXA-A104zC190A	
	Compressor Oil		FVC 68D	
	Compressor Type		Rotary	
	L.R.A.	A		25
	Compressor RLA	A		3.89
	Compressor Power Input	W		890
	Overload Protector			1NT11L-6233
	Throttling Method			Capillary
	Operation temp	°C		16 ~ 30
	Ambient temp (cooling)	°C		18 ~ 43
	Ambient temp (heating)	°C		-7 ~ 24
	Condenser Form			Aluminum Fin-copper Tube
	Pipe Diameter	mm		Φ9.52
	Rows-fin Gap	mm		1-1.4
	Coil Length (LXDXW)	mm		695X22X508
	Fan Motor Speed	rpm		830±30
	Output of Fan Motor	W		30
	Fan Motor RLA	A		0.3
	Fan Motor Capacitor	μF		2.5
	Air Flow Volume of Outdoor Unit	m ³ /h		1600
	Fan Type			Axial-flow
	Fan Diameter	mm		Φ400
	Defrosting Method			Automatic Defrosting
	Climate Type			T1
	Isolation			I
	Moisture Protection			IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa		2.8
	Permissible Excessive Operating Pressure for the Suction Side	MPa		1.2
	Sound Pressure Level (H/M/L)	dB (A)		50/-/-
	Sound Power Level (H/M/L)	dB (A)		60/-/-
Dimension (WXHXD)	mm		776X540X320	
Dimension of Carton Box (L/W/H)	mm		848X360X580	
Dimension of Package (L/W/H)	mm		851X363X595	
Net Weight	kg		27	
Gross Weight	kg		31	
Refrigerant			R410A	
Refrigerant Charge	kg		0.73	
Connection Pipe	Length	m	5	
	Gas Additional Charge	g/m	20	
	Outer Diameter Liquid Pipe	mm	Φ6	
	Outer Diameter Gas Pipe	mm	Φ9.52	
	Max Distance Height	m	10	
	Max Distance Length	m	15	

The above data is subject to change without notice. Please refer to the nameplate of the unit.

Parameter		Unit	Value
Model			GWH12MB-K3DNA2B、GWH12MB-K3DNA3B GWH12MB-K3DNA5B、GWH12MB-K3DNB7B GWH12MB-K3DNE4B、GWH12MB-K3DNC3B GWH12MB-K3DNC3B(Cold Plasma)
Product Code			CB181003100、CB17100210 CB162002900、CB164001400 CB403000300、CB13600010 CB136000101
Power Supply	Rated Voltage	V ~	220-240
	Rated Frequency	Hz	50
	Phases		1
Power Supply Mode			Indoor
Cooling Capacity (Min ~ Max)		W	3500(510 ~ 3900)
Heating Capacity (Min ~ Max)		W	3900(880 ~ 4400)
Cooling Power Input (Min ~ Max)		W	1080(230 ~ 1300)
Heating Power Input (Min ~ Max)		W	1080(250 ~ 1450)
Cooling Power Current		A	4.64
Heating Power Current		A	4.87
Rated Input		W	1500
Rated Current		A	9
Air Flow Volume(SH/H/M/L/SL)		m ³ /h	600/500/400/300/-
Dehumidifying Volume		L/h	1.4
EER		W/W	3.24
COP		W/W	3.61
SEER		W/W	-
HSPF		W/W	-
Application Area		m ²	16-24
Indoor Unit	Model of indoor unit		GWH12MB-K3DNA2B/I、GWH12MB-K3DNA3B/I GWH12MB-K3DNA5B/I、GWH12MB-K3DNB7B/I GWH12MB-K3DNE4B/I、GWH12MB-K3DNC3B/I GWH12MB-K3DNC3B/I(Cold Plasma)
	Fan Type		Cross-flow
	Diameter Length(DXL)	mm	Φ92X645
	Fan Motor Cooling Speed (SH/H/M/L/SL)	r/min	1290/1070/900/690/-
	Fan Motor Heating Speed (SH/H/M/L/SL)	r/min	1280/1050/980/920/-
	Output of Fan Motor	W	20
	Fan Motor RLA	A	0.1
	Fan Motor Capacitor	μF	1
	Input of Heater	W	-
	Evaporator Form		Aluminum Fin-copper Tube
	Pipe Diameter	mm	Φ7
	Row-fin Gap	mm	2-1.4
	Coil Length (LXD _X W)	mm	645X25.4X267
	Swing Motor Model		MP24AA
	Output of Swing Motor	W	1.5
	Fuse	A	3.15
	Sound Pressure Level (SH/H/M/L/SL)	dB (A)	42/39/36/33/-
	Sound Power Level (SH/H/M/L)	dB (A)	52/49/46/43/-
	Dimension (WXH _X D)	mm	845X275X180
	Dimension of Carton Box (L/W/H)	mm	915X355X255
	Dimension of Package (L/W/H)	mm	918X370X258
Net Weight	kg	11	
Gross Weight	kg	14	


Specifications

Outdoor Unit	Model of Outdoor Unit		GWH12MB-K3DNA3B/O	
	Compressor Manufacturer/Trademark		ZHUHAI LANDA COMPRESSOR CO., LTD./GREE	
	Compressor Model		QXA-A104zC190A	
	Compressor Oil		FVC 68D	
	Compressor Type		Rotary	
	L.R.A.	A		25
	Compressor RLA	A		3.89
	Compressor Power Input	W		890
	Overload Protector			1NT11L-6233
	Throttling Method			Capillary
	Operation temp	°C		16 ~ 30
	Ambient temp (cooling)	°C		18 ~ 43
	Ambient temp (heating)	°C		-7 ~ 24
	Condenser Form			Aluminum Fin-copper Tube
	Pipe Diameter	mm		Φ7
	Rows-fin Gap	mm		2-1.4
	Coil Length (LXDXW)	mm		695X38.1X506
	Fan Motor Speed	rpm		830±30
	Output of Fan Motor	W		30
	Fan Motor RLA	A		0.3
	Fan Motor Capacitor	μF		2.5
	Air Flow Volume of Outdoor Unit	m ³ /h		1600
	Fan Type			Axial-flow
	Fan Diameter	mm		Φ400
	Defrosting Method			Automatic Defrosting
	Climate Type			T1
	Isolation			I
	Moisture Protection			IP24
	Permissible Excessive Operating Pressure for the Discharge Side	MPa		2.8
	Permissible Excessive Operating Pressure for the Suction Side	MPa		1.2
	Sound Pressure Level (H/M/L)	dB (A)		52/-/-
Sound Power Level (H/M/L)	dB (A)		62/-/-	
Dimension (WXHXD)	mm		776X540X320	
Dimension of Carton Box (L/W/H)	mm		848X360X580	
Dimension of Package (L/W/H)	mm		851X363X595	
Net Weight	kg		29	
Gross Weight	kg		33	
Refrigerant			R410A	
Refrigerant Charge	kg		0.95	
Connection Pipe	Length	m	5	
	Gas Additional Charge	g/m	20	
	Outer Diameter Liquid Pipe	mm	Φ6	
	Outer Diameter Gas Pipe	mm	Φ9.52	
	Max Distance Height	m	10	
	Max Distance Length	m	20	


The above data is subject to change without notice. Please refer to the nameplate of the unit.

2.2 Operation Characteristic Curve

Cooling

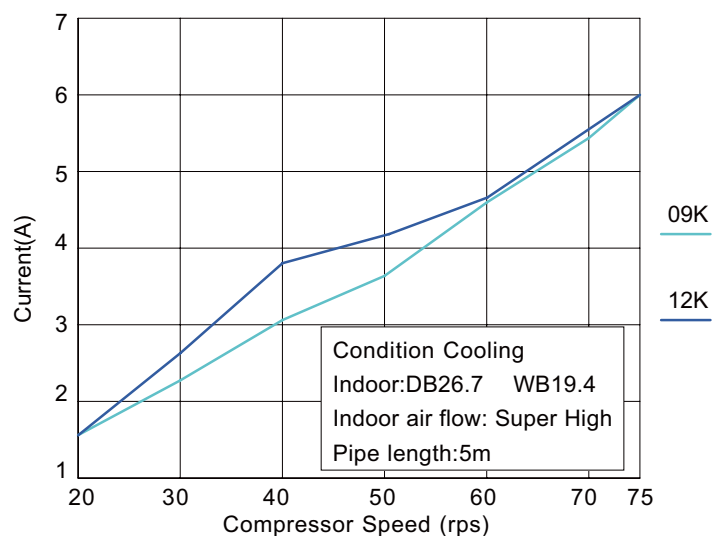


Heating

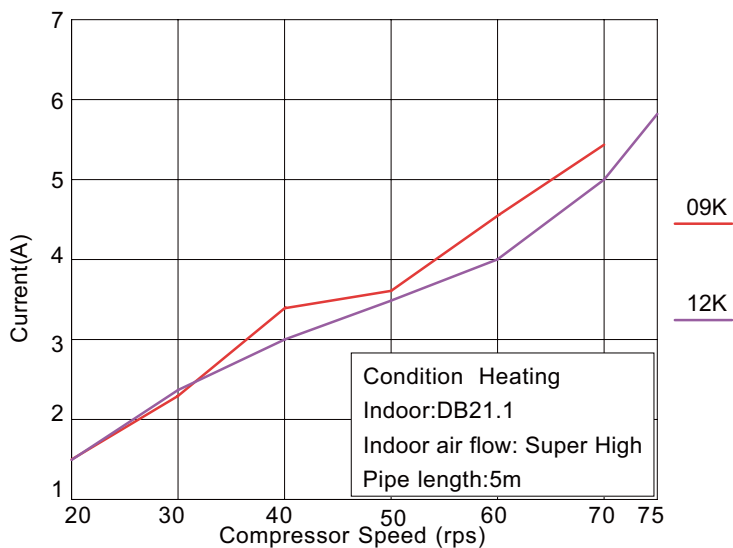


2.3 Capacity Variation Ratio According to Temperature

Cooling

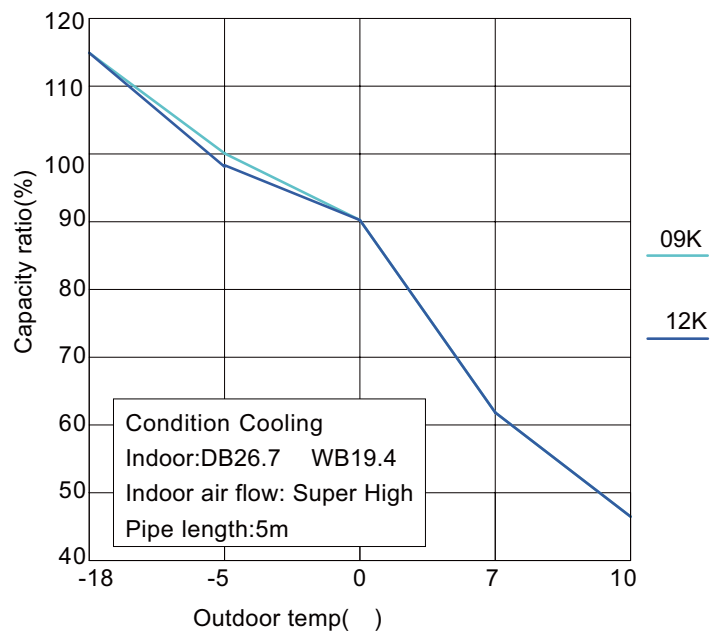


Heating

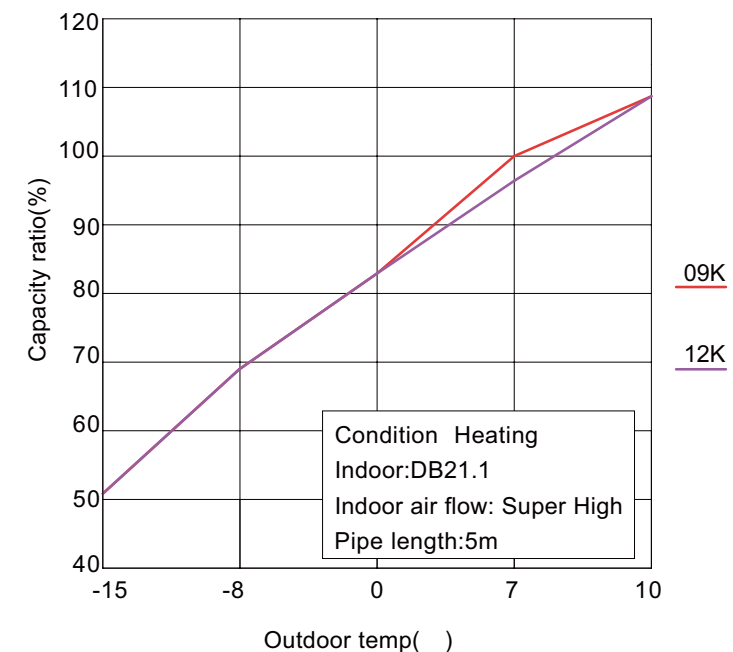


2.4 Noise Criteria Curve Tables for Both Models

Indoor side noise when blowing

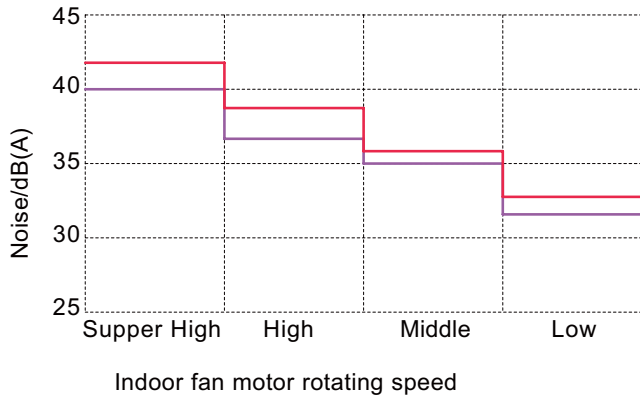

Outdoor side noise when Compressor speed changed

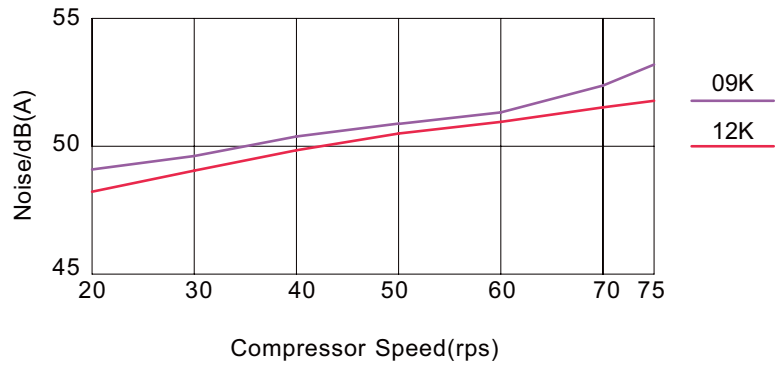

2.5 Operation Data

Cooling

Temperature condition (°C)		Model name	Standard pressure P (MPa)	Heat exchanger pipe temp		Indoor fan mode	Outdoor fan mode	Compressor revolution (rps)
Indoor	Outdoor			T1 (°C)	T2 (°C)			
27/19	35/24	09K	0.8 ~ 1.1	12 to 15	65 to 38	Super High	830±20	54
		12K		11 to 14	64 to 37			60

Heating

Temperature condition (°C)		Model name	Standard pressure P (MPa)	Heat exchanger pipe temp		Indoor fan mode	Outdoor fan mode	Compressor revolution (rps)
Indoor	Outdoor			T1 (°C)	T2 (°C)			
20/-	7/6	09K	2.8 ~ 3.2	35 to 63	2 to 5	Super High	830±20	62
		12K		35 to 65	2 to 5			66

P: The air pipe pressure (gas valve side pressure) connect to indoor and outdoor unit

T1: Inlet and outlet pipe temperature of evaporator

T2: Inlet and outlet pipe temperature of condenser




NOTES :

(1) Measure surface temperature of heat exchanger pipe around center of heat exchanger path U bent. (Thermistor thermometer)

(2) Connecting piping condition : 5m

3. Construction Views


3.1 Indoor Unit

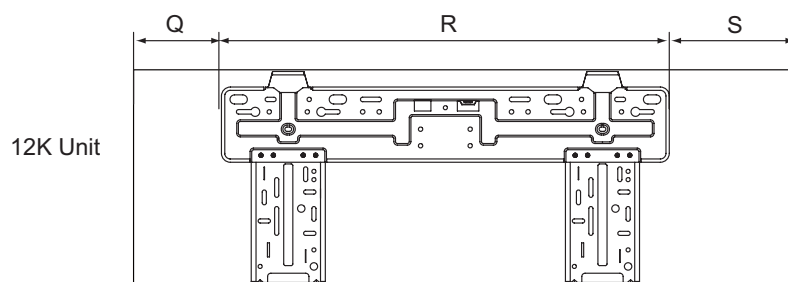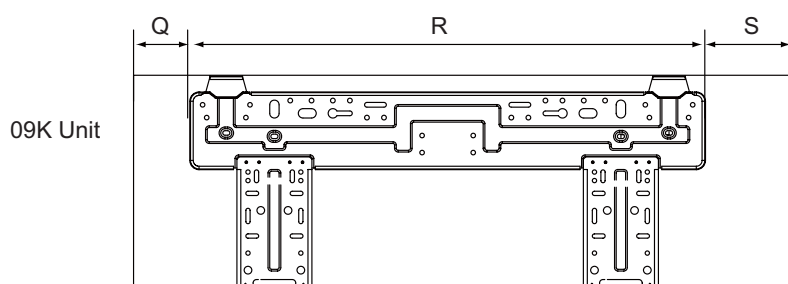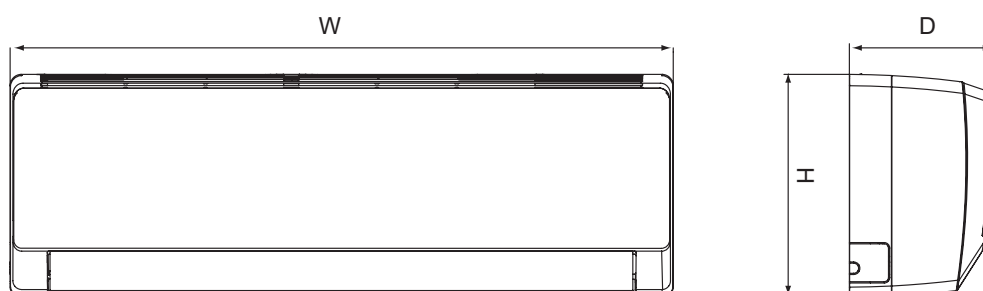

Unit:mm

Model	W	H	D	Q	R	S
09K	790	265	170	36	605	149
12K	845	275	180	130	542	173


3.2 Outdoor Unit

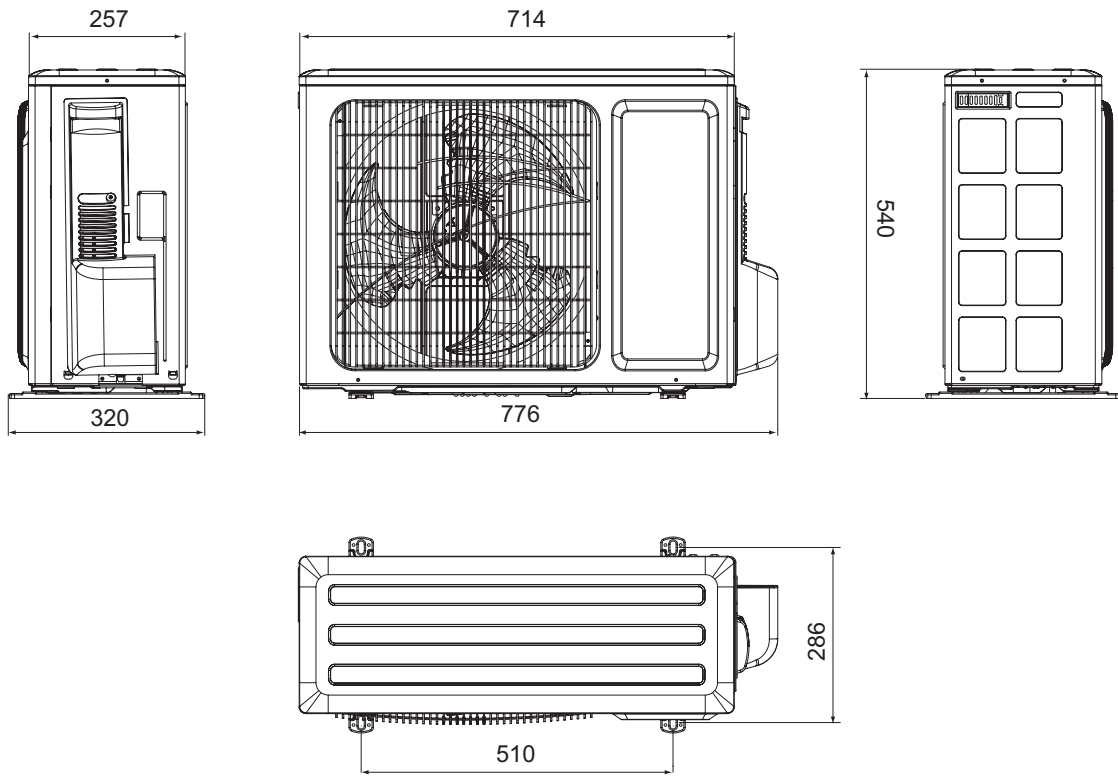


Unit:mm

4. Refrigerant System Diagram

(1) Cooling Only Models

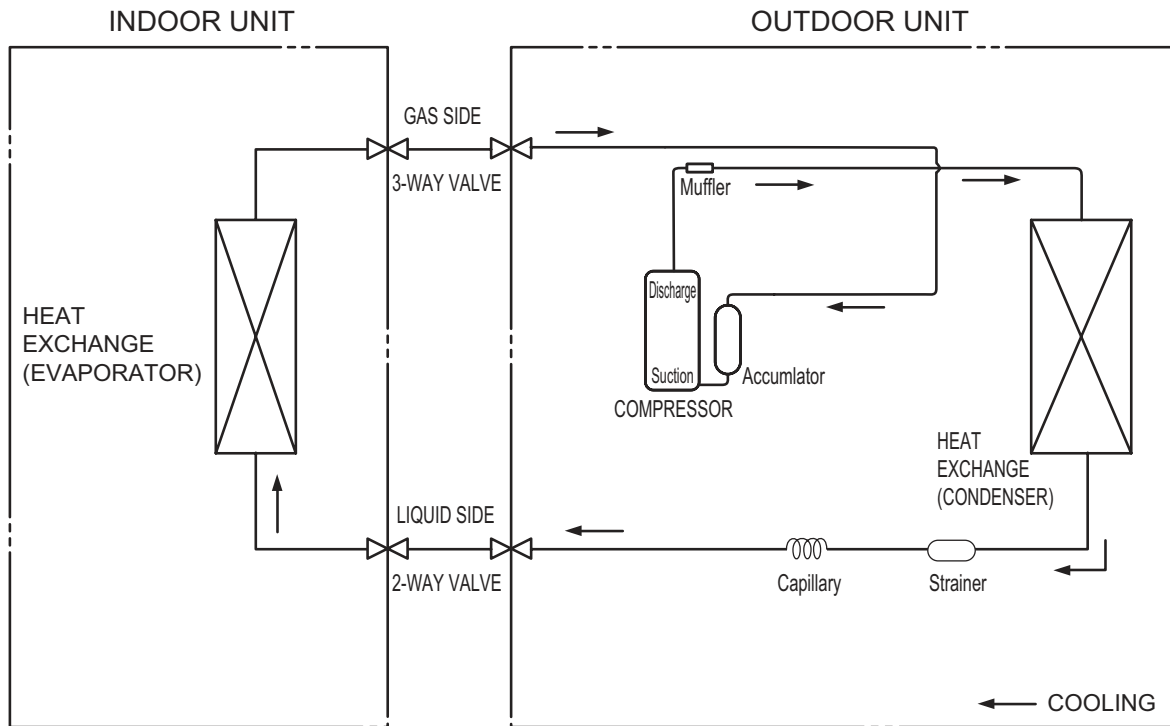

(2) Cooling&Heating Models

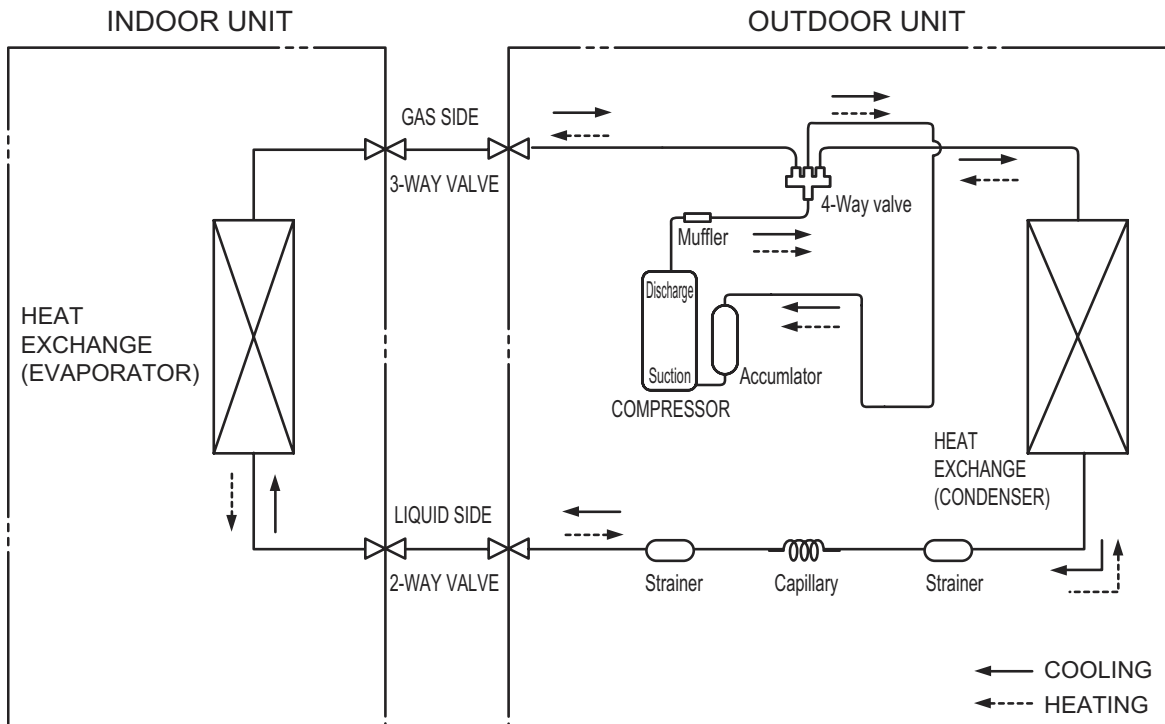

Refrigerant pipe diameter
Liquid : 1/4" (6 mm)
Gas : 3/8" (9.52 mm)

5. Schematic Diagram

5.1 Electrical Data


Meaning of marks

Symbol	Color symbol	Symbol	Parts name
OG	ORANGE		PROTECTIVE EARTH
WH	WHITE	COMP	COMPRESSOR
YE	YELLOW	CT1,2	OVERLOAD
RD	RED	4V	4-WAY VALVE
YEGN	YELLOW GREEN	XT	TERMINAL BLOCK
BN	BROWN		
BU	BLUE		
BK	BLACK		


5.2 Electrical Wiring

●Indoor Unit

GWC09MA-K3DNA3B/I, GWH09MA-K3DNA3B/I, GWC12MB-K3DNA3B/I, GWH12MB-K3DNA3B/I, GWC09MA-K3DNA4B/I, GWC12MB-K3DNA4B/I, GWC12MB-K3DNB8B/I, GWH12MB-K3DNC3B/I, GWH09MA-K3DNE4B/I, GWH12MB-K3DNE4B/I, GWH09MA-K3DNA2B/I, GWH09MA-K3DNA5B/I, GWH09MA-K3DNB7B/I, GWH12MB-K3DNA2B/I, GWH12MB-K3DNA5B/I, GWH12MB-K3DNB7B/I

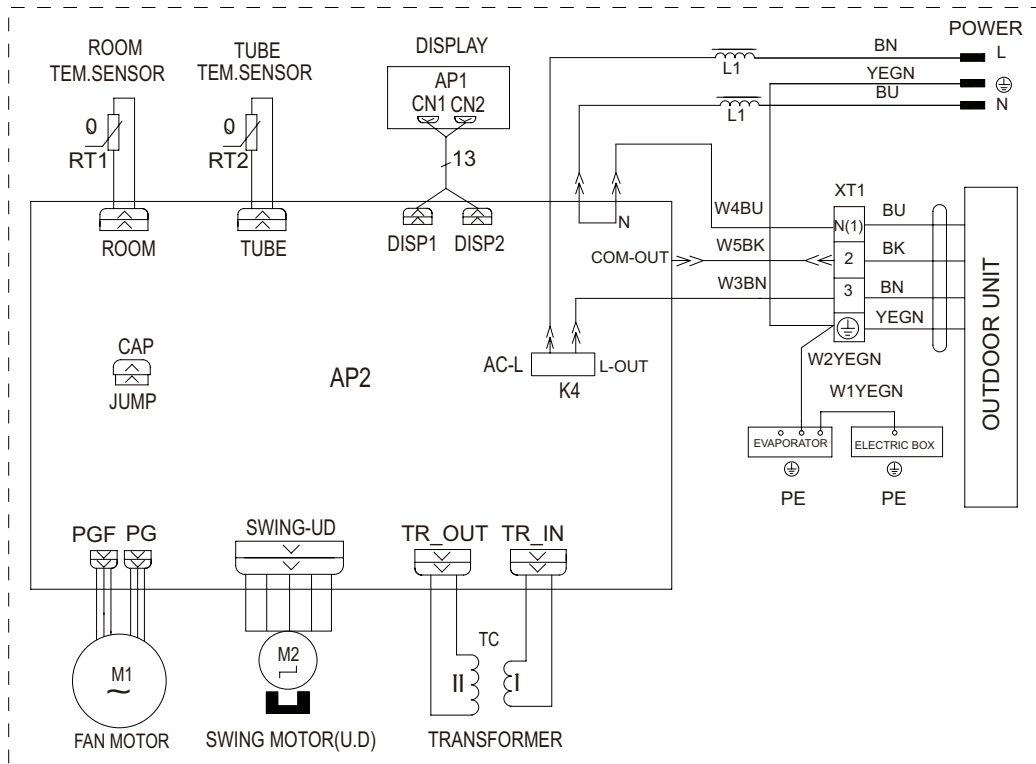


GWC12MB-K3DNC3B/I(Cold Plasma)、GWH12MB-K3DNC3B/I(Cold Plasma)

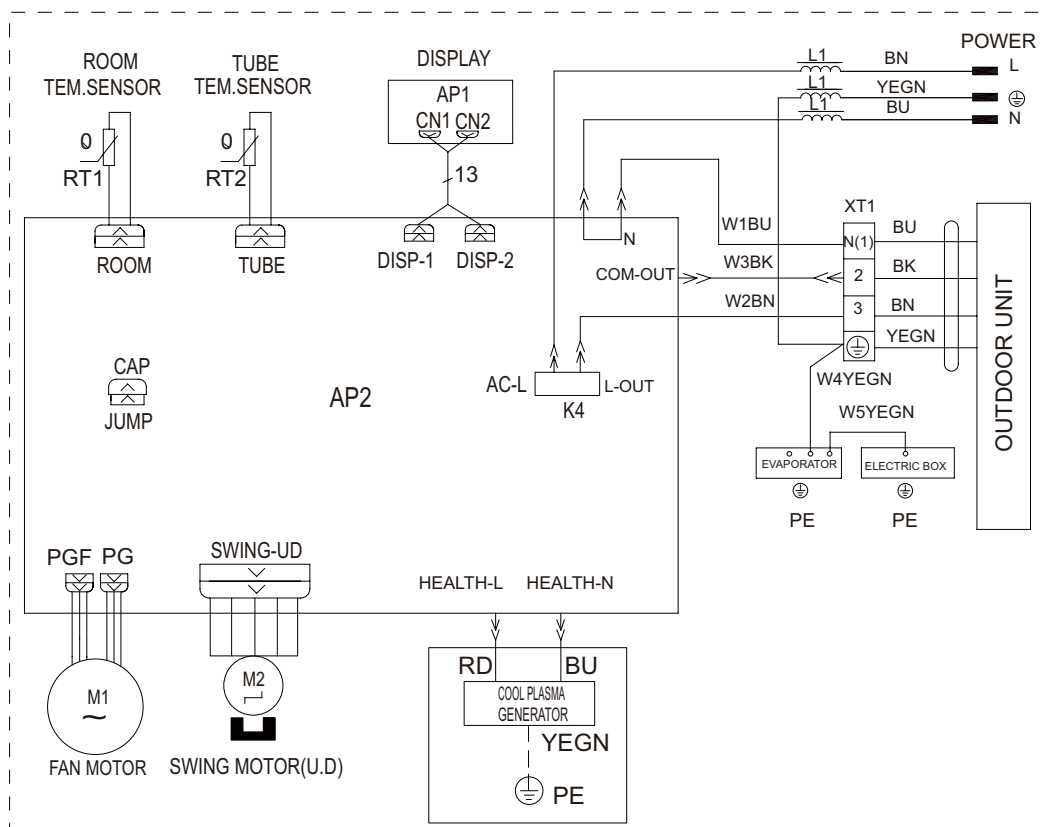


●Outdoor Unit

GWC09MA-K3DNA3B/O、GWC12MB-K3DNA3B/O

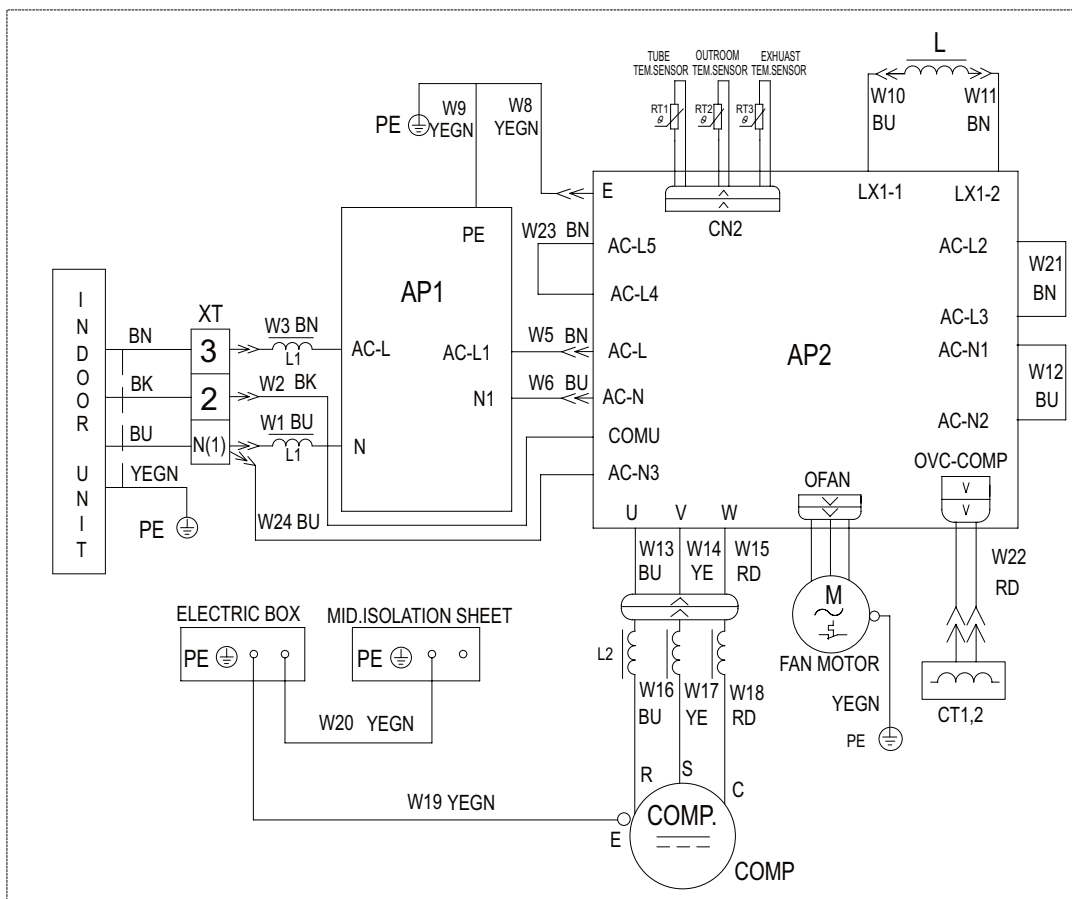

Schematic Diagram

GWH09MA-K3DNA3B/O、GWH12MB-K3DNA3B/O

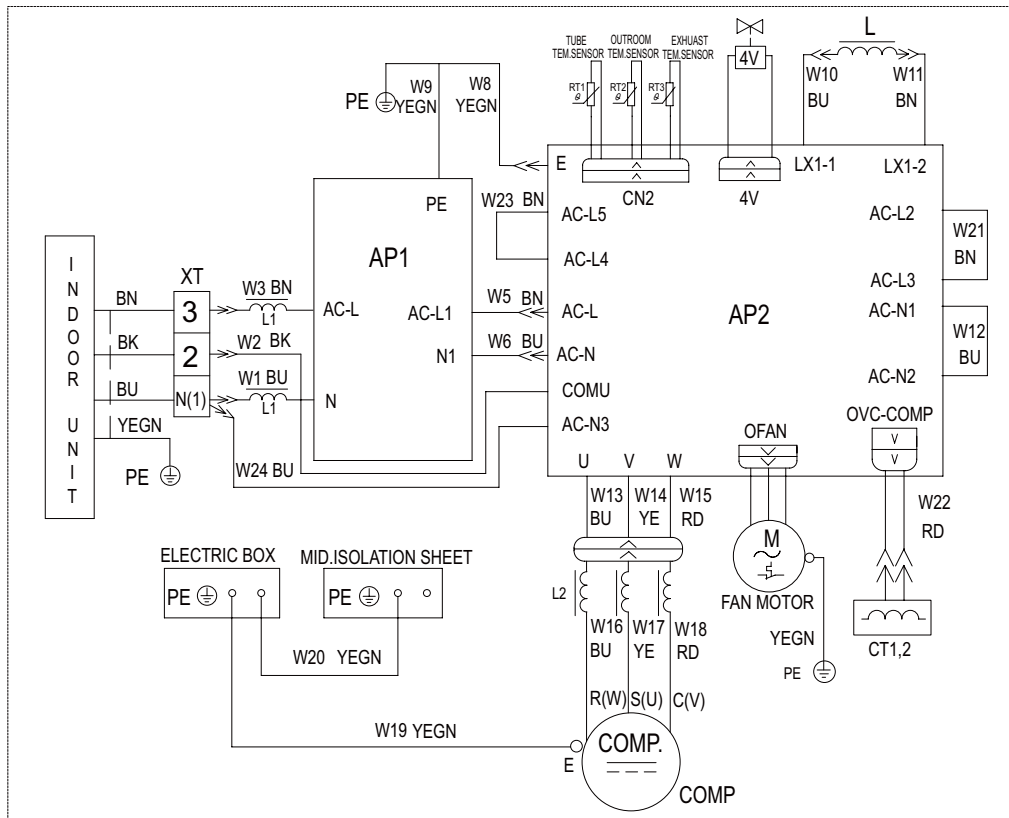


These circuit diagrams are subject to change without notice, please refer to the one supplied with the unit.

5.3 Printed Circuit Board


(1)Indoor Unit

GWH09MA-K3DNA2B、GWC09MA-K3DNA3B、GWH09MA-K3DNA3B、GWC09MA-K3DNA4B、GWH09MA-K3DNA5B
 GWH09MA-K3DNB7B、GWH09MA-K3DNE4B、GWH12MB-K3DNA2B、GWC12MB-K3DNA3B、GWH12MB-K3DNA3B
 GWC12MB-K3DNA4B、GWH12MB-K3DNA5B、GWH12MB-K3DNB7B、GWC12MB-K3DNB8B、GWH12MB-K3DNC3B
 GWH12MB-K3DNE4B

●TOP VIEW

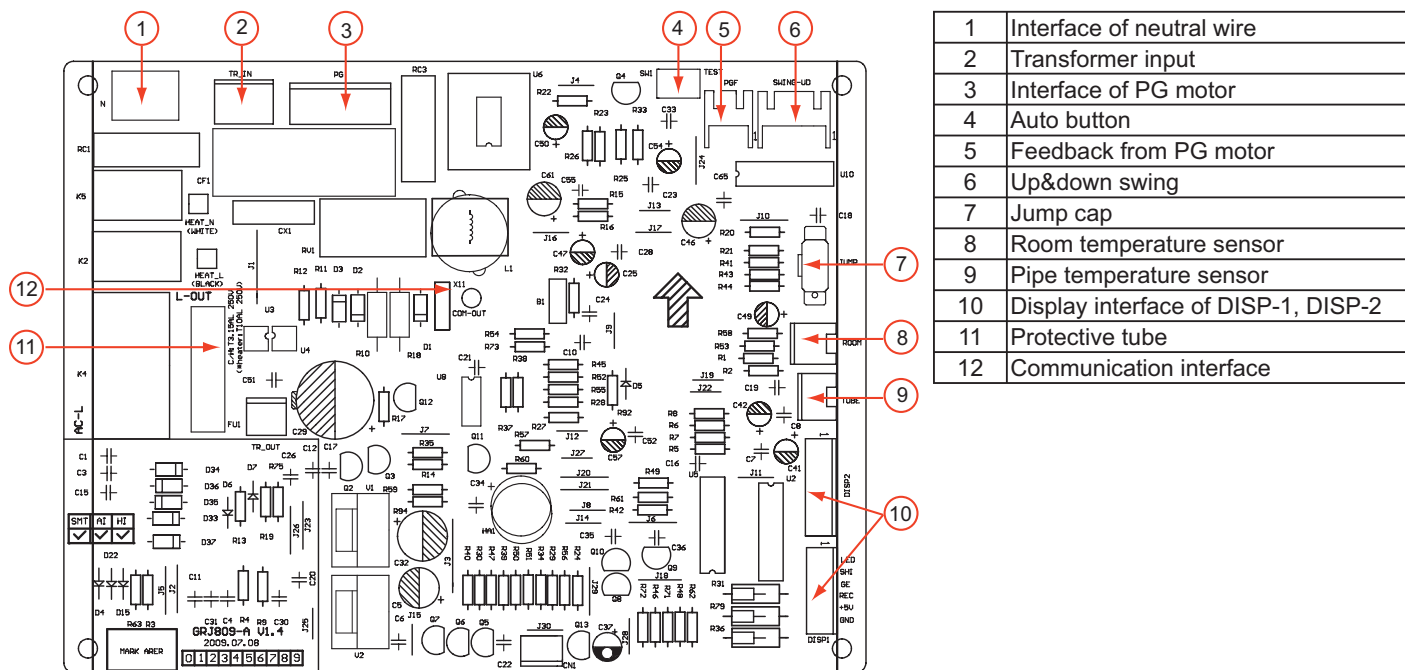


●BOTTOM VIEW

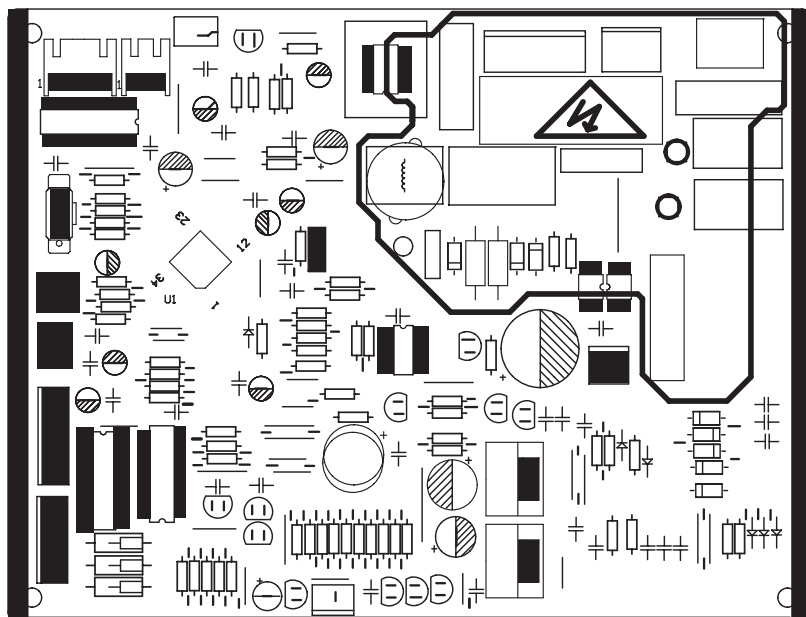


GWC12MB-K3DNC3B(Cold Plasma)、GWH12MB-K3DNC3B(Cold Plasma)

●TOP VIEW

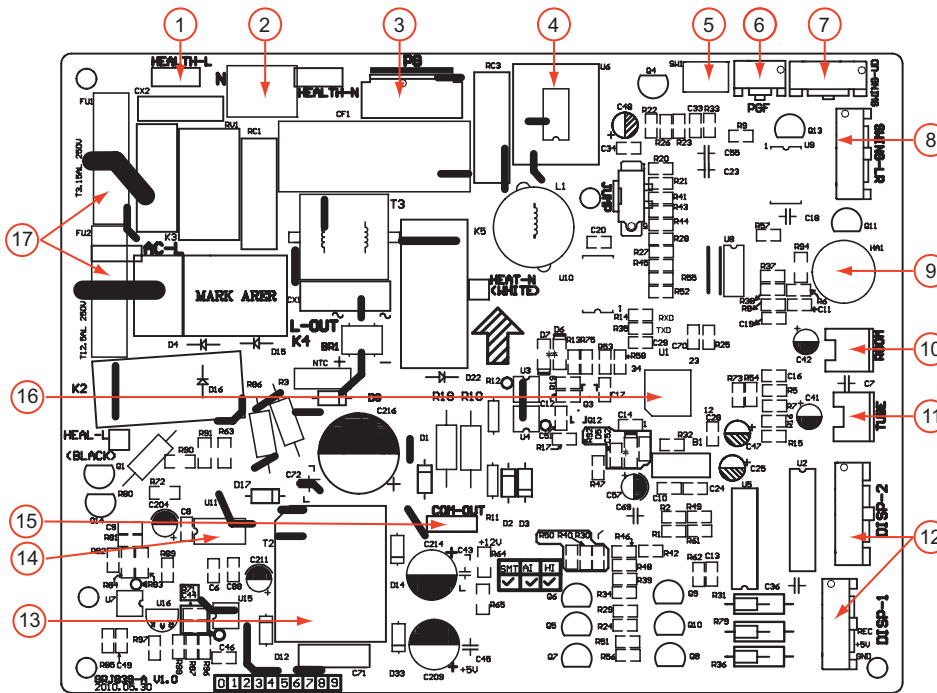


1	Live wire of Health function
2	Neutral wire connector
3	Indoor fan connector
4	Solid-state relay
5	Auto button
6	Indoor fan feedback
7	Connector of up & down swing motor
8	Connector of left & right swing motor
9	Buzzer
10	Connector of indoor ambient temperature sensor
11	Connector of indoor tube temperature sensor
12	Display connector
13	High frequency transformer
14	Switch power supply
15	Communication interface
16	Main slug
17	Protective tube

●BOTTOM VIEW

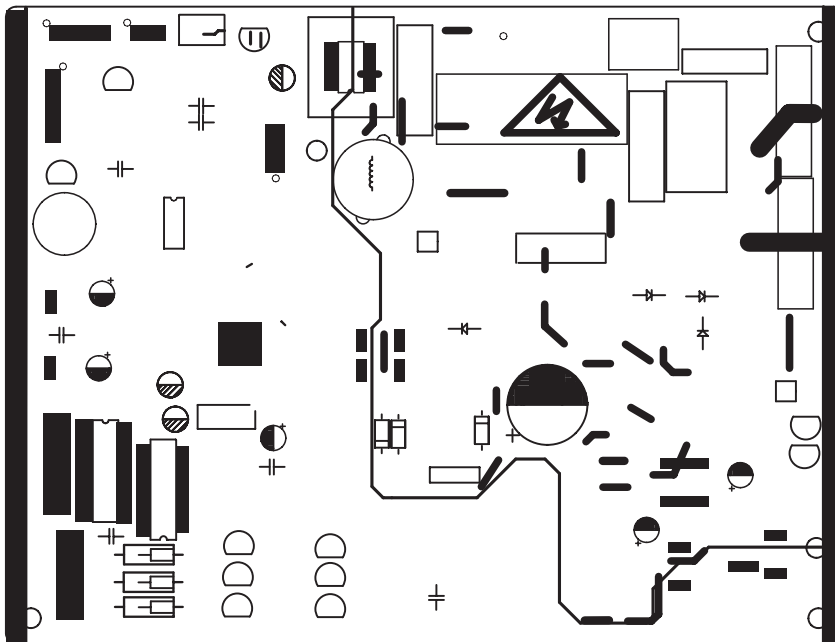


(2)Outdoor Unit

•TOP VIEW

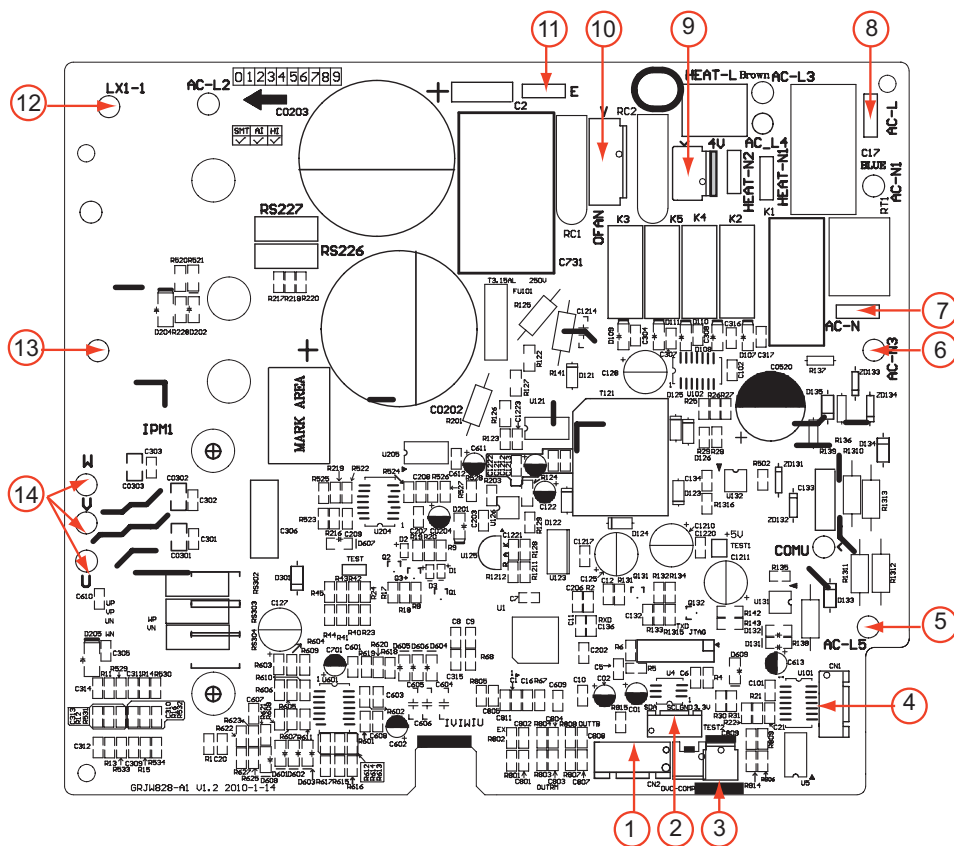

1	Needle stand of temperature sensor
2	Stand of memory slug
3	Needle stand of overload temperature sensor
4	Electronic expansion valve
5	Connection port of communication
6	Neutral wire (communication circuit)
7	Neutral wire (filter plate output)
8	Live wire (filter plate output)
9	Interface of 4-way valve
10	Interface of fan motor
11	Earth wire (filter plate)
12	Input terminal of induction
13	Output terminal of induction
14	Input terminal of compressor


•BOTTOM VIEW

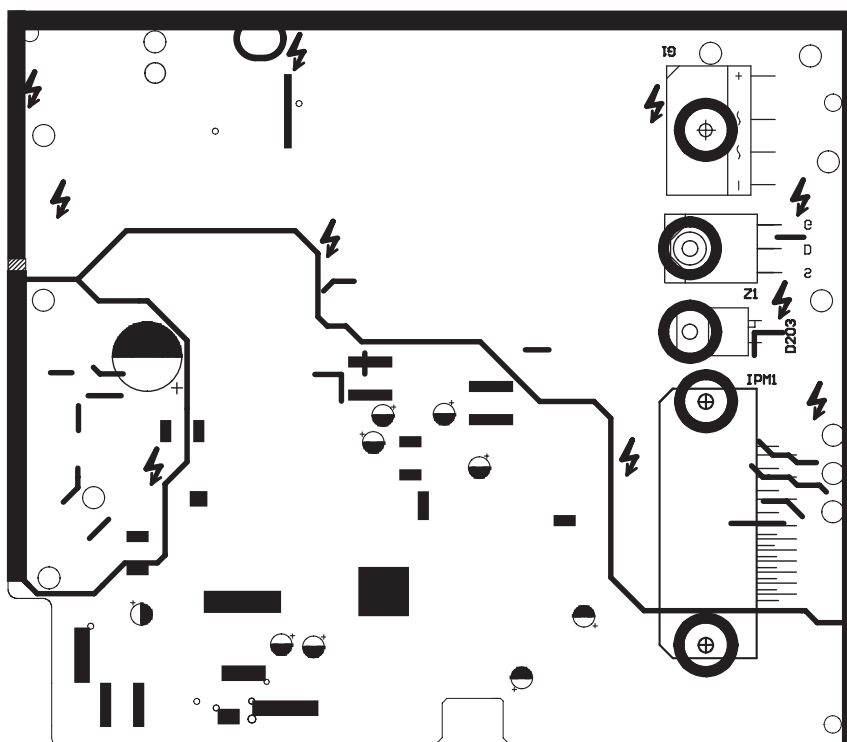










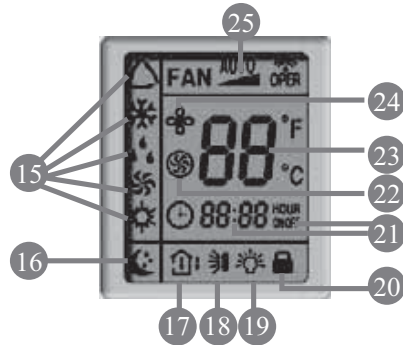

6. Function and Control

6.1 Remote Control Operations



- 1 **ON/OFF**
Press it to start or stop operation.
- 2 **MODE**
Press it to select operation mode (AUTO/COOL/DRY/FAN/HEAT).
- 3 **+**
Press it to increase temperature setting.
- 4 **-**
Press it to decrease temperature setting.
- 5 **FAN**
Press it to set fan speed.
- 6  **SWING**
Press it to set swing angle.
- 7 **TIMER ON**
Press it to set auto-on timer.
- 8 **TIMER OFF**
Press it to set auto-off timer.
- 9 **CLOCK**
Press it to set clock.
- 10 **X-FAN** (X-FAN is the alternative expression of BLOW for the purpose of understanding.)
- 11 **TEMP**
- 12 **TURBO**
- 13 **SLEEP**
- 14 **LIGHT**
Press it to turn on/off the light.



- 15 **MODE icon:**
If MODE button is pressed, current operation mode icon  (AUTO),  (COOL),  (DRY),  (FAN) or  (HEAT is only for heat pump models) will show.
- 16 **SLEEP icon :**
 is displayed by pressing the SLEEP button. Press this button again to clear the display.
- 17 **TEMP icon:**
Pressing TEMP button,  (set temperature),  (indoor ambient temperature),  (outdoor ambient temperature) and blank is displayed circularly.
- 18 **Up & down swing icon:**
 is displayed when pressing the up & down swing button. Press this button again to clear the display.

19 LIGHT icon:

💡 is displayed by pressing the LIGHT button. Press LIGHT button again to clear the display.

20 LOCK icon:

🔒 is displayed by pressing "+" and "-" buttons simultaneously. Press them again to clear the display.

21 SET TIME display:

After pressing TIMER button, ON or OFF will blink. This area will show the set time.

22 TURBO icon:

⚡ is displayed when pressing the TURBO button. Press this button again to clear the display.

23 DIGITAL display:

This area will show the set temperature. In SAVE mode, "SE" will be displayed. During defrosting operation, "H1" will be displayed.

24 X-FAN icon:

🌀 is displayed when pressing the X-FAN button. Press this button again to clear the display.

25 FAN SPEED display:

Press FAN button to select the desired fan speed setting (AUTO Low-Med-High). Your selection will be displayed in the LCD windows, except the AUTO fan speed.

1 ON/OFF:

Press this button to turn on the unit. Press this button again to turn off the unit.

2 MODE:

Each time you press this button, a mode is selected in a sequence that goes from AUTO, COOL, DRY, FAN, and HEAT*, as the following:



*Note: Only for models with heating function.

After energization, AUTO mode is defaulted. In AUTO mode, the set temperature will not be displayed on the LCD, and the unit will automatically select the suitable operation mode in accordance with the room temperature to make indoor room comfortable.

3 + :

Press this button to increase set temperature. Hold it down for above 2 seconds to rapidly increase set temperature. In AUTO mode, set temperature is not adjustable.

4 -:

Press this button to decrease set temperature. Hold it down for above . 2 seconds to rapidly decrease set temperature. In AUTO mode, set temperature is not adjustable.

5 FAN :

This button is used for setting fan speed in the sequence that goes from AUTO, ◀, ▶, ▶▶ to then back to Auto.



◀ Low speed ▶ Medium speed ▶▶ High speed

6 🌀

Press this button to set up & down swing angle, which circularly changes as below:




This remote controller is universal. If any command 🌀, ▶, or ▶▶ is sent out, the unit will carry out the command as 🌀

🌀 indicates the guide louver swings as:





7 TIMER ON:

Press this button to initiate the auto-ON timer. To cancel the auto-timer program, simply press this button again. After pressing this button,  disappears and "ON" blinks. 0 0:00 is displayed for ON time setting. Within 5 seconds, press + or - button to adjust the time value. Every press of either button changes the time setting by 1 minute. Holding down either button rapidly changes the time setting by 1 minute and then 10 minutes. Within 5 seconds after setting, press TIMER ON button to confirm.


8 TIMER OFF:

Press this button to initiate the auto-off timer. To cancel the auto-timer program, simply press the button again. TIMER OFF setting is the same as TIMER ON.

9 CLOCK :


Pressing CLOCK button,  blinks. Within 5 seconds, pressing + or - button adjusts the present time. Holding down either button above 2 seconds increases or decreases the time by 1 minute every 0.5 second and then by 10 minutes every 0.5 second. During blinking after setting, press CLOCK button again to confirm the setting, and then  will be constantly displayed.

10 X-FAN:

Pressing X-FAN button in COOL or DRY mode, the icon  is displayed and the indoor fan will continue operation for 10 minutes in order to dry the indoor unit even though you have turned off the unit.

After energization, X-FAN OFF is defaulted. X-FAN is not available in AUTO, FAN or HEAT mode.

11 TEMP:

Press this button, could select displaying the indoor setting temperature or indoor ambient temperature. When the indoor unit firstly power on it will display the setting temperature, if the temperature's displaying status is changed from other status to "  ", displays the ambient temperature, 5s later or within 5s, it receives other remote control signal that will return to display the setting temperature. if the users haven't set up the temperature displaying status, that will display the setting temperature.



12 TURBO:

Press this button to activate / deactivate the Turbo function which enables the unit to reach the preset temperature in the shortest time. In COOL mode, the unit will blow strong cooling air at super high fan speed. In HEAT mode, the unit will blow strong heating air at super high fan speed.



13 SLEEP:

Press this button to go into the SLEEP operation mode. Press it again to cancel this function. This function is available in COOL, HEAT (Only for models with heating function) or DRY mode to maintain the most comfortable temperature for you.


14 LIGHT:

Press LIGHT button to turn on the display's light and press this button again to turn off the display's light. If the light is turned on,  is displayed. If the light is turned off,  disappears.

15 Combination of "+" and "-" buttons: About lock

Press "+" and "-" buttons simultaneously to lock or unlock the keypad. If the remote controller is locked,  is displayed. In this case, pressing any button,  blinks three times.

16 Combination of "MODE" and "-" buttons: About switch between Fahrenheit and Centigrade

At unit OFF, press "MODE" and "-" buttons simultaneously to switch between  and .

Replacement of Batteries

1. Remove the battery cover plate from the rear of the remote controller.

(As shown in the figure)


2. Take out the old batteries.

3. Insert two new AAA1.5V dry batteries, and pay attention to the polarity.

4. Reinstall the battery cover plate.

Notes:

- When replacing the batteries, do not use old or different types of batteries. Otherwise, it may cause malfunction.
- If the remote controller will not be used for a long time, please remove batteries to prevent batteries from leaking.
- The operation should be performed in its receiving range.
- It should be kept 1m away from the TV set or stereo sound sets.
- If the remote controller does not operate normally, please take the batteries out and reinsert them after 30 seconds. If it still can't operate properly, replace the batteries.

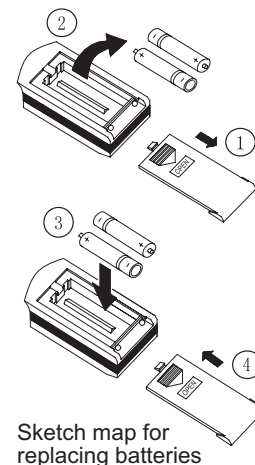

Sketch map for replacing batteries

6.2 Description of Each Control Operation

1. Temperature Parameters

◆ Indoor preset temperature (T_{preset})

◆ Indoor ambient temperature ($T_{\text{amb.}}$)

2. Basic Functions

Once energized, in no case should the compressor be restarted within less than 3 minutes. In the situation that memory function is available, for the first energization, if the compressor is at stop before de-energization, the compressor will be started without a 3-minute lag; if the compressor is in operation before de-energization, the compressor will be started with a 3-minute lag; and once started, the compressor will not be stopped within 6 minutes regardless of changes in room temperature;

(1) Cooling Mode

① Working conditions and process of cooling


When $T_{\text{amb.}} \geq T_{\text{preset}}$, the unit will enter cooling operation, in which case the indoor fan, the outdoor fan and the compressor will work and the indoor fan will run at preset speed.

When $T_{\text{amb.}} \leq T_{\text{preset}} - 2^\circ\text{C}$, the compressor will stop, the outdoor fan will stop with a time lag of 30s, and the indoor fan will run at preset speed.

When $T_{\text{preset}} - 2^\circ\text{C} < T_{\text{amb.}} < T_{\text{preset}} + 1^\circ\text{C}$, the unit will remain at its previous state.

Under this mode, the four-way valve will be de-energized and temperature can be set within a range from 16 to 30°C .

If the compressor is shut down for some reason, the indoor fan and the swing device will operate at original state.

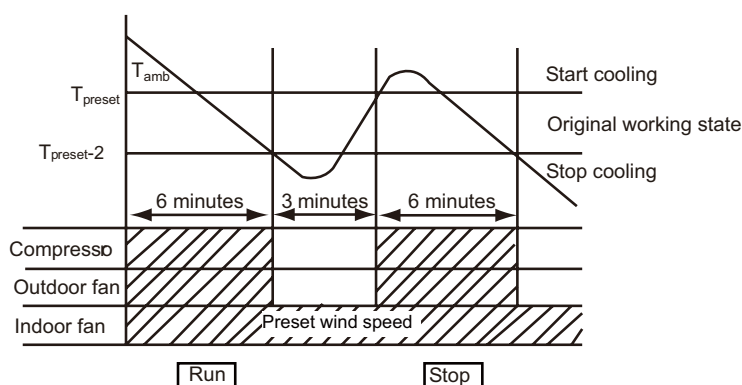

② Protection

◆ Antifreeze protection

Under cooling and dehumidifying mode, 6 minutes after the compressor is started:

If $T_{\text{evap}} \leq 2^\circ\text{C}$, the compressor will operate at reduced frequency.

If $T_{\text{evap}} \leq -1^\circ\text{C}$ is detected for durative 3 minutes, the compressor will stop, and after 30 seconds, the outdoor fan will stop; and under cooling mode, the indoor fan and the swing motor will remain at the original state.

If $T_{\text{evap.}} \geq 6^\circ\text{C}$ and the compressor has remained at OFF for at least 3 minutes, the compressor will resume its original operation state.

◆ Total current up and frequency down protection

If $I_{\text{total}} \leq A$, frequency rise will be allowed; if $I_{\text{total}} \geq B$, frequency rise will not be allowed; if $I_{\text{total}} \geq C$, the compressor will run at reduced frequency; and if $I_{\text{total}} \geq D$, the compressor will stop and the outdoor fan will stop with a time lag of 30s.

(2) Dehumidifying Mode

① Working conditions and process of dehumidifying

If $T_{\text{amb}} > T_{\text{preset}}$, the unit will enter cooling and dehumidifying mode, in which case the compressor and the outdoor fan will operate and the indoor fan will run at low speed.

If $T_{\text{preset}} - 2^\circ\text{C} \leq T_{\text{amb}} \leq T_{\text{preset}}$, the compressor remains at its original operation state.

If $T_{\text{amb.}} < T_{\text{preset}} - 2^\circ\text{C}$, the compressor will stop, the outdoor fan will stop with a time lag of 30s, and the indoor fan will operate at low speed.

② Protection

Protection is the same as that under the cooling mode.

(3) Heating Mode

① Working conditions and process of heating

If $T_{amb} \leq T_{preset} + 2\text{ }^{\circ}\text{C}$, the unit enters heating mode, in which case the four-way valve, the compressor and the outdoor fan will operate simultaneously, and the indoor fan will run at preset speed in the condition of preset cold air prevention.

If $T_{amb} \geq T_{preset} + 5\text{ }^{\circ}\text{C}$, the compressor will stop, the outdoor fan will stop with a time lag of 30s, and the indoor fan will stop after 60-second blow at low speed

If $T_{preset} + 2\text{ }^{\circ}\text{C} < T_{amb} < T_{preset} + 5\text{ }^{\circ}\text{C}$, the unit will maintain its original operating status.

Under this mode, the four-way valve is energized and temperature can be set within a range of 16 - 30 $^{\circ}\text{C}$. The operating symbol, the heating symbol and preset temperature are revealed on the display.

② Condition and process of defrost

When duration of successive heating operation is more than 45 minutes, or accumulated heating time more than 90 minutes, and one of the following conditions is reached, the unit will enter the defrost mode after 3 minutes.

(1). $T_{outdoor\ ambient} > 5\text{ }^{\circ}\text{C}$, $T_{outdoor\ tube} \leq -2\text{ }^{\circ}\text{C}$;

(2) $-2\text{ }^{\circ}\text{C} \leq T_{outdoor\ ambient} < 5\text{ }^{\circ}\text{C}$, $T_{outdoor\ tube} \leq -6\text{ }^{\circ}\text{C}$;

(3) $-5\text{ }^{\circ}\text{C} \leq T_{outdoor\ ambient} < -2\text{ }^{\circ}\text{C}$, $T_{outdoor\ tube} \leq -10\text{ }^{\circ}\text{C}$;

(4) $-10\text{ }^{\circ}\text{C} \leq T_{outdoor\ ambient} < -5\text{ }^{\circ}\text{C}$, $T_{outdoor\ tube} \leq (T_{outdoor\ ambient} - 6)\text{ }^{\circ}\text{C}$.

At that time, the indoor fan stops and the compressor stops, and after 30 seconds the outer fan will stop, and then after 30 seconds, the four-way valve will stop. After 30 seconds, the compressor is initiated for raising the frequency to defrost frequency.

When the compressor has operated under defrost mode for 7.5 minutes, or $T_{B\ outdoor\ amb} < -10\text{ }^{\circ}\text{C}$, $T_{outdoor\ tube} \leq (T_{outdoor\ amb} - 4)\text{ }^{\circ}\text{C}$, the compressor will be converted to 53Hz operation. After 30 seconds, the compressor will stop. And after another 30 seconds, the four-way valve will be opened, and after 60 seconds, the compressor and the outer fan will be started, the indoor fan will run under preset cold air prevention conditions, and H1 will be displayed at temperature display area on the display panel. Defrost frequency is 70Hz.

③ Protection

◆ Cold air prevention

The unit is started under heating mode (the compressor is ON):

① In the case of $T_{indoor\ amb.} < 24\text{ }^{\circ}\text{C}$: if $T_{tube} \leq 40\text{ }^{\circ}\text{C}$ and the indoor fan is at stop state, the indoor fan will begin to run at low speed with a time lag of 2 minutes. Within 2 minutes, if $T_{tube} > 40\text{ }^{\circ}\text{C}$, the indoor fan also will run at low speed; and after 1-minute operation at low speed, the indoor fan will be converted to operation at preset speed. Within 1-minute low speed operation or 2-minute non-operation, if $T_{tube} > 42\text{ }^{\circ}\text{C}$, the fan will run at present speed.

② In the case of $T_{indoor\ amb.} \geq 24\text{ }^{\circ}\text{C}$: if $T_{tube} \leq 42\text{ }^{\circ}\text{C}$, the indoor fan will run at low speed, and after one minute, the indoor fan will be converted to preset speed. Within one-minute low speed operation, if $T_{tube} > 42\text{ }^{\circ}\text{C}$, the indoor fan will be converted to preset speed.

Note: $T_{indoor\ amb.}$ indicated in ① and ② refers to, under initially heating mode, the indoor ambient temperature before the command to start the compressor is performed according to the program, or after the unit is withdrawn from defrost, the indoor ambient temperature before the defrost symbol is cleared.

◆ Total current up and frequency down protection

If the total current $I_{total} \leq W$, frequency rise will be allowed; if $I_{total} \geq X$, frequency rise will not be allowed; if $I_{total} \geq Y$, the compressor will run at reduced frequency; and if $I_{total} \geq Z$, the compressor will stop and the outdoor fan will stop with a time lag of 30s.

(4) Fan Mode

Under the mode, the indoor fan will run at preset speed and the compressor, the outdoor fan, the four-way valve and the electric heater will stop.

Under the mode, temperature can be set within a range of 16 - 30 $^{\circ}\text{C}$.

(5) AUTO Mode

① Working conditions and process of AUTO mode

a. When $T_{ambient} \geq 26\text{ }^{\circ}\text{C}$, the unit will operate in Cool mode. The set temperature is 25 $^{\circ}\text{C}$.

b. When $T_{ambient} \leq 22\text{ }^{\circ}\text{C}$, the heat pump unit will operate in Heat mode., set temperature be 20 $^{\circ}\text{C}$; the cooling only unit will operate in Fan mode, set temperature be 25;æ.

c. When $23\text{ }^{\circ}\text{C} \leq T_{ambient} \leq 25\text{ }^{\circ}\text{C}$, the unit will operate in the previous state. If it is energized for the first time, it will operate in Fan mode.

d. When the unit operates in Auto mode, the compressor frequency during cooling operation is the same with that of heating mode.

② Protection

- a. In cooling operation, protection is the same as that under the cooling mode;
- b. In heating operation, protection is the same as that under the heating mode;
- c. When ambient temperature changes, operation mode will be converted preferentially. Once started, the compressor will remain unchanged for at least 6 minutes.

(6) Common Protection Functions and Fault Display under COOL, HEAT, DRY and AUTO Modes

① Overload protection

T tube: measured temperature of outdoor heat exchanger under cooling mode; and measured temperature of indoor heat exchanger under heating mode.

1) Cooling overload

- a. If $T_{tube} \leq 52^{\circ}\text{C}$, the unit will return to its original operation state.
- b. If $T_{tube} \geq 55^{\circ}\text{C}$, frequency rise is not allowed.
- c. If $T_{tube} \geq 58^{\circ}\text{C}$, the compressor will run at reduced frequency.
- d. If $T_{tube} \geq 62^{\circ}\text{C}$, the compressor will stop and the indoor fan will run at preset speed.

2) Heating overload

- a. If $T_{tube} \leq 52^{\circ}\text{C}$, the unit will return to its original operation state.
- b. If $T_{tube} \geq 55^{\circ}\text{C}$, frequency rise is not allowed.
- c. If $T_{tube} \geq 58^{\circ}\text{C}$, the compressor will run at reduced frequency.
- d. If $T_{tube} \geq 62^{\circ}\text{C}$, the compressor will stop and the indoor fan will blow residue heat and then stop.

② Exhaust temperature protection of compressor

If exhaust temperature $\geq 98^{\circ}\text{C}$, frequency is not allowed to rise.

If exhaust temperature $\geq 103^{\circ}\text{C}$, the compressor will run at reduced frequency.

If exhaust temperature $\geq 110^{\circ}\text{C}$, the compressor will stop.

If exhaust temperature $\leq 90^{\circ}\text{C}$ and the compressor has stayed at stop for at least 3 minutes, the compressor will resume its operation.

③ Communication fault

If the unit fails to receive correct signals for durative 3 minutes, communication fault can be justified and the whole system will stop.

④ Module protection

Under module protection mode, the compressor will stop. When the compressor remains at stop for at least 3 minutes, the compressor will resume its operation. If module protection occurs six times in succession, the compressor will not be started again.

⑤ Overload protection

If temperature sensed by the overload sensor is over 115°C , the compressor will stop and the outdoor fan will stop with a time lag of 30 seconds. If temperature is below 95°C , the overload protection will be relieved.

If voltage on the DC bus is below 150V or over 420V, the compressor will stop and the outdoor fan will stop with a time lag of 30 seconds. When voltage on the DC bus returns to its normal value and the compressor has stayed at stop for at least 3 minutes, the compressor will resume its operation.

⑥ Faults of temperature sensors

Designation of sensors	Faults
Indoor ambient temperature	The sensor is detected to be open-circuited or short-circuited for successive 20 seconds
Indoor tube temperature	The sensor is detected to be open-circuited or short-circuited for successive 20 seconds
Outdoor ambient temperature	The sensor is detected to be open-circuited or short-circuited for successive 30 seconds
Outdoor tube temperature	The sensor is detected to be open-circuited or short-circuited for successive 30 seconds, and no detection is performed within 10 minutes after defrost begins.
Exhaust	After the compressor has operated for 3 minutes, the sensor is detected to be open-circuited or short-circuited for successive 30 seconds.
Overload	After the compressor has operated for 3 minutes, the sensor is detected to be open-circuited or short-circuited for successive 30 seconds.

3. Other Controls

(1) ON/OFF

Press the remote button ON/OFF: the on-off state will be changed once each time you press the button.

(2) Mode Selection

Press the remote button MODE, then select and show in the following ways: AUTO, COOL, DRY, FAN, HEAT, AUTO.

(3) Temperature Setting Option Button

Each time you press the remote button TEMP+ or TEMP-, the setting temperature will be up or down by 1°C . Regulating Range: 16~30°C , the button is useless under the AUTO mode.

(4) Time Switch

You should start and stop the machine according to the setting time by remote control.

(5) SLEEP State Control

- a. When the air conditioner is under the mode of COOL, DRY, and the SLEEP mode has been set well, after the SLEEP state keeps about 1 hour, the pre-setting T will raise 1°C , and it will raise 1°C again after 2 hours, so it raise 2°C in 2 hours, then it will run on at the setting temperature and wind speed.
- b. When the air conditioner is under the mode of HEAT, and the Timer has been set well, after the SLEEP state keeps about 1 hour, the pre-setting T will reduce 1°C , and it will reduce 1°C again after 2 hours, so it reduce 2°C in 2 hours, then it will run on at the setting temperature and wind speed.
- c. The setting temperature keeps the same under the FAN mode and AUTO mode.

(6) Indoor Fan Control

The Indoor Fan can be set as HIGH, MED, LOW by remote control, and the Indoor Fan will be respectively run at high, medium, low speed. It will also be set as AUTO, and the Indoor Fan is as the followings at the automatic wind speed.

Cooling mode: $T_{ring} \geq T_{setting} + 2$, high speed; $T_{setting} - 2 < T_{ring} < T_{setting} + 2$, medium speed; $T_{ring} \leq T_{setting} - 2$, low speed.
Sending wind mode: : $T_{ring} > T_{setting} + 4$, high speed; $T_{setting} + 2 \leq T_{ring} \leq T_{setting} + 4$, medium speed; $T_{ring} < T_{setting} + 2$, low speed.

Moisture removal mode: force to be set as the low speed

Heating mode: $T_{ring} \leq T_{setting} + 1$ high speed; $T_{setting} + 1 < T_{ring} < T_{setting} + 5$, medium speed; $T_{ring} \geq T_{setting} + 5$, low speed.

(7) Buzzer Control


The buzzer will send a “Di” sound when the air conditioner is powered up or received the information sent by the remote control or there is a button input, the single tube cooler doesn’t receive the remote control ON signal under the mode of heating mode.

(8) Auto button

If the controller is on, it will stop by pressing the button, and if the controller is off, it will be automatic running state by pressing the button, swing on and light on, and the main unit will run based on the remote control if there is remote control order.

(9) Up-and-Down Swinging Control

When power on, the up-and-down motor will firstly move the air deflector to 0 counter-clockwise, close the air outlet. After starting the machine, if you don’t set the swinging function, heating mode and auto-heating mode, the up-and-down air deflector will move to D clockwise; under other modes, the up-and-down air deflector will move to L1. If you set the swinging function when you start the machine, then the wind blade will swing between L and D. The air deflector has 7 swinging states: Location L, Location A, Location B, Location C, Location D, Location L to Location D, stop at any location between L-D (the included angle between L~D is the same). The air deflector will be closed at 0 Location, and the swinging is effectual only on condition that setting the swinging order and the inner fan is running. The indoor fan and compressor may get the power when air deflector is on the default location.

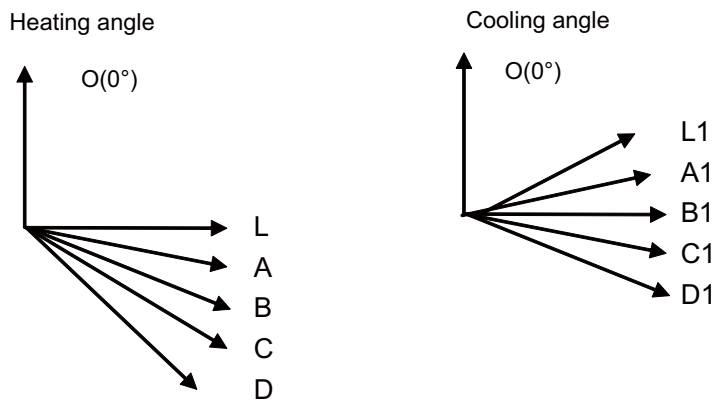

(10) Display**① Operation pattern and mode pattern display**

All the display patterns will display for a time when the power on, the operation indication pattern will display in red under standby status. When the machine is start by remote control, the indication pattern will light and display the current operation mode (the mode light includes: Cooling, heating and dehumidify). If you close the light key, all the display patterns will close.

② Double-8 display

According to the different setting of remote control, the nixie light may display the current temperature (the temperature scope is from 16°C to 30°C) and indoor ambient temperature. The heating and air supply temperature will display 25°C under auto-mode, the temperature will display 18°C under the heating mode, and the temperature will display H1 under the defrosting mode.(If you set the fahrenheit temperature display, the nixie light will display according to fahrenheit temperature)

(11) Protection function and failure display

E2: Freeze-proofing protection E4: Exhausting protection E5: Overcurrent protection

E6: Communication failure H4: Overload protection

F1: Indoor ambient sensor start and short circuit (continuously measured failure in 30S)

F2: Indoor evaporator sensor start and short circuit (continuously measured failure in 30S)

F3: Outdoor ambient sensor start and short circuit (continuously measured failure in 30S)

F4: Outdoor condenser sensor start and short circuit (continuously measured failure in 30S, and don't measure within 10 minutes after defrosted)

F5: Outdoor exhausting sensor start and short circuit (continuously measured failure in 30S after the compressor operated 3 minutes)

H3: Overload protection of compressor H5: Module protection

PH: High-voltage protection PL: Low-voltage protection

P1: Nominal cooling and heating P2: Maximum cooling and heating

P3: Medium cooling and heating P0: Minimum cooling and heating

(12) Drying Function

You may start or stop the drying function under the modes of cooling and dehumidify at the starting status (The modes of automatism, heating and air supply do not have drying function). When you start the drying function, after stop the machine by pressing the switch button, you should keep running the inner fans for 10 minutes under low air damper (The swing will operate as the former status within 10 minutes, and other load is stopped), then stop the entire machine; When you stop the drying function, press the switch button will stop the machine directly. When you start the drying function, operating the drying button will stop the inner fans and close the guide louver.

(13) Memory function when interrupting the power supply

Memory content: mode, swing function, light, set temperature and wind speed. After interrupted the power supply, the machine will start when recovering the power according to the memory content automatically. If the last remote control command has not set the timed function, the system will remember the last remote control command and operate according it. If the last remote control command has set timed function and the power supply is interrupted before the timed time, the system will remember the timed function of the last remote control command, the timed time will recounted form power on. If the last remote control command has set timed function, the time is out and the system is start or stop according to the set time when the power supply is interrupted, the system will remember the operation status before the power supply was interrupted, and do not carry out timed action; The timed clock will not remembered.

7. Installation Manual

7.1 Notices for Installation

Caution

- 1.The unit should be installed only by authorized service center according to local or government regulations and in compliance with this manual.
- 2.Before installing, please contact with local authorized maintenance center. If the unit is not installed by the authorized service center, the malfunction may not be solved due to inconvenient contact between the user and the service personnel.
- 3.When removing the unit to the other place, please firstly contact with the local authorized service center.
- 4.Warning: Before obtaining access to terminals, all supply circuits must be disconnected.
- 5.For appliances with type Y attachment, the instructions shall contain the substance of the following. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 6.The appliance must be positioned so that the plug is accessible.
- 7.The temperature of refrigerant line will be high; please keep the interconnection cable away from the copper tube.
- 8.The instructions shall state the substance of the following:

This appliance is not intended for use by persons(including children)with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

7.1.1 Installation Site Instructions

Proper installation site is vital for correct and efficient operation of the unit. Avoid the following sites where:

- strong heat sources, vapours, flammable gas or volatile liquids are emitted.
- high-frequency electro-magnetic waves are generated by radio equipment, welders and medical equipment.
- salt-laden air prevails (such as close to coastal areas).
- the air is contaminated with industrial vapours and oils.
- the air contains sulphures gas such as in hot spring zones.
- corrosion or poor air quality exists.

7.1.2 Installation Site of Indoor Unit

- 1.The air inlet and outlet should be away from the obstructions. Ensure the air can be blown through the whole room.
- 2.Select a site where the condensate can be easily drained out, and where it is easily connected to outdoor unit.
- 3.Select a place where it is out of reach of children.
- 4.Select a place where the wall is strong enough to withstand the full weight and vibration of the unit.
- 5.Be sure to leave enough space to allow access for routine maintenance. The installation site should be 250cm or more above the floor.
- 6.Select a place about 1m or more away from TV set or any other electric appliance.
- 7.Select a place where the filter can be easily taken out.
- 8.Make sure that the indoor unit is installed in accordance with installation dimension instructions.
- 9.Do not use the unit in the laundry or by swimming pool etc.

7.1.3 Installation Site of Outdoor Unit

- 1.Select a site where noise and outflow air emitted by the unit will not annoy neighbors.
- 2.S elect a site where there is sufficient ventilation.
- 3.Select a site where there is no obstruction blocking the inlet and outlet.
- 4.The site should be able to withstand the full weight and vibration.
- 5.Select a dry place, but do not expose the unit to direct sunlight or strong wind.
- 6.Make sure that the outdoor unit is installed in accordance with the installation instructions,and is convenient for maintenance and repair.
- 7.The height difference between indoor and outdoor units is within A m, and the length of the connecting tubing does not exceed B m.

Model	A	B
09K	10	15
12K	10	20

- 8.Select a place where it is out of reach of children.
- 9.Select a place where the unit does not have negative impact on pedestrians or on the city.

7.1.4 Safety Precautions for Electric Appliances

1. A dedicated power supply circuit should be used in accordance with local electrical safety regulations.
2. Don't drag the power cord with excessive force.
3. The unit should be reliably earthed and connected to an exclusive earth device by the professionals.
4. The air switch must have the functions of magnetic tripping and heat tripping to prevent short circuit and overload.
5. The minimum distance between the unit and combustive surface is 1.5m.
6. The appliance shall be installed in accordance with national wiring regulations.
7. An all-pole disconnection switch with a contact separation of at least 3mm in all poles should be connected in fixed wiring.


Note:

- **Make sure the live wire, neutral wire and earth wire in the family power socket are properly connected. There should be reliable circuit in the diagram.**
- **Inadequate or incorrect electrical connections may cause electric shock or fire.**


7.1.5 Earthing Requirements

1. Air conditioner is type I electric appliance. Please ensure that the unit is reliably earthed.
2. The yellow-green wire in air conditioner is the earthing wire which can not be used for other purposes. Improper earthing may cause electric shock.
3. The earth resistance should accord to the national criterion.
4. The power must have reliable earthing terminal. Please do not connect the earthing wire with the following:
 - ① Water pipe
 - ② Gas pipe
 - ③ Contamination pipe
 - ④ Other place that professional personnel consider is unreliable
5. The model and rated values of fuses should accord with the silk print on fuse cover or related PCB.

7.2 Installation Drawing

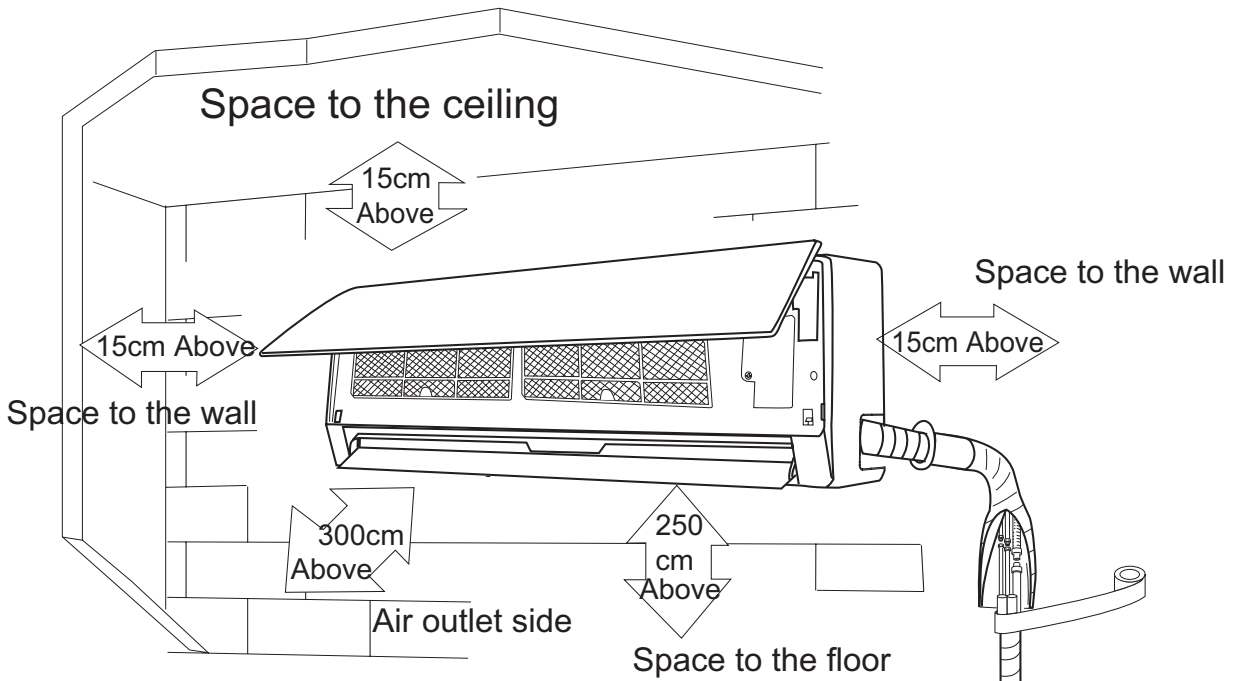

- The dimensions of the space necessary for correct installation of the appliance including the minimum permissible distances to adjacent structures

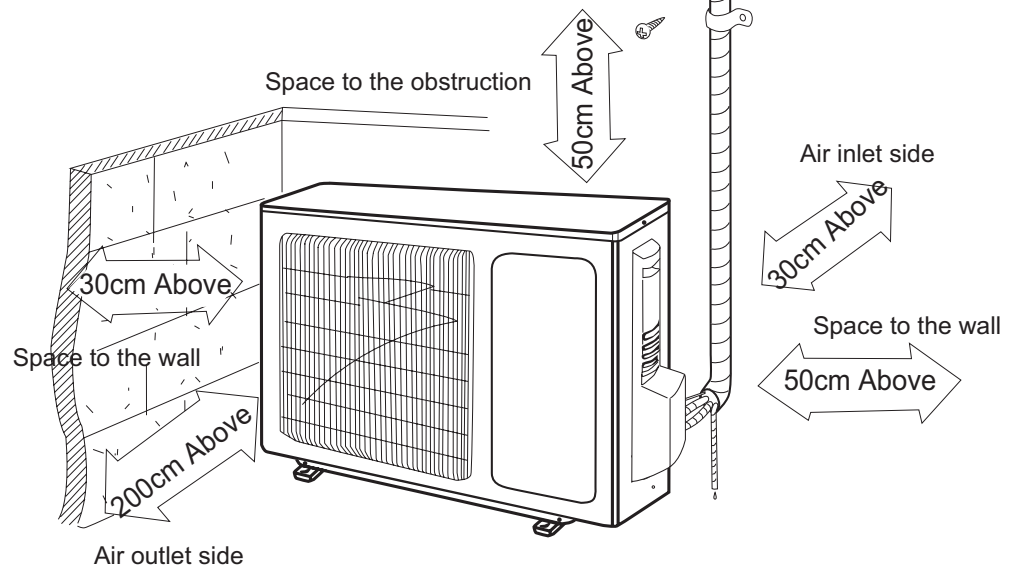

7.3 Install Indoor Unit

7.3.1 Installation of Mounting Plate

1. Mounting plate should be installed horizontally. As the water tray's outlet for the indoor unit is two-way type, during installation, the indoor unit should slightly slant to water tray's outlet for smooth drainage of condensate.
2. Fix the mounting plate on the wall with screws.
3. Be sure that the mounting plate has been fixed firmly enough to withstand about 60 kg. Meanwhile, the weight should be evenly shared by each screw.


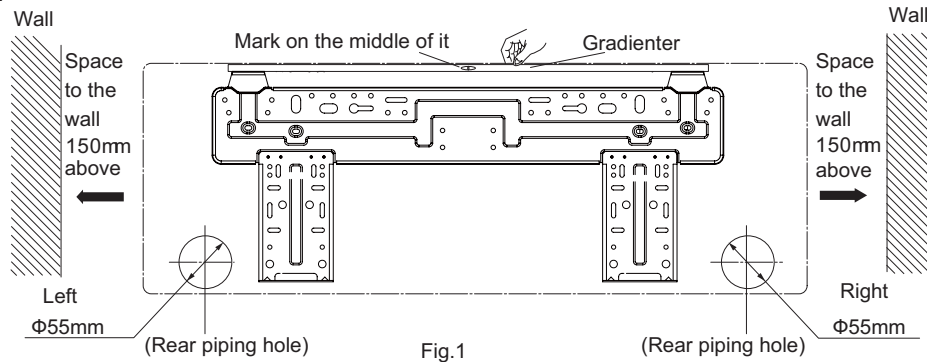


Fig.1

7.3.2 Drill Piping Hole

1. Slant the piping hole (Φ55) on the wall slightly downward to the outdoor side.
2. Insert the piping-hole sleeve into the hole to prevent the connection piping and wiring from being damaged when passing through the hole.

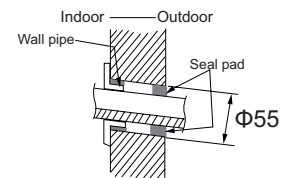


7.3.3 Installation of Drain Hose

1. Connect the drain hose to the outlet pipe of the indoor unit. Bind the joint with rubber belt.
2. Put the drain hose into insulating tube.

3. Wrap the insulating tube with wide rubber belt to prevent the shift of insulating tube. Slant the drain hose downward slightly for smooth drainage of condensate.

Note: The insulating tube should be connected reliably with the sleeve outside the outlet pipe. The drain hose should be slanted downward slightly, without distortion, bulge or fluctuation. Do not put the outlet in the water.

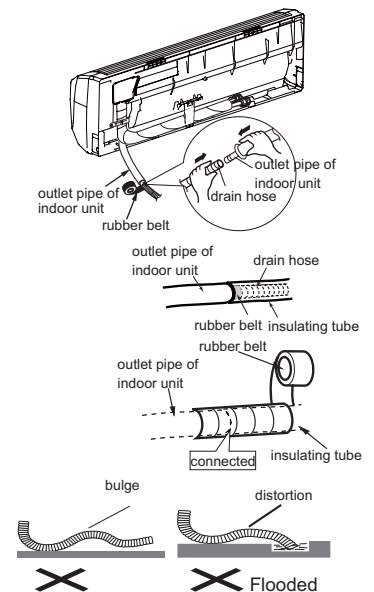

7.3.4 Connecting Indoor and Outdoor Electric Wires

1. Open the front panel.
2. Remove the wiring cover. Connect and fix the power connection cord to the terminal board as shown in Fig 2.
3. Make the power connection cord pass through the hole at the back of indoor unit.
4. Reinstall the cord anchorage and wiring cover.
5. Reinstall the front panel.

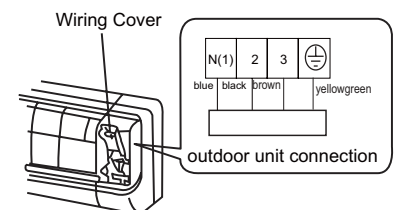


Fig.2




NOTE:

All wires between indoor and outdoor units must be connected by the qualified electric contractor.

- Electric wires must be connected correctly. Improper connection may cause malfunction.
- Tighten the terminal screws securely.
- After tightening the screws, pull the wire slightly to confirm whether it's firm or not.
- Make sure that the electric connections are earthed properly to prevent electric shock.
- Make sure that all wiring connections are secure and the cover plates are reinstalled properly. Poor installation may cause fire or electric shock.

7.3.5 Installation of Indoor Unit


- The piping can be output from right, right rear, left or left rear.
1. When routing the piping and wiring from the left or right side of indoor unit, cut off the tailings from the chassis when necessary (As shown in Fig.3)
 - (1) Cut off tailing 1 when routing the wiring only;
 - (2) Cut off tailing 1 and tailing 2 when routing both the wiring and piping.
 2. Take out the piping from body case; wrap the piping, power cords, drain hose with the tape and then make them pass through the piping hole. (As shown in Fig.4)
 3. Hang the mounting slots of the indoor unit on the upper hooks of the mounting plate and check if it is firm enough. (As shown in Fig.5)
 4. The installation site should be 250cm or more above the floor.

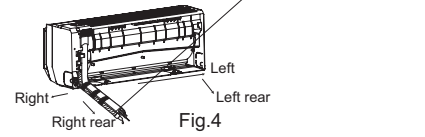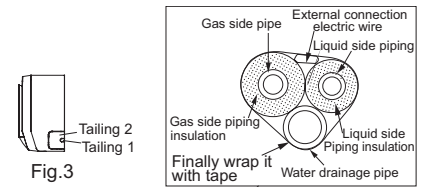

7.3.6 Installation of Connection Pipe

1. Align the center of the pipe flare with the related valve.
2. Screw in the flare nut by hand and then tighten the nut with spanner and torque wrench by referring to the following:

Tube diameter	Tightening torque, approximate(N·m)
Φ6.35(1/4")	14~18N·m(140-180kgf.cm)
Φ9.52(3/8")	34~42N·m(340-420kgf.cm)
Φ12.7(1/2")	49~61N·m(490-610kgf.cm)
Φ15.88(5/8")	68~82N·m(680-820kgf.cm)

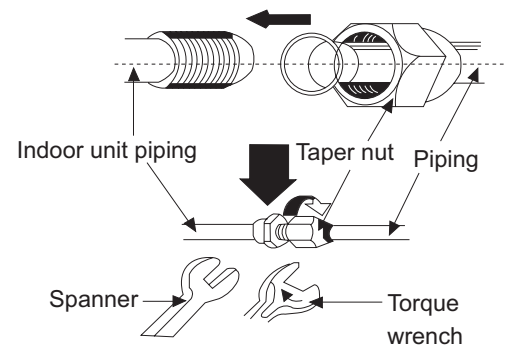

NOTE: Connect the connection pipe to indoor unit at first and then to outdoor unit. Handle piping bending with care. Do not damage the connection pipe. Ensure that the joint nut is tightened firmly, otherwise, it may cause leakage.


7.4 Install Outdoor Unit

7.4.1 Electric Wiring

1. Remove the handle on the right side plate of outdoor unit.
2. Take off wire cord anchorage. Connect and fix the power connection cord to the terminal board. Wiring should fit that of indoor unit.
3. Fix the power connection cord with wire clamps and then connect the corresponding connector.
4. Confirm if the wire has been fixed properly.
5. Reinstall the handle.

NOTE:

- Incorrect wiring may cause malfunction of spare part.
 - After the wire has been fixed, ensure there is free space between the connection and fixing places on the lead wire.
- Schematic diagram being reference only, please refer to real product for authentic information.

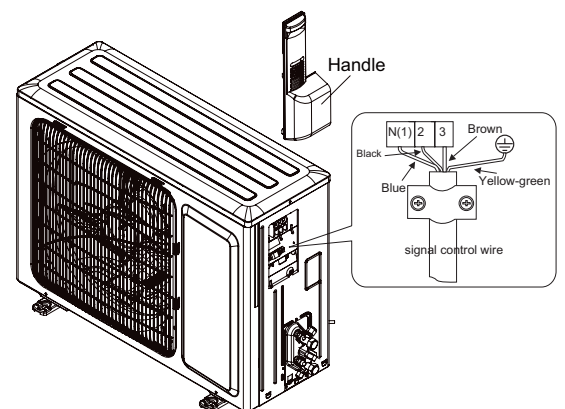

7.4.2 Air Purging and Leakage Test

1. Connect charging hose of manifold valve to charge end of low pressure valve (both high/low pressure valves must be tightly shut). Connect joint of charging hose to vacuum pump.
3. Fully open the handle of Lo manifold valve.
4. Open the vacuum pump for vacuumization. At the beginning, slightly loosen joint nut of low pressure valve to check if there is air coming inside (If noise of vacuum pump has been changed, the reading of multimeter is 0). Then tighten the nut.
5. Keep vacuuming for more than 15mins and make sure the reading of multi-meter is -1.0×10^5 pa (-76cmHg).
6. Fully open high/low pressure valves.
7. Remove charging hose from charging end of low pressure valve.
8. Tighten lid of low pressure valve. (As shown in Fig.6)



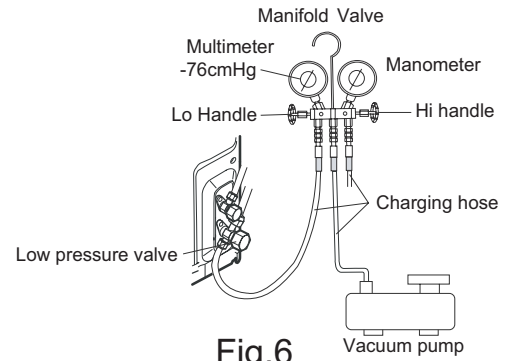


Fig.6

7.4.3 Outdoor Condensate Drainage (only for Heat pump unit)

During heating operation, the condensate and defrosting water should be drained out reliably through the drain hose. Install the outdoor drain connector in a $\Phi 25$ hole on the base plate and attach the drain hose to the connector so that the waste water formed in the outdoor unit can be drained out. The hole diameter 25 must be plugged. Whether to plug other holes will be determined by the dealers according to actual conditions.

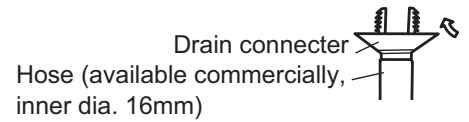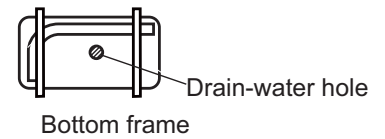

7.5 Check after Installation and Operation Test

7.5.1 Check after Installation

Items to be checked	Possible malfunction
Has it been fixed firmly?	The unit may drop, shake or emit noise.
Have you done the refrigerant leakage test?	It may cause insufficient cooling(heating) capacity
Is heat insulation sufficient?	It may cause condensation and dripping.
Is water drainage satisfactory?	It may cause condensation and dripping.
Is the voltage in accordance with the rated voltage marked on the nameplate?	It may cause electric malfunction or damage the product.
Is the electric wiring and piping connection installed correctly and securely?	It may cause electric malfunction or damage the part.
Has the unit been connected to a secure earth connection?	It may cause electrical leakage.
Is the power cord specified?	It may cause electric malfunction or damage the part.
Are the inlet and outlet openings blocked?	It may cause insufficient cooling(heating) capacity.
Is the length of connection pipes and refrigerant capacity been recorded?	The refrigerant capacity is not accurate.

7.5.2 Operation Test

1. Before Operation Test

- (1) Do not switch on power before installation is finished completely.
- (2) Electric wiring must be connected correctly and securely.
- (3) Cut-off valves of the connection pipes should be opened.
- (4) All the impurities such as scraps and thums must be cleared from the unit.


2. Operation Test Method

- (1) Switch on power and press "ON/OFF" button on the remote controller to start operation.
- (2) Press MODE button to select the COOL, HEAT (Not available for cooling only unit), FAN to check whether the operation is normal or not.


7.6 Installation and Maintenance of Healthy Filter

7.6.1 Installation of Healthy Filter


1. Lift up the front panel from its two ends, as shown by the arrow direction, and then remove the air filter. (As shown in fig a)

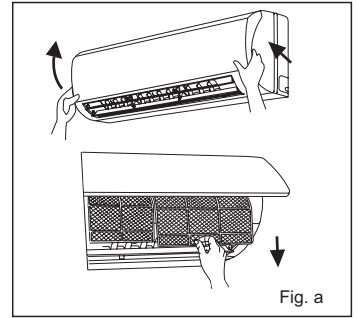

2. Attach the healthy filter onto the air filter. (as shown in fig b)

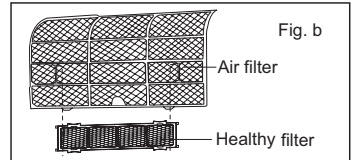

3. Install the air filter properly along the arrow direction in Fig.c, and then close the panel .

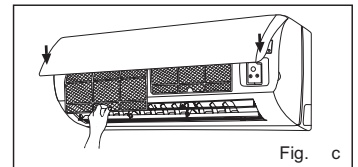

7.6.2 Cleaning and Maintenance

Remove the healthy filter and reinstall it after cleaning according to the installation instruction. Don't use brush or hard things to clean the filter. After cleaning, be sure to dry it in the shade.

7.6.3 Service Life

The general service life for the healthy filter is about one year under normal condition. As for silver ion filter, it is invalid when its surface becomes black (green).

• This supplementary instruction is provided for reference to the unit with healthy filter. If the graphics provided herein is different from the actual product, please refer to the actual product. The quantity of healthy filters is based on the actual delivery.